



Remote Control

The remote control makes it easy for you to control the harman kardon MaestroKitchen 100's most-used functions from anywhere in your kitchen. The remote control's button functions duplicate those of the same-named icons on the unit.

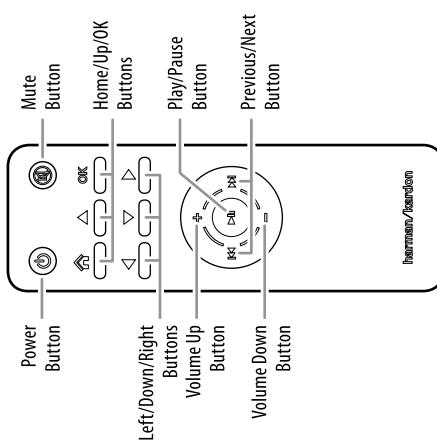

Replacing the battery

If the remote control begins to lose effectiveness (reduced range, inconsistent operation, etc.), replace the battery with an identical type CR2032 as shown below.

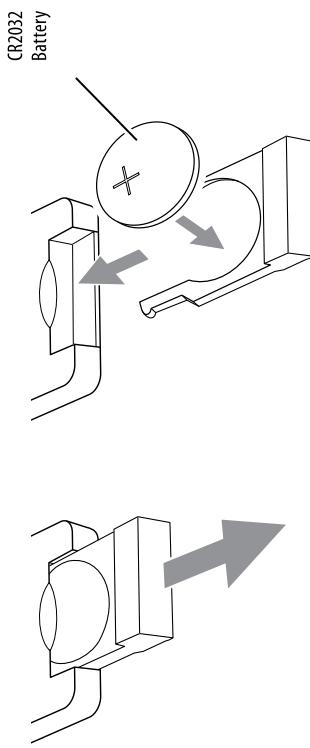

CAUTION: Danger of explosion if the battery is incorrectly replaced. Replace the battery only with the same or an equivalent type.

The remote control communicates with the main unit via radio-frequency energy, so you do not need to aim it at the main unit.