

PChome fly-1  
Skype Wireless USB Handset  
Quick Guide

## Quick Installation Description

### 1. Install and run Skype on your PC


### 2. Install fly-1 driver

- ◆ Plug in Base to an USB port
- ◆ In "Found New Hardware Wizard" select "No, not this time" and click on <Next>
- ◆ Select "Install from a list or specific location" and click on Next to continue
- ◆ Check "Include this location in the search:" and Browse to "Driver folder" included in fly-1's installation package
- ◆ Choose "PChome Fly Loader" (pchomefly.inf) and continue anyway
- ◆ Click Finish to close the wizard. When the above procedures are completed, the PC will find new hardware.
- ◆ In "Found New Hardware Wizard" check "No, not this time" and Click Next to continue.
- ◆ Check "Install the software automatically" and "continue anyway".
- ◆ Click "Finish" to close the wizard. Hardware driver installation complete.

### 3. Install fly-1 application

- ◆ Skype warning window will appear for first time user.
- ◆ Select "Allow this program to use Skype" and click on "OK".

## Quick User's Guide

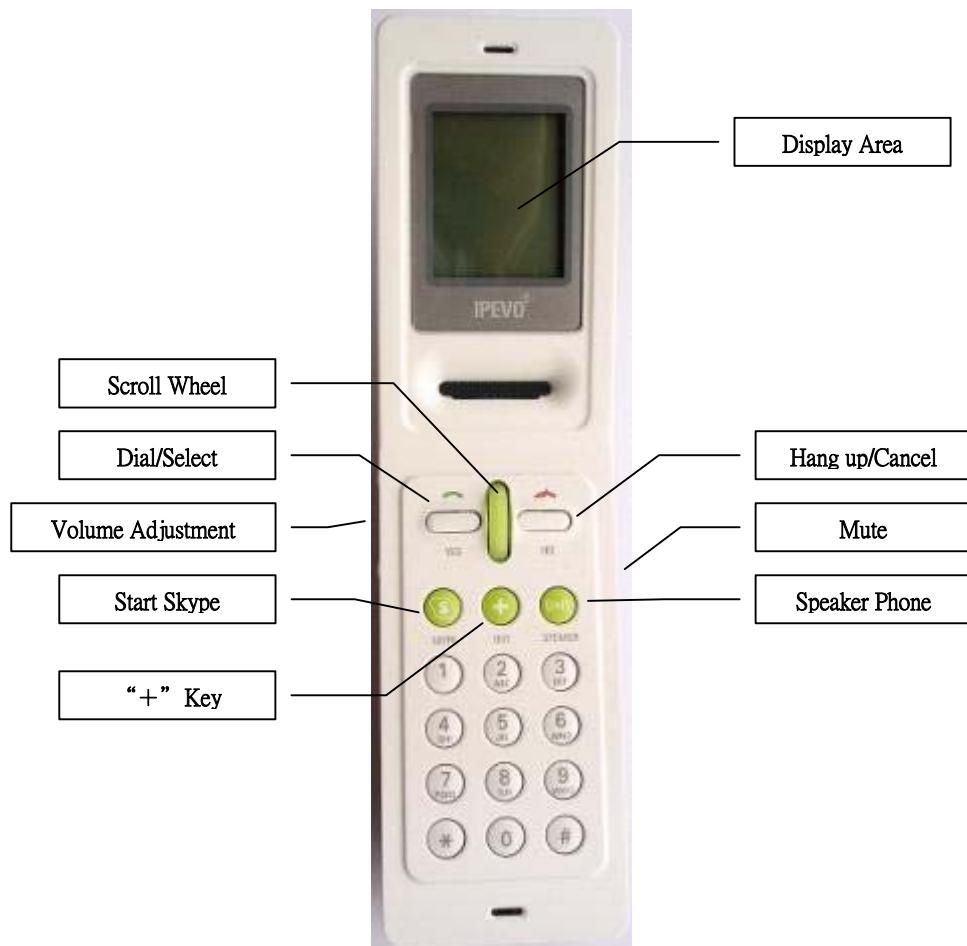

### Display Area

- Displays information needed to operate the handset, including Skype/SkypeOut contact list, Calling status, Call history, and settings.

### Start Skype

Toggles between main menu and Skype contact in the handset.

Brings Skype to focus or toggles between the tabs if Skype window is already in focus.

### Scroll Wheel

Scroll up/down to select items in display area, including Skype/SkypeOut contacts and all other settings.

### YES/NO (Dial/Hang up)

- Scroll up/down until the target contact is highlighted; press YES to make the call.
- When a call is in progress, press NO to hang up.
- Press YES to answer and NO to refuse an incoming call.
- During menu navigation, press YES to select and NO to cancel.
- When inputting a SkypeOut number, press NO to cancel the last number entered.

### Speaker phone

Press the button to switch on/off

### “+”Key

You need to activate the SkypeOut service and make sure you have at least enough Skype Credit for a 1 min call to the country you want to call. You can then simply dial a phone number into the address field and press **Accept/Dial**. To make a SkypeOut call, you must enter the number in the following way (even for local calls): "+" + "**country code**" + "**phone number**". You can also use "00" or "011" before the country code.

Examples (using the country code "1" for calling USA):

+1-408-955-1234

### Quick search on the Contacts

Use the English alphabets on the numeric keypad to search your contacts in alphabetical order.

### Volume Adjustment

This set of button is designed for volume level adjustment. The top button is for volume up; the bottom button is for volume down.

### 8. Mute

Press this button during a conversation to disable the microphone temporarily so the person on the other end cannot listen in. Press the button again to enable the microphone and back to the conversation mode.

### **Battery Charge**

Place the handset on the cradle. The base LED blinks when battery is charging. When charging complete, the LED will stop to blink.

### **Sync. (Pairing)**

Should the handset lose connection with the cradle, place the handset on the cradle and press “Sync” key on the base to reconnect.

## **Federal Communication Commission Interference Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.