



Aqualand Cruiser™

Instructions

For ages 8 and older.

Read and save these instructions.



Dear Florida Pool Customer,

*Thank you for your purchase of a Florida Pool product.
We appreciate your business very much.*

Enjoy your purchase!

Respectfully,

Call 1-800-937-5154 for 24-7 ordering and customer service.

Table of Contents

Warnings	5
Battery Information	6
Battery Requirements	6
Battery Precautions	6
Charging the Battery Pack	7
Installing the Battery Pack	9
Installing the Remote Control Battery	10
General Instructions	12
Features	12
Diagram of Parts	13
Using the Remote Control	15
Using the Movement Controls	17
Troubleshooting	18
Care and Maintenance	19
Specifications	20
Statement of FCC Compliance	21
FCC Label Compliance Statement	22

Warnings



Caution



Please keep this packaging for future reference. This product conforms to Safety requirements of ASTM F963.

WARNING:
CHOKING HAZARD — small parts.
Not for children under 3 years.

- Contains small parts. Keep out of reach of children under 3 years old.
- For ages 8 and older. Children operating the Aqualand Cruiser™ must be supervised by an adult. Use caution near water. Wade only into water that is a safe depth.
- When not in use, remove the Aqualand Cruiser from water. Water may seep into the hull and damage electronic parts.
- To avoid propeller damage when operating the Aqualand Cruiser in water, keep it away from debris and water grasses. Debris can jam the propellers and interrupt operation.

Battery Information

Battery Requirements

- Aqualand Cruiser: 9.6V rechargeable battery pack (two included)
- Remote control: one 9V battery (purchase separately)

Battery Precautions

- Batteries should be installed by adults only.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.
- Dispose of exhausted batteries promptly and properly. Do not burn or bury batteries.
- Use only fresh batteries of the required size and recommended type.
- Do not leave exhausted or weak batteries in the Aqualand Cruiser or the remote control. Batteries can leak chemicals that can damage electronic parts. If the Aqualand Cruiser and the remote control have not been used in a week or more, remove all the batteries.

Charging the Battery Pack

The Aqualand Cruiser uses a 9.6V battery pack (two are included).

Caution! Important:

- Be sure to charge the battery pack for 5 to 6 hours before using the Aqualand Cruiser.
- Do not charge or recharge the battery pack while it is in the Aqualand Cruiser.
- Do not use the battery charger in wet or hot weather conditions.
- Use only the recommended battery pack and charger.
- To avoid damaging the battery pack when you disconnect the battery pack from the charger, do not pull on the connector's wires.
- To safely recharge the battery pack after using the Aqualand Cruiser, allow the unit and battery pack to cool completely before recharging.
- After you charge or recharge the battery, disconnect it from the charger. Overcharging the battery pack may damage it.
- Before operating the Aqualand Cruiser, ensure the battery compartment cover is secure.

Charging the Battery Pack

1. Before charging the battery pack, ensure the Aqualand Cruiser POWER switch is in the OFF position.
2. The battery pack is located under the hood. To remove the battery compartment cover, turn the latches inward.
3. Remove the battery pack completely.
4. Charge the rechargeable battery pack by connecting the battery plug to the AC charger receptor plug. Push until you feel a "click."
5. Plug the AC charger into a 120V AC wall outlet.
6. Charge for 5 to 6 hours. Do not overcharge.
7. When charging, the red LED illuminates. When fully charged the LED turns to green color.

Note: If the Aqualand Cruiser moves slowly or stops moving, change the 9.6V battery pack or recharge it according to the battery charger's instructions. (See Troubleshooting.)

Installing the Battery Pack



Ensure the Aqualand Cruiser battery pack is charged. (See Charging the Battery Pack.)

1. Turn the Aqualand Cruiser **POWER** switch (located on the bottom of the unit) to the **OFF** position.
2. The battery compartment is located under the hood. To remove the battery compartment cover, turn the latches inward.

Installing the Battery Pack

3. Attach the battery pack connector to the Aqualand Cruiser's matching connector. The connectors fit together one way; do not force.
4. Place the battery into the battery compartment first, then carefully put the battery wire and connector on the top of the battery. Then replace the battery compartment cover and secure it by returning the latches to their original position.

Installing the Remote Control Battery

The remote control uses two AA batteries (purchase separately).

1. Prior to battery installation, turn the **POWER** switch to the **OFF** position.
2. To loosen and remove the battery compartment cover, use a Phillips screwdriver (not included). (See Figure 1.)
3. Insert the AA batteries, observing proper +/- polarities as indicated.

Installing the Remote Control Battery



Figure 1



Figure 2

4. To replace and tighten the battery compartment cover, use a Phillips screwdriver (not included). (See Figure 2.)

Note: When the range of the remote control decreases, replace the battery.

General Instructions

Features

- Drives on land and water. (Not for use in a lake, river, stream or the ocean. When operating on land, use on smooth paved surfaces. Not designed for use on grass, carpet, rocky surfaces or sand.)
- Wheels convert into water propellers.
- Working headlights.
- On land, the Aqualand Cruiser is a remote-controlled high-speed racecar.
- Drive it right into a pond or pool – the mechanized rear wheels convert into water propellers.
- Sleek styling with a shiny metallic finish and a rear spoiler.
- Remote control up to 100 foot range allows you to drive the Aqualand Cruiser forward and back, plus turn it in four different directions.

Diagram of Parts

Aqualand Cruiser


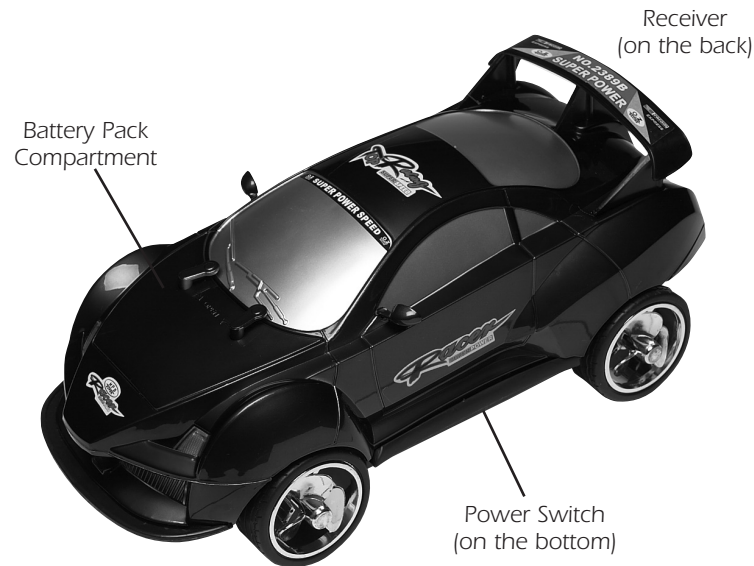 


Diagram of Parts

 Remote Control (27 MHz)

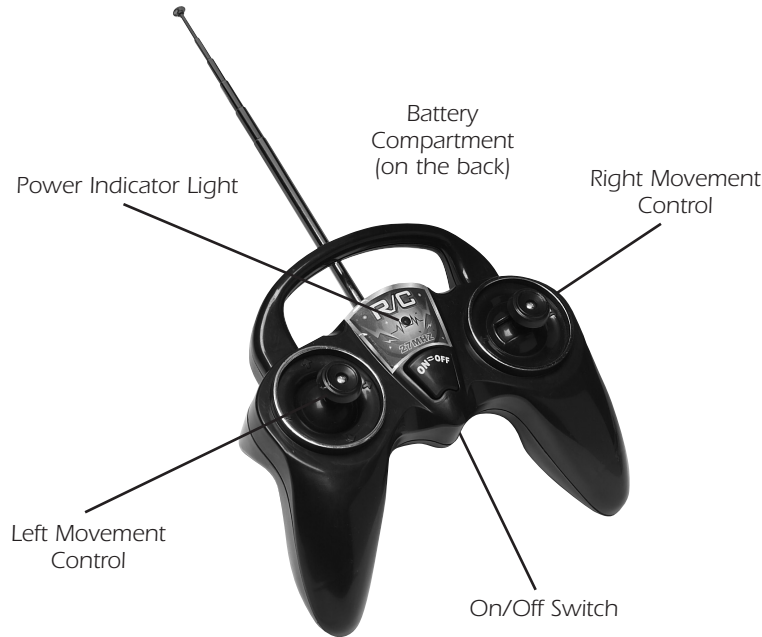


Using the Remote Control

Use the 27MHz remote control to drive the Aqualand Cruiser on land and in water, and to convert it from a car with wheels to a boat with propellers.


1. Ensure fresh batteries have been installed in the remote control and that the Aqualand Cruiser battery pack is charged. (See Battery Installation and Charging the Battery Pack.)
2. To turn the power on, turn the Aqualand Cruiser **POWER** switch to the **ON** position.
3. To turn the remote control on, slide the **ON/OFF** switch to **ON**. The **POWER INDICATOR LIGHT** on the remote control illuminates.
4. Aim the remote control at the receiver on the back of the car.
5. Use the remote control **RIGHT MOVEMENT CONTROL** and **LEFT MOVEMENT CONTROL** to move and steer the Aqualand Cruiser. (See Using the Movement Controls.)
6. When the Aqualand Cruiser is in water, you can convert the wheels into water propellers by pressing the **LAND TO WATER** button. To convert the water propellers back into car wheels, press the **WATER TO LAND** button.

Using the Remote Control

 7. When you are finished driving the Aqualand Cruiser, turn it off by turning the **POWER** switch to **OFF**. Turn off the remote control by switching the **POWER** switch to **OFF**.

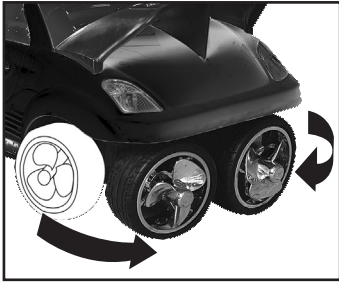

From Land to Water

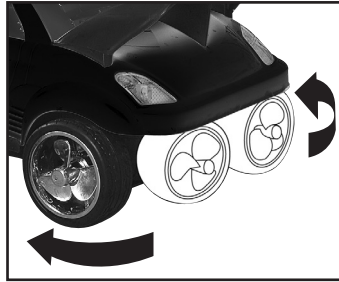 

From Water to Land

Note: Keep the controller dry at all times. It is not intended to be used in water.

Using the Movement Controls

Forward



Reverse



Right Turn



Left Turn



Reverse Right Turn



Reverse Left Turn



Troubleshooting

If the Aqualand Cruiser slows down:

When the Aqualand Cruiser slows down, the battery pack needs recharging. If the Aqualand Cruiser is in the water, guide it to shore as soon as possible.

If the Aqualand Cruiser movement stops:

- Ensure the receiver on the main unit is in line of sight with, and less than 100 feet away from, the remote control.
- Ensure the Aqualand Cruiser battery pack is charged. (See Charging the Battery Pack.)
- Ensure you have correctly installed one fresh 9V battery in the remote control. (See Battery Installation.)
- Ensure the Aqualand Cruiser **POWER** switch is in the **ON** position. Reset the Aqualand Cruiser by turning the **POWER** switch to **OFF**, then to **ON** again.

Troubleshooting

- When the Aqualand Cruiser is outside the remote control range, it stops operating. To re-establish contact, hold the remote control straight above your head as high as possible while keeping the antenna vertical. If you cannot re-establish contact, move closer to the Aqualand Cruiser.

Caution: If the Aqualand Cruiser is in water, be careful not to wade into deep water or strong current.

If you need to retrieve the Aqualand Cruiser out of water:

Keep radio control range in mind while driving it on a lake, pond or open water. Stand 15 to 20 feet away from the water's edge. To drive your Aqualand Cruiser back for retrieval, walk a few steps toward it while maintaining a safe distance from water's edge.

Care and Maintenance

- Avoid exposing the Aqualand Cruiser and the remote control to extreme temperatures or severe shock.
- Do not tamper with any of the internal components. This will invalidate the warranty and may cause damage.
- Check batteries frequently.

Care and Maintenance

- Ensure batteries are touching their contacts.
- Always replace batteries with fresh alkaline batteries.
- To save batteries, always turn the Aqualand Cruiser and remote control off when not in use.
- Remove batteries from the Aqualand Cruiser and remote when they are not in use.

Specifications

Power Source:

- Aqualand Cruiser: 9.6V rechargeable battery pack (two included)
- Remote control: one 9V battery (purchase separately)

Dimensions (Length x Width x Depth):

Aqualand Cruiser: 13" x 7½" x 5"

Remote control: 5" x 5½" x 2¼"

Statement of FCC Compliance

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Statement of FCC Compliance

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

FCC Label Compliance Statement

FCC ID:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 This product has been tested to the relevant standards and complies with the requirements of the applicable EU directives.

Warranty

What Is Covered

This warranty covers any defects in materials or workmanship, with the exceptions stated below.

How Long Coverage Lasts

This warranty runs for 90 days from the date of original purchase.

What Is Not Covered

This warranty does not cover damage caused by misuse or use other than as intended and described in the product instruction manual, or loss or damage to batteries or removable parts.

What Florida Pool Will Do

Florida Pool will repair any defects in materials or workmanship. In the event repair is not possible, Florida Pool will either replace this product with one of similar features and price, or refund the full purchase price of the product, whichever you prefer.

How to Obtain Service

Return the product and receipt, along with a brief explanation of the problem, to:

Name of Place
Street Address
City, State, Zip code

If you have questions please feel free to contact our customer service representatives at 1-800-937-5154 or by email at

This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state.

Copyright 2005

Florida Pool Inc.
14480 62nd St. N., Clearwater, FL 33760
(727) 531-8914

Due to continuing improvements, actual product may differ slightly from the product described herein.
V1 7/05