

Operation Description

1. Link the EUT to Bluetooth debugging board supplied by the manufactory.
2. Connect the RF output terminal of EUT to the spectrum analyzer or put the EUT into the semi-anechoic chamber according to the test item.
3. Connect the controlling port in the debugging board to PC.
4. Turn on the EUT.
5. Open the Bluetooth controlling software in PC.
6. Set the working mode of Bluetooth function of EUT according to the test requirements.
7. Test as the standard needs.
8. Test complete.
9. Close the controlling software.
10. Turn off the EUT.