



Take your Wii gaming cordless with the Wireless Link from dreamGEAR. The Wireless Link is an adapter for the Wii Nunchuck and Remote that allows you to play with no connecting wires by utilizing a hidden cord storage area and transmitter. The dreamGEAR Wireless Link is designed with 2.4GHz RF wireless technology and has a range of over 13 feet! The dreamGEAR Wireless Link offers up to 30 hours of gameplay on just 2 AAA batteries and is essential for any gamer!

**Package Contents:**  
1 - Wireless Nunchuck Transmitter  
1 - Wireless Remote Receiver

**USING THE WIRELESS LINK**

- 1) Detach the bottom cover of the Wireless Nunchuck Transmitter.
- 2) Insert the Nunchuck into the Wireless Nunchuck Transmitter.
- 3) Reel in the Nunchuck cable by wrapping it around the four pegs.
- 4) Connect the Nunchuck to the Wireless Nunchuck Transmitter.
- 5) Re-attach the bottom cover of the Wireless Nunchuck Transmitter.
- 6) Insert 2 AAA batteries into the Wireless Nunchuck Transmitter according to the diagram inside the battery compartment.
- 7) Connect the Wireless Remote Receiver to the bottom of the Wii Remote.
- 8) Power ON the Wii console.
- 9) Press the LINK button located on the left side of Wireless Nunchuck Transmitter.
- 10) Wait approximately 1 second. The LED will flash indicating a proper sync.

**Note:** When there are 2 or more sets of controllers, pair the Wireless Remote Receiver and Wireless Nunchuck Transmitter one by one. The Wireless Controller Adapter has an auto power system. If there is 8 minutes or more of inactivity, the Wireless System will automatically go into power saving mode.

**Status Indicator**

- Power On = One Flash
- Link = 2 Flashes
- No Link = 5 Flashes

*(If there is no link for 30 seconds, the LED will turn off)*

**Troubleshooting**

**Problem:** The cover does not detach or re-attach properly on the Wireless Nunchuck Adapter.

**Solution:** Make sure there aren't broken parts or anything else hindering proper detachment/re-attachment of the cover.

**Problem:** The Nunchuck won't go in properly or stay secure within the Wireless Nunchuck Transmitter.

**Solution:** Make sure there aren't broken parts or anything else hindering proper insertion. Make sure the Nunchuck is inserted properly into the Wireless Nunchuck Transmitter.

**Problem:** The Wireless Remote Receiver and Wireless Nunchuck Transmitter do not pair properly.

**Solution:** Make sure the batteries are fully charged. Make sure the batteries are properly and securely inserted inside the Wireless Nunchuck Transmitter. Make sure the Wireless Remote Receiver and Wireless Nunchuck Transmitter are securely paired. If they do not pair, turn the console off and on and repeat pairing steps.

**Problem:** The Wireless Nunchuck Transmitter does not work.

**Solution:** Make sure the batteries are fully charged and inserted properly.

**Care & Maintenance**

1. Remove the batteries from the Wireless Link when not in use.
2. Do not expose the Wireless Link components to humidity, moisture, or liquid of any kind.
3. Do not use abrasive cleaners to clean the Wireless Link.
4. Do not expose the Wireless Link components to extremely high or low temperatures.

**FOR TECHNICAL SUPPORT**  
PLEASE CONTACT: 1-877-999-DREAM  
or support@dreamgear.net

**dreamGEAR**  
www.dreamgear.net

**FCC Statement**

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Made in China