

FCC Statement
1. This device complies with Part 15 of the FCC Rules.
Operation is subject to the following
two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received,
including interference that may
cause undesired operation.
2. Changes or modifications not expressly approved by the
party responsible for compliance
could void the user's authority to operate the equipment.

www.exspect.co.uk

nunchuk and remote not included

 **exspect**

OPERATION MANUAL

wireless nunchuk adaptor



What's in the box:-

1 x Wii Nunchuk Transmitter
1 x Wii Remote Receiver

The Wii Wireless Controller Adaptor is using 2.4GHz RF Wireless Technology with distance up to 4 meters of wireless range.

Get up to 30 hours of play time on just 2 x AAA batteries.

Design to transform your original Wii Controller from WIRED to WIRELESS.

No additional software or modification of the Wii hardware to work, simply one time installation and plug and play.

How to use

- 1) Insert 2 x AAA batteries to the Nunchuk Transmitter.
- 2) Open the cover of bottom of the Nunchuk Transmitter.
- 3) Connect the Wii Nunchuk connector to the Nunchuk Transmitter.
- 4) Reel the Wii Nunchuk cable into the cable manages space.
(Please follow the reeling instruction)
- 5) Insert the Wii Nunchuk to the Nunchuk Transmitter.
- 6) Connect the Wii Remote Receiver to the bottom of Wii Remote.

Pairing your Remote and Nunchuk

- 1) Power ON your Wii Console and Remote.
- 2) Press the button at the bottom of Nunchuk Transmitter.
- 3) Approximately 1 second, the Remote Receiver and Nunchuk Transmitter status indicator alternately flashes and red.
- 4) Enjoy your CABLE FREE Wii REMOTE!

Please note

- 1) Please pair one by one when you have 2 sets controller or more.
- 2) The Wii Wireless Controller Adaptor has Auto Power Saving System. The Wireless System will be power off automatically after 8 minutes.

Reeling instruction

