

Bluetooth Rearview Mirror Hands Free Car Kit

Model : MHF-R220BT,MHF-R330BT

The Rearview Mirror Hands Free Car Kit (MHF-R220BT,MHF-R330BT) is a wireless device that allows you to speak over your **Bluetooth** phone without taking your hands off the steering wheel. It is simply connects to your **Bluetooth** phone without any cables or phone holders.

Simply clip the **MHF-R220BT,MHF-R330BT** unit onto the existing rear-view mirror in the car. And you will be able to answer, end, reject, redial, place calls or adjust your speaker volume by the simple push of a button, wherever your phone is in your car.

The **MHF-R220BT,MHF-R330BT** supports voice dialling and allows you to dial your contacts without touching your phone, to allow you to safely concentrate on driving your car.

**Be safe, be free and express yourself through
MHF-R220BT Bluetooth Hands Free Car kit !!!**

Specification

Content

	QTY
Rearview Mirror Hands Free Car kit	1
Microphone	1
Power Adapter Cable	1


Specification

- **Input power** : 9~16V DC(Free Voltage)
- **Normal Current** : > 50mA
- **Maximum Current** : >500mA
- **Fuse** : 250V/2A
- **Indicator** : 1 LED(2 Tone Color Lights)
- **Speaker** : Max. 2W (8ohm)
- **Microphone** : Directional microphone -52dB
- **Noise Cancellation** : up to 12dB

- **Echo Cancellation** : up to 40dB
- **Operating temperature range** : -30°C ~ +85°C
- **Full duplex operation with noise cancellation**
- **Bluetooth specification v1.2 compliant**
- **Supported Profile** : Handsfree Profile, Headset Profile
- **Power Class** : 2dBm Max (Class 2)
- **Carrier Frequency** : 2400MHz~2483.5MHz
- **Built in Flash memory** : 8Mbit

Compatibility: This unit is compatible with most *Bluetooth* equipped cellular phones including Motorola, Sony Ericsson and Nokia, Samsung, LG, Etc.

▼ Additional specification of MHF-R330BT

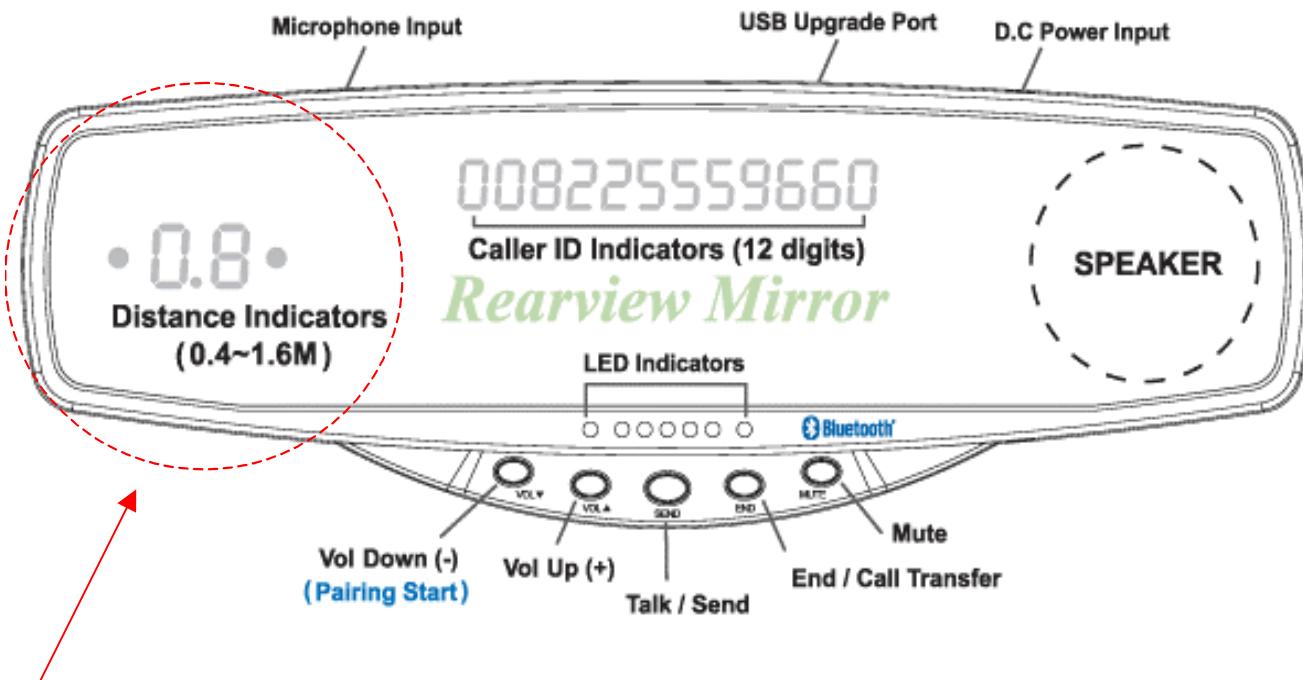

MHF-R330BT is added from MHF-R220BT only this part.(Distance Indicators)

- Display distance(from 0.4M ~ 1.6M) of rear objects by digit on the mirror
- Display location(left or right) of rear objects by twinkling lights on the mirror
- Reversing sensor is only operating when the car moves to rear