

Jabra®

Jabra® CRUISER



Quick start manual

www.jabra.com

A BRAND BY

GN Netcom

© 2009 GN Netcom A/S. All rights reserved. Jabra® is a registered trademark of GN Netcom A/S. All other trademarks included herein are the property of their respective owners. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by GN Netcom A/S is under license. (Design and specifications subject to change without notice).

Made in Korea
TYPE: HFS001



www.jabra.com

NEED MORE HELP?

See www.jabra.com/CRUISER for full user manual or contact your local customer service department. TOLL FREE Customer Contact Details:

EUROPE

Belgique/Belgie	00800 722 52272
Danmark	702 52272
Deutschland	0800 1826756
España	900 984572
France	0800 900325
Italia	800 786532
Luxembourg	00800 722 52272
Nederland	0800 0223039
Norge	800 61272
Österreich	00800 722 52272
Polska	0801 800 550
Portugal	00800 722 52272
Schweiz	00800 722 52272
Suomi	00800 722 52272
Sverige	020792522
United Kingdom	0800 0327026
Россия	+7 495 660 71 51
International	00800 722 52272

 
 
EMAIL ADDRESSES

Deutsch	support.de@jabra.com
English	support.uk@jabra.com
Español	support.es@jabra.com
Français	support.fr@jabra.com
Italiano	support.it@jabra.com
Nederlands	support.nl@jabra.com
Polska	support.pl@jabra.com
Scandinavian	support.no@jabra.com
Россия	support.ru@jabra.com

GN Netcom A/S • Lautrupbjerg 7 • 2750 Ballerup • Denmark

For more information please visit
www.jabra.com

81-03026 A

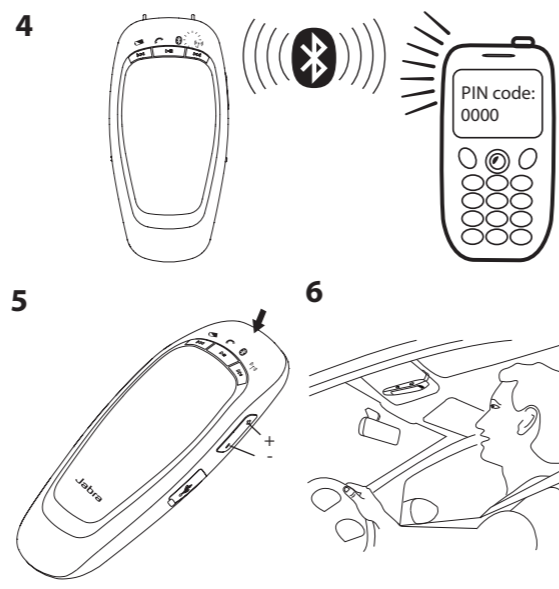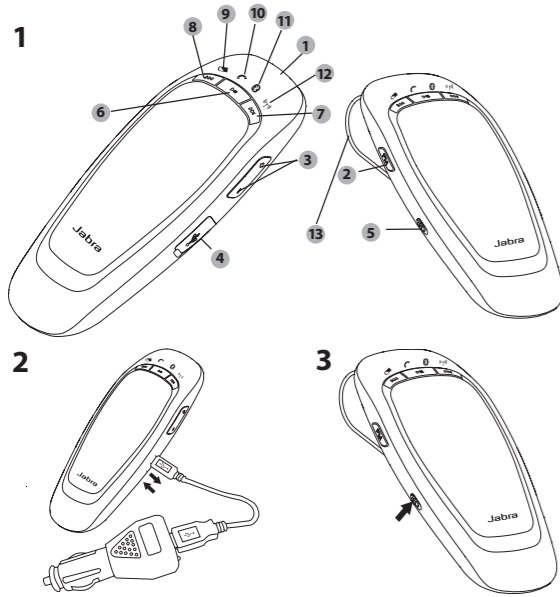

EN NB: Chapter headings and illustrations share the same number to aid understanding.

DK NB: Et kapitels overskrift og illustrationer har det samme nummer for at gøre det lettere at forstå.

FR Remarque : Les mêmes numéros pour les têtes de chapitre et les illustrations sont utilisés pour raison de compréhension.

DE Anmerkung: Kapitelüberschriften und Abbildungen verfügen über die gleiche Nummer, um das Verständnis zu erleichtern.

RU ОБРАТИТЕ ВНИМАНИЕ: для удобства пользования руководством разделы и иллюстрации имеют одинаковую нумерацию.

UA Зверніть увагу: Задля зручності заголовки розділів та ілюстрації мають однакову нумерацію.

NL Opmerking: Voor uw gebruiksgemak komen de nummers van de hoofdstukken en de afbeeldingen overeen.

FI HUOMIO: Lukujen otsikoissa ja kuvissa käytetään samoja numeroita havainnollisuuden lisäämiseksi.

SE OBS: Kapitlens rubriker och illustrationerna följer samma numrering för att göra det lättare att förstå.

IT NOTA: I titoli dei capitoli e le illustrazioni sono numerati in modo identico per agevolare la comprensione.

ES NB: Los encabezados de los capítulos y las ilustraciones comparten la misma numeración para facilitar la comprensión.

CZ Poznámka: Názvy kapitol a ilustrace mají pro lepší pochopení stejná čísla.

PL UWAGA: Aby ułatwić zrozumienie, nagłówki rozdziałów i ilustracje mają te same numery.

GR Σημείωση: Οι επικεφαλίδες κεφαλαίων και οι εικόνες χρησιμοποιούν τον ίδιο αριθμό, για καλύτερη κατανόηση.

TR Not: Kolay anlaşılması için bölüm başlıklarının ve resimlerinin numaraları aynıdır.

HU Megjegyzés: Az egyértelműség kedvéért a fejezetek címsorainak és ábráinak számozása megegyezik.

RO NB: Titlurile de capitole și ilustrațiile au același număr pentru a facilita înțelegerea.

AR ملاحظة: عناوين الفصول والرسومات التوضيحية المضمنة تتشارك في نفس الرقم للمساعدة على الفهم.

FA تذکر: به منظور کمک به درک و فهم راحت تر، عنوان فصل ها و عکس ها با یک شماره مشخص شده اند.

FCC Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution

Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Compliance Information : This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

 
IMPORTANT NOTE:

FCC RF Radiation Exposure Statement:

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

RF Exposure Statement :

The equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operation in conjunction with any other antenna or transmitter.



EN

 
 
please Note: Before using your new Jabra CRUISER Speakerphone, you must fully charge it and set it up by 'pairing it' with your selected Bluetooth® device.

1. About your Jabra Cruiser SPEAKERPHONE

- 1 Answer/end button
- 2 FM button
- 3 Volume up/volume down button
- 4 Charging socket
- 5 On/off button
- 6 Play/pause/stop button
- 7 Next track
- 8 Previous track
- 9 Battery status icon
- 10 Call status icon
- 11 Connection status icon
- 12 FM status icon
- 13 Visor clip

2. CHARGING your SPEAKERPHONE

Insert charger and remove when fully charged and the Battery status icon turns green.

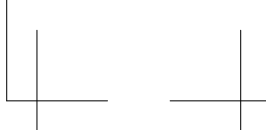

EN

3. TURNING your SPEAKERPHONE ON AND off

Slide the on/off button to turn the speakerphone on or off.

4. PAIRING THE SPEAKERPHONE WITH your PHONE

First time pairing:

Turn the speakerphone on and it will automatically be in pairing mode. The Connection status icon will flash rapidly.

 
 
 
 
 
 
 
Later pairing:

 
- Turn the speakerphone on and press answer/end button for 5 seconds.
- Release the button when the Connection status light flashes rapidly and you hear the voice announcement "pairing mode".
- Activate Bluetooth® on your phone.
- Search for Bluetooth® devices and select Jabra CRUISER.
- Press "OK" on the phone and confirm with PIN code 0000 (4 zeros).

5. USING your SPEAKERPHONE

answer a call

- The name of the incoming caller is announced if phonebook access is supported by your phone. If not, only the number will be announced.
- Tap the answer/end button on your speakerphone to answer a call.

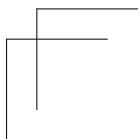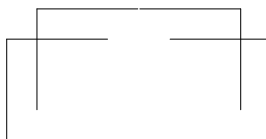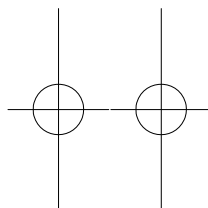



EN

end a call

- Tap the answer/end button on your speakerphone to end an active call.

make a call

- The call will automatically transfer to your speakerphone*. If not tap the answer/end button.

play or pause music

- Tap the play/pause/stop button to play or pause music.

stop music

- Press (approximately 2 seconds) the play/pause/stop button.

Change between music tracks*

- Tap next track or previous track button.

 
 
 
 
adjust sound and volume*

- Tap volume up/volume down button to adjust the volume level. (In FM mode you are not able to adjust volume via Jabra CRUISER – use your car stereo).

sleep mode

- When disconnected from the phone, the speakerphone turns off automatically after 10 minutes. Tap the answer/end button to turn the speakerphone on again.

*Phone dependent

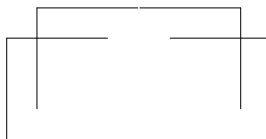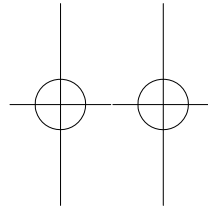

EN

using Fm transmitter

The FM transmitter in the speakerphone allows you to transmit calls and music from your phone to the car stereo.

 
 
 
 
- Connect your phone and your speakerphone.
- Tap the FM button to enter FM mode. The FM status icon will turn solid red and an FM frequency will be announced.
- Manually turn your radio into the same FM frequency and you are now ready to transmit calls or music from your phone to your car stereo.
- The FM transmitter will automatically turn off after 10 minutes if the function is not used.

 
Change Fm frequency

Jabra CRUISER will always transmit calls and music on the most recently used FM frequency. However if sound performance is unsatisfactory it is possible to select a new FM frequency.

- Enter FM mode.
- Press volume up button until “searching” is announced.
- When a new frequency is found and announced, tune your radio manually into the same FM frequency.

A tap on the volume up/volume down button will change the frequency on your Jabra CRUISER by 0.1 MHz.

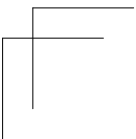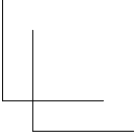



EN

Change voice announcement language

Voice announcements give you a more convenient and safe use of Jabra CRUISER. There are 5 supported languages: English, Spanish, French, German and Russian. Default language is English.

- Enter pairing mode by pressing the answer/end button for 5 seconds.
- Press the FM button for 2 seconds and the current language will be announced.
- Press the volume up/volume down to select a new language.
- Select preferred language and press the FM button for 2 seconds. The new language will be announced.

For Italian, Portuguese, Chinese Mandarine please go to www.jabra.com and download an alternative software version.

 
 
6. PLACE THE JABRA CRUISER IN your vEHICLE

The Jabra CRUISER sits discreetly and conveniently on the sun visor. For optimal sound quality place the Jabra CRUISER right in front of you and speak directly into the speakerphone.

Note: Use of the FM transmitter portion of this product is restricted in some countries. Please check your local legislation.

Calls and music streamed to your FM radio using the FM transmitter can potentially be picked up by another radio in close proximity. This is only relevant when using the FM transmitter mode.

Visit www.jabra.com for full user manual.

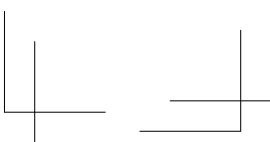

dK

Bemærk: Inden du bruger din nye Jabra CRUISER-højtalertelefon, skal du først lade den helt op og konfigurere den ved at 'parre den' med den Bluetooth® enhed.

1. om DIN JABRA CRUISER-HØJTALERTELEFON

- 1 Besvar/afslut-knap
- 2 FM-knap
- 3 Lydstyrke op/ned-knap
- 4 Opladerstik
- 5 Tænd/sluk-knap
- 6 Afspil/pause/stop-knap
- 7 Næste nummer
- 8 Forrige nummer
- 9 Ikon for batteristatus
- 10 Ikon for opkaldsstatus
- 11 Ikon for forbindelsesstatus
- 12 Ikon for FM-status
- 13 Solskærmclips

2. OPLADNING AF DIN HØJTALERTELEFON

Isæt opladeren og fjern den igen, når batteriet er fuldt opladt og ikonet for batteristatus lyser grønt.

