

 



## 

## Directions

For first use, move" battery saver tabs" from remote unit and main unit. Move "ON-OFF switch" to "ON" position.

Turn switch to "OFF" when not in use, to save battery life.



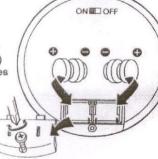

Use 2 AG3 (LR41) button cell batteries for romote unit

## CAUTION:

SAUTION.

Do not mix old and new batteries.

 Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

Do not use rechargeable batteries.

Non-rechargeable batteries are not to be recharged. Use only batteries of the same or equivalent.

type as recommended.

Insert batteries so that polarity is correct. Remove exhausted batteries from toy. Dispose of batteries properly.

Do not bury or burn them.

The installed batteries allow in-store demonstration of this product. It is possible they may become weak or discharged prior to purchase and customer may need to replace them with fresh batteries to ensure proper operation.

Distributed by M&G Pacific, Inc. Vancouver, WA 98665 No. 4126 Made in China This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions: (1)This device may not cause harmful interference, and (2)This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

4126-cb-05-01

## NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV
INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS
EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO
OPERATE THE EQUIPMENT.