


# RC SKIMMER REMOTE CONTROLLER MANUAL

## MODEL NO. D006688


### BATTERY INSTALLATION

1. Slide the battery door out of the controller as shown.
2. Install a 9V battery (included) in the battery compartment as shown. Make sure to follow the correct positive (+) and negative (-) polarities with the corresponding markings inside the battery compartment.
3. Slide the battery door back into place.

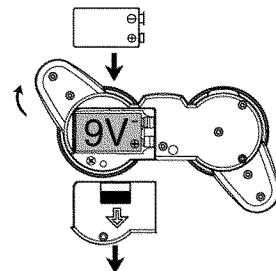


### PREPARATION

Install the antenna into the antenna hole on the controller as shown, pull tip of the antenna to extend. Move the power switch to ON.

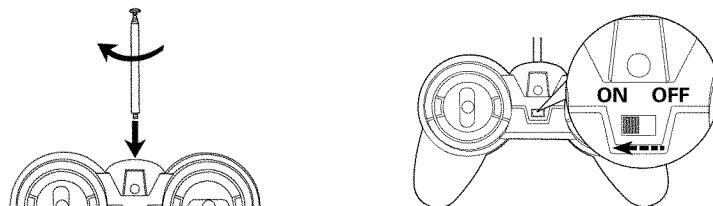

### OPERATION

The left and right joysticks on the controller are used to control the left and right motors on the RC skimmer. When the left joystick is pushed forward, the left motor will run. When the right joystick is pushed forward, the right motor will run. By combination of pushing forward the left and/or right joysticks as shown, the RC skimmer can be controlled to go forward, left turn and right turn.

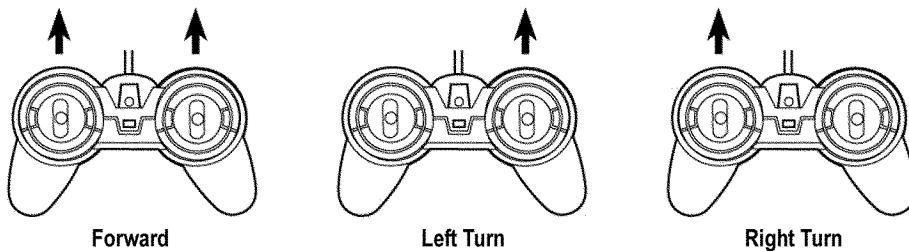

### FCC REQUIREMENTS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### IMPORTANT BATTERY INFORMATION

- Battery installation should be performed by an adult.
- Be careful to install batteries with the correct polarity as indicated.
- Only batteries of the same or equivalent type as recommended are to be used.
- The supply terminals are not to be short-circuited.
- Different types of batteries or new and used batteries are not to be mixed.
- Exhausted batteries are not to be removed from the toy.
- Do not dispose of batteries in fire. Battery may explode or leak.
- Non-rechargeable batteries are not to be charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Never recharge a fully charged battery. Always discharge the battery before charging.