


# Giggle Bug Child Tracker

# User manual


## Giggle bug activation

### Step 1

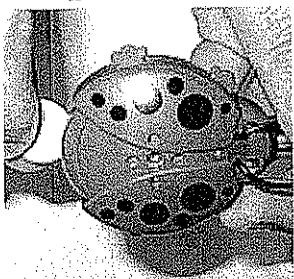


Remove the Giggle and fob from the packaging. Remove the battery tab in the Giggle Bug.

### Step 2

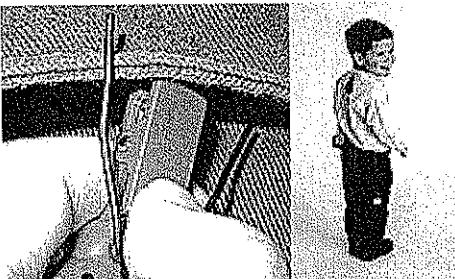

Push down on the Giggle Bug clip and attach to the child's shirt or jacket. (preferably in the middle of the back and out of the child's reach.)


### Step 3

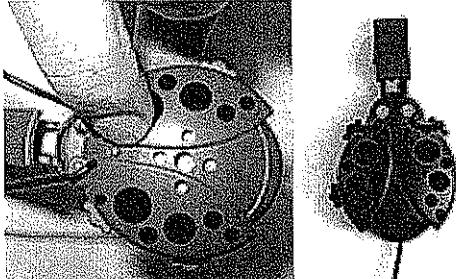

The unit will "beep" 3 times and the eyes will blink confirming "ON" status. The Giggle bug is now ready to use.


## To locate a missing child

### Step 1

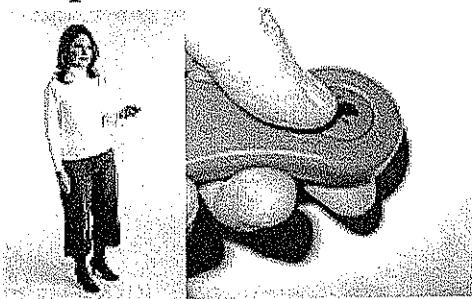


Push button on fob.

### Step 2

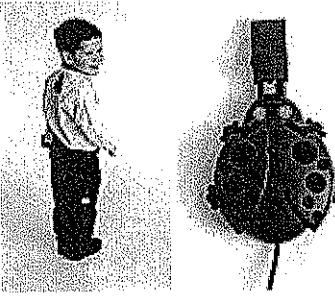


The Giggle bug will "beep" and the lights will flash until the child is located.

### Step 3

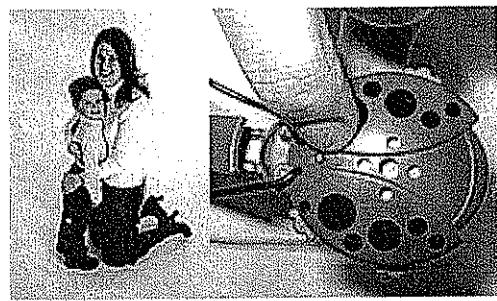


The child is found! To continue use and reset while attached and "beeping", press the button on back of the button.

## Giggle bug de-activation

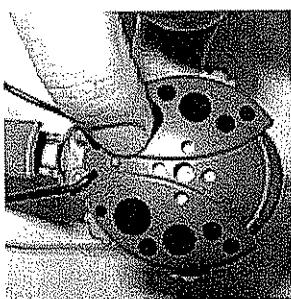

To discontinue use and turn the unit off, press the button on the back of the Giggle bug for 4 seconds. The unit will emit a continual "beep" which confirms that the unit has been turned OFF.

## Giggle dislodged

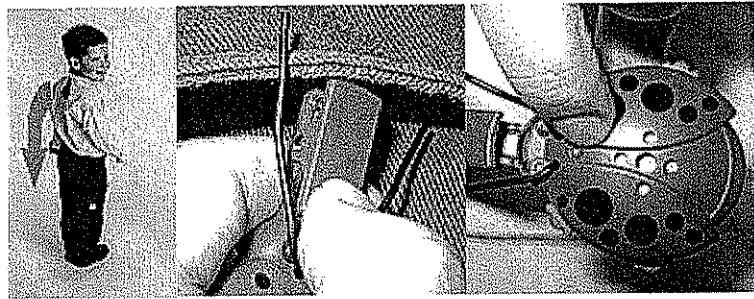


Should the Giggle bug become dislodged from the child's clothing and the clip closed, the unit will "beep" and flash until the clip is opened and the button on the back is pushed to reset.

The Giggle bug can be reset by opening the clip and pressing the button on the bug's back or by re-attaching the Giggle bug to the child's clothing and pressing the button.

# Giggle Bug User Manual


## Giggle Bug Battery Replacement

Step 1

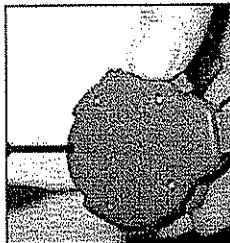


Loosen the screw.

Step 2

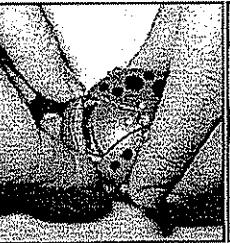

Pull out the battery holder.

Step 3

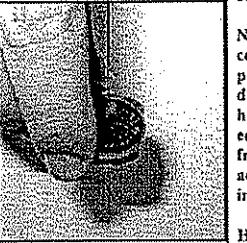

Replace a new battery (CR2032) in the battery holder. Positive side face up.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


## Activator Fob Battery Replacement

Step 1




Loosen the screw.

Step 2

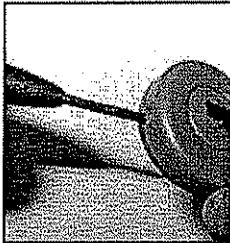


Insert a small slotted drive to the gap indicated.

Step 3

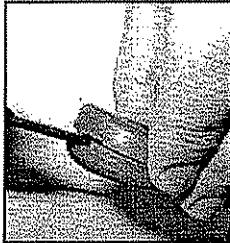

Twist the slotted drive, the case will be opened in one side.

Step 4

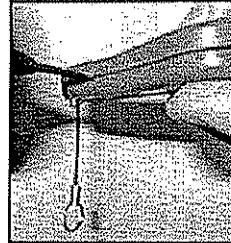


Repeat step 2 & 3 at the other side.

Step 5




The case is opened.

Step 6

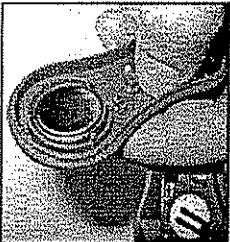


Pull out the circuit board, the battery can be found. Replace a new battery with positive side face

Step 7

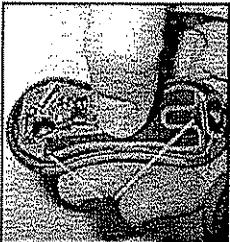

Put back the circuit board with the plastic standoffs indicated in the photo pass through the holes.

Step 8

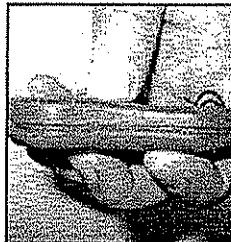

Put back the cover and setup the screw.



Quickly locate your child with the touch of a button!



The Giggle Bug Toddler Tracker works on the same "locating" principle as a cordless phone handset finder.

**Included:**

- (1) **Tamper resistant "Giggle Bug"** - clips easily onto the child's clothing (standard 3V coin cell battery included)
- (1) **Activator fob** - attaches to adult's key ring (standard 3V coin cell battery included)

If the child wanders away, the adult/caregiver triggers the Giggle Bug by pressing the button on the fob. The Giggle Bug unit will emit an 85 decibel "beep" and the eyes will blink until the child is located and the adult de-activates the unit.

**Giggle Bug range is 75-100 feet indoors and 100+ feet outdoors.\*\***

**Instructions for Activation: (3 easy steps)**

Step 1 - Remove the Giggle Bug and fob from the packaging. Remove battery tab.

Step 2 - Push down on the Giggle Bug clip and attach to the child's shirt or jacket (preferably in the middle of the back and out of the child's reach).

Step 3 - Activate the Giggle Bug by pressing the button on the back for 3 seconds. The unit will "beep" 3 times and the eyes will blink confirming "ON" status. The Giggle Bug is now ready for use.

**To Locate a Missing Child:**

Push button on fob. The Giggle Bug will "beep" and the lights will flash until the child is located.

**Instructions for De-activation:**

- **To continue use and reset while attached and "beeping"** press the button on the back of the Giggle Bug.
- **To discontinue use and turn the unit OFF**, press the button on the back of the Giggle Bug for 4 seconds. The unit will emit a continual "beep" which confirms that the unit has been turned OFF.

Should the Giggle Bug become dislodged from the child's clothing and the clip closes, the unit will "beep" and flash until the clip is opened and the button on the back is pushed to reset. The Giggle Bug can be reset by opening the clip and pressing the button on the bug's back or by re-attaching the Giggle Bug to the child's clothing and pressing the button.

**The Giggle Bug is not waterproof and should be kept dry to function properly.**

Giggle Bug Toddler Tracker is a trademark of Intelent Technologies, Inc. PATENT PENDING

\* Low battery power is indicated by a slow, continual "beep" and flashing light

Replacement 3V coin cell batteries (# cr2032) may be purchased at most major retailers.

\*\*Range varies based on environment and obstructions. Radio frequency devices are subject to variability.

Customer Service Hours: 8:30 a.m. - 4:00 p.m. MST Monday - Friday

Phone: 801-273-3985 Fax: 801-273-3951 E-mail: [Info@giggle-bug.com](mailto:Info@giggle-bug.com)

[www.giggle-bug.com](http://www.giggle-bug.com)

**DISCLAIMER:** To insure the safety and security of a child, close and constant adult supervision must be exercised at all times. The Giggle Bug Toddler Tracker is not to be used in lieu of close and constant supervision. The Giggle Bug Toddler Tracker is intended to be used as an aid in locating a lost child, in the event the child becomes separated from a caregiver. The product enhances but does not guarantee the ability to locate a lost child and the manufacturer and distributors of the Giggle Bug Toddler Tracker cannot be held responsible for the loss or injury of a child.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Intelent Technologies, Inc.  
3760 S. Highland Dr. Suite 500  
Salt Lake City, Utah, 84106  
801-273-3985  
801-273-3951 Fax

Made In China  
Batteries Included