



1/32 SCALE RADIO CONTROL RACE-TIN CAR

USER'S MANUAL



© 2006 AULDEY

ITEM NO. LC298610-630

Thank you for purchasing our product - 1:32 Radio Control Race Car. Please read the user manual carefully before using the product, and retain the information for future reference.

 
CAUTION

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult's supervision.
- Only batteries of the same or equivalent type as recommended are to be used;
- Different types of batteries, new or used are not to be mixed.
- Batteries are to be inserted with the correct polarity;
- Exhausted batteries are to be removed from the toy;
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries.
- Do not mix alkaline batteries, standard(carbon-zinc) or rechargeable (Nickelcadmium) batteries.

Specifications and functions

1. Scale: 1:32
2. Movement: Forward, backward, turn left, turn right, stop.
3. Frequencies: 27MHz, 40MHz, 49MHz;
4. Batteries: Two "AA" batteries for main device
5. Speed: 7km/h
6. Operating range: No less than 12m.

Battery compartment cover





To install and remove batteries

1. To install batteries to the controller:
 - a) Open the battery compartment cover, follow the direction of the arrow to push.
 - b) Insert two "AA" batteries according to the correct polarity.
 - c) Pull to close the battery door in the direction of the arrow.
 - d) Fasten the button.
2. To install batteries to the car:
 - a) To release the battery lock, follow the direction of the arrow shown on diagram to push. Insert two "AA" batteries according to the correct polarity.
 - b) Fasten the button.

Methods to operate

 
 
1. Switch the power button on the car to ON and place it on the ground.
2. Push the controller trigger backward, the car will run forward, and vice versa. Turn the controller rudder counter clockwise, the car will go left, and vice versa.
3. To adjust the alignment of the car, use the adjuster at the tip of the bottom of the car. ("R" for right, "L" for left).
4. After finish the game, turn the red switch at the bottom of the car to "OFF" position.
5. Remove the batteries from the car and remote control and store separately.



6. Remove the batteries from the car and remote control and store separately.

To Consumers:

  1. When playing the car indoor, avoid damaging furniture and glass.
2. To avoid accidents happen, please do not run the car in public. Only use this product in safe outdoor environment.
3. When the car is steering while running the car outdoor, please stop immediately.
4. Do not run the car on puddles or sand to avoid circuit damage.
5. Do not fold the antenna incorrectly. Broken antenna may have sharp edges and cause injury.
6. Do not pull the antenna from the car unit. Broken wire may cause further damage.
7. When the car is revolving, do not put your hand close to it, nor put it on the hair or clothing to avoid injury.
8. Do not run the car toward others.
9. Should not drop or bump the car.
10. Store the car in cool places and away from fire.
11. This product is composed of many complicated electronic devices and optional parts, please do not attempt to disassemble or alter this product.
12. When batteries are low in power, the car speed will slow down or out of control. Please change the batteries.
13. When the car is out of control, it may be because of poor contact aroused by distortion of battery compartment springs. Draw out and up the springs to restore them according to the diagram.
14. If the car is under pressure for a long time, the rear twist board may be deformed. Hold the rear motor and turn it to the opposite direction until the car is free.
15. Do not shake the tin vigorously to avoid drop out of the remote control.
16. To ensure longer life of the batteries, please follow below:
 - * Please remove the batteries when not in use.
 - * Do not mix old and new batteries;
 - * Do not expose the car to direct sunlight, the car runs slowly and the life of the batteries will die very soon.



17. Do not shake the tin vigorously to avoid drop out of the remote control.

18. To ensure longer life of the batteries, please follow below:

* Please remove the batteries when not in use.

* Do not mix old and new batteries;

* Do not expose the car to direct sunlight, the car runs slowly and the life of the batteries will die very soon.

Regarding frequency and environment

1. When there is another car of similar radio frequency operating nearby, the radio control may not function.
2. When interfered by other radio-waves, the controller may not function. Try again at other location or time.
3. This product is designed to run on cement and sand polished surface. If run on wax polished surface, the car cannot move on straight line due to poor contact between the tires and road surface and may also spin 180 degree or pivot.

WARNING:

CHOKING HAZARD - Small parts
Not for children under 3 years

Intellectual Property Rights licensed by Daimler Chrysler AG

AULDEY TOY (HK) CO.,LTD.

Tel: (852) 2305 4882

Website: www.auldey.hk

E-mail: auldey_lt@auldey.com



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.