

REFERENCE DRAWING AND INSTRUCTIONS FOR REMOTE CONTROL SENSOR

1. POWER

Select power on or standby

2. LANGUAGE

Press this button to select a language for the instruction, press again for the next language.

3. ANGLE

As for DVD disc with multi-angle. Press the button to view the picture from the different angle. Each time it is pressed, the Picture will switch to another angle.

4. SUBTITLE

Press this button to select the language of the subtitle such as CHINESE, ENGLISH etc. Each time it is pressed, the subtitle language will switch to another one.

5. OSD

Press this button, the TV screen then presents the time information such as time used and time left on the disc.

6. TIME

Press this button to enter the designated time. The player will skip to the designated time to play (it varies according to the disc.)

7. P/N

Press this button to switch the system of output signal of the DVD player (PAL or NTSC)

8. L/R

Press this button to select mono left, mono right stereo, etc.

9. SETUP

Press this button and the setup screen will appear for your setting.

10. ENTER

Press this button to confirm the desired menu.

11. PBC

Press this button and all the content will appear.

12. REV<

Press this button to play fast backward without audio. Each time when pressed, the fast backward speed will change a level. Finally it will return to the normal playback speed.

13. FORWARD >

Press this button to play fast forward without audio. Each time when pressed, the fast forward speed will change a level. Finally it will return to the normal playback speed.

14. TUNING+/-

Press this button to adjust the volume

15. FM/AM

Press this button to choose the radio modes. FM or AM band.

16. T.ST/MO

Press this button to change audio between mono stereo and stereo.

17. PLAY/PAUSE

During the state of stop, pause, slow motion, fast forward or fast reverse, press this button to return to the normal playback. Press this button to pause the player

18. RANDOM

Press this button to random playback.

19. REPEAT

For DVD disc, press this button to repeat the current chapter, press it again to repeat the program of current title, press it a third time to cancel repetition.

20. ZOOM

During playback, press this key to ZOOM the picture. Press it once and the picture will zoom 1.5 time.

You can press it 4 times. The 4th press will return to the normal playback.

21. STOP

Press this button to pre-stop the player. Press PLAY/ENTER button, the DVD player will resume play.

22. SLOW/SCAN

Press this button to play in slow speed without audio, it can slow-play forward or backward. Each time this button is pressed, the slow speed will change once. Finally it will return to the normal playback.

23. MUTE

Press this button to shut off the audio, press it again to activate audio.

24. VOLUME+/-

Press this button to adjust the output volume

25. T. SAVE

Press this button to save to memory, the station number will flash, press this key again to store.

26. NEXT

Press this button to skip to the next chapter/track

27. PREV

Press this button to skip back to the previous selection program.

REFERENCE DRAWING AND INSTRUCTIONS FOR REMOTE CONTROL SENSOR

28. TITLE

Press this button, the selection menu of the DVD disc will appear

29. MENU/VIEW

Press this button to switch the menu mode. For a DVD disc, in the menu off mode, press STOP button first. Press MENU to open the menu during playback.

30. A-B

During the playback, press this button at the point(A) where the repetition will start, press this button again at the point(B) where repetition will end. Press this button a third time to finish repetition.

31. STEP

Press this button to play frame by frame. Each press it will switch the picture to another frame.

32. NUMBER

If the track number is less than 10. Just press a button among 1-10. If the track number is over 10, push +10, once on the remote control and a button among 1-10.

33. OPEN/CLOSE

Press this button once to eject the disc tray, press it again to close the disc tray. Use this button to load a disc or remove a disc.

34. FUNCTION

Press this button to connect FM/AM band.


35. PROG

Press this button to change the playback order. It varies according to different discs.

36. RETURN

As for a non-DVD disc, when menu is on, press it to RETURN to the track list menu during playback


1. POWER	19. REPEAT
2. LANGUAGE	20. ZOOM
3. ANGLE	21. STOP
4. SUBTITLE	22. SLOW/SCAN
5. OSD	23. MUTE
6. TIME	24. VOL+/-
7. P/N	25. T.SAVE
8. L/R	26. NEXT
9. SETUP	27. PREV
10. ENTER	28. TITLE
11. PBC	29. MENU/VIEW
12. REV	30. A-B
13. FWD	31. STEP
14. TUNING+/-	32. NUMBER
15. FM/AM	33. OPEN/CLOSE
16. T.ST/MO	34. FUNCTION
17. PLAY/PAUSE	35. PROGRAMME
18. RANDOM	36. RETURN

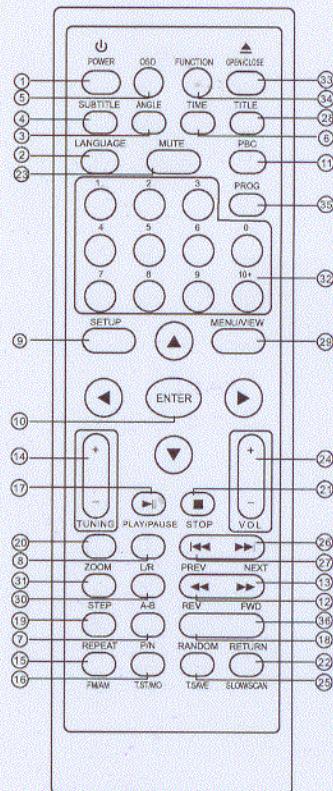


INSTRUCTIONS FOR THE REMOTE CONTROL

First, place the batteries into the remote control. Then you can use remote control to operate the DVD video player

 
- Open the battery compartment.



- Insert the batteries, make sure to match + and - of the batteries to the markings in the battery compartment.

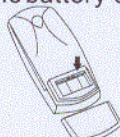

- close the battery cover.

 

NOTE: Improper use of the batteries may cause battery leakage and corrosion. To operate the remote control correctly, follow the instructions below:

Do not insert batteries into the remote control in the wrong direction.

Do not charge, heat, open or short-circuit batteries. Do not throw batteries into a fire.

- Do not leave dead or exhausted batteries in the remote control.
- Do not use different types of batteries together or mix old and new batteries.


For a long period of non-use, remove the batteries to avoid possible damage from battery corrosion.

- If the remote control does not

function correctly, or the operating range becomes reduced, replace all batteries with new ones.

- If battery leakage occurs, wipe the battery liquid from the battery compartment, then insert new batteries.
The batteries can be used for one year in normal conditions.

Operation of the remote control

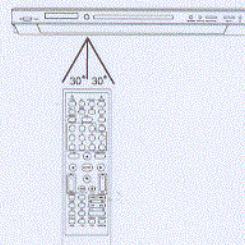


Distance : within 7m from the front of the remote control sensor.

Angle: within 30° in each direction of the front of the remote sensor.
Do not expose the remote sensor of the DVD video player to a strong light source such as direct sunlight or other illumination. If you do so, you may not be able to operate the DVD video player via the remote control.

Notes on the remote control

- Direct the remote control at the remote sensor of the DVD video player.
- Do not drop the remote control.
- Do not put heavy object on top of the remote control.
- Do not spill water or any liquid on the remote control.
- Do not open the remote control.

SYSTEM SETUP

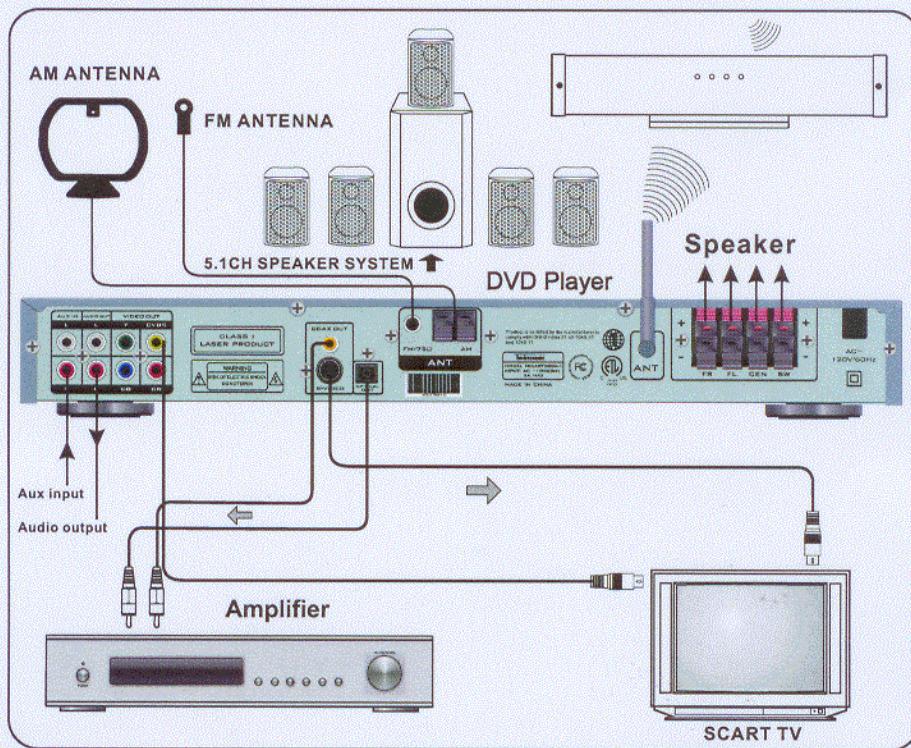

OUTLINE OF AUDIO /VIDEO CONNECTIONS

The receiver is provided with two analogue and two digital audio/video inputs. The receiver shall not be connected to the mains supply before all other system connections have been made.

The DVD player is connected through the digital inputs (optical or coaxial).

The video signal is transmitted to the television set through the SCART connection.

It is also possible to transmit the audio signal from the television set to the receiver through the SCART connection. This will allow you to watch films with Dolby Surround sound if the films are coded.

CONNECTION THROUGH DIGITAL AUDIO/VIDEO CABLE.

The coaxial or optical output for DVD player must be connected with the corresponding digital input on the AV receiver (OPT/COAX). Make sure to use the corresponding video input!

Switch to the corresponding signal source by the INPUT key.

Most DVD player with digital outputs are factory-set at the analogue format.

Make sure that the DVD player has the same configuration under setup.

The video signal may also be transmitted directly from the DVD player to the television set.

CONNECTING SPEAKERS

Speaker connections:

Note: Make sure that the unit is unplugged when you connect the speakers. To connect the speaker cords to the speaker terminal, the colored lever has to be pressed until the terminal opens.

Insert the bare wire into the terminal opening and release the lever. See illustration below.

Mark sure that the terminal closes on the bare wire, not on the plastic insulation. The wires and terminals are all colored for easy connections.

1. Connect the left and right front speakers to the front terminals in the back panel.
2. Connect the sub-woofer speakers to the SW terminal in the back panel.
3. Connect the center speaker to the CEN terminal in the back panel.
4. Simply connect the surround left and right speakers power cord to the AC jack. There is no need to connect the speakers cable, since these speakers are wireless.

Note:

Make sure the speaker wires are connected to the rear panel of the unit as shown. Use only the speakers which are supplied with this unit.

CAUTION:

Ensure that the polarities of the speaker wires RED(+) BLACK(-) are connected to the speaker terminal correctly.

