

SETTING THE SPEAKERS POSITION

Positioning your speakers:


See the illustration below for the positioning of the speakers:

1. Place the front left speaker to the left of the television set as seen from your viewing area. Place the front right speaker to the right of the television set as seen from your viewing area.
2. Place the center speaker on the top of, below, or in front of the television set.
3. Place the surround speakers behind and pointed toward your viewing area. Your viewing area should be between the television set and the surround speakers.

NOTE:

The surround speakers have a small keyhole on the back panel in case you wish to mount them on the wall.

4. Place the sub-woofer on the floor near the front or side wall of your listening area.

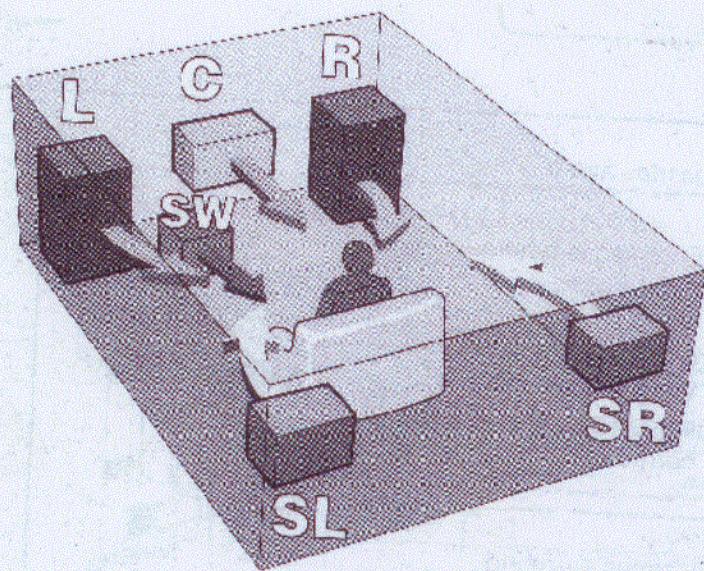

BASIC OPERATIONS

1. PLAY DISCS

- A. Push POWER button on the TV and audiosystem. Push TV/VIDEO button on the TV, select VIDEO mode.
- B. Turn on the power switch on the rear panel. Push POWER button on the front panel or POWER button on the remote control to turn the unit on.
- C. Push OPEN/CLOSE button to open the disc tray and load a disc with the label side up, push OPEN/CLOSE button again to close the disc tray. The unit begins to read the disc.

2. SYSTEM SETTING

The system of TV need to be connected, set the system of the unit to match the TV type.

3. OSD

When playing DVD discs, the TV screen shows the information:

First pressing OSD key:

ROOT MENU 00:00:00

Second pressing OSD key:

TITLE REMAIN

Third pressing OSD key:

CHAPTER ELAPSED:

Forth pressing OSD key:

CHAPTER REMAIN

Fifth pressing OSD key; Display off

4. VOLUME CONTROL

Push VOLUME button on the TV or remote control. The screen shows: MASTER 1.....40 push + button or - button to raise or lower the volume.

5. DVD MENU/PLAY

Some DVD discs have title menus and root menu. Push TITLE/PBC button, the screen shows the title menu. Push MENU button, the screen shows the root menu. Push UP button or DOWN button, the screen shows the last page or next page. Push number button to select directly.

6. SELECT WITH NUMBER BUTTON

Load a disc, push number to select tracks after the unit finishes reading the disc.

A. If the track number is less than 10, just push a button among 1-10.

B. If the track number is over 10, push 10+ once on the remote control and a button among 1-10.

7. SELECT LANGUAGE

You can choose the language according to your choice when playing multi-language DVD.

NOTE:

A. Different discs have different languages.

B. You can use channel function when you play the disc, you can choose mono audio output (left or right channel), stereo or mix-mono

C. You can push LANGUAGE button to choose the language you want when you play multi-language DVD discs.

8. SELECT CHANNELS

You may select the right channel or left channel or stereo from at. Push (CHANNEL) button, the screen shows alternately and select the desired audio channel.

MONO LEFT

MONO RIGHT

STEREO

9. FASTPLAY

When playing disc, you may play it fast forward or fast reverse to find what you need.

A. Push fast forward button. Each time you push the button, the screen shows

2X 4X
8X 16X 32X

PLAY

B. Push fast reverse button. Each time you push the button, the screen shows

2X 4X
8X 16X 32X

PLAY

10. SLOW PLAY

Enjoy slow motion by the following steps. Push SLOW button to play slowly.

1/2X 1/4X 1/8X 1/16X

PLAY

BASIC OPERATIONS

11. REPEAT PLAY

When playing DVD disc, this function can be used to repeatedly play a title, chapter, or disc. Press REPEAT button, the screen shows.

**CHAPTER REPEAT ON
TITLE REPEAT ON
ALL REPEAT ON
REPEAT OFF**

12. SELECT SUBTITLES

When playing a multi-subtitle DVD, You may select one subtitle to show on the screen

- Press PLAY button to select one
- Press SUBTITLE button until the screen shows SUBTITLE OFF
For some discs, subtitles cannot be removed.
Subtitle function is only available for some discs with subtitle Options.


13. SELECT ANGLE

Some discs have images with different screen angles. You may select among them. For example, when you watch a running train, you may select to watch it from the front, the left window or the right window.

Example:

A DVD has four screen angles at your option

- Press ANGLE button to select angle. Options which are shown below:

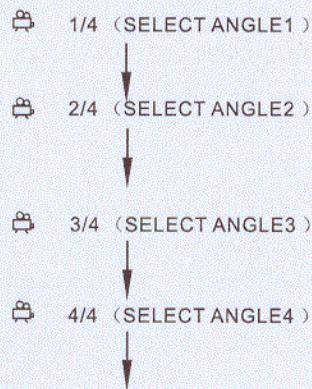

14. TIME SEARCH

You may enter a time, title or chapter number to search on a disc. The unit plays from the point selected.

- On first A-TIME, search a chapter in a title. Example: Search chapter 2 in title 6
 - Press the **◀** or **▶** buttons and move the cursor to illuminate the title number
 - Press button 6, select title 6
 - Press the **◀** or **▶** buttons and move the cursor to illuminate the chapter number. button 2, select chapter 2
 - When the search is complete, the disc is played from chapter 2 title 6
- On second A-TIME, search a time in a title.
Example: search 03:20 in title 6
 - Press the **◀** or **▶** buttons and move the cursor to illuminate the title number
 - Press button 6, select title 6
 - Press the **◀** or **▶** buttons and move the cursor to illuminate the time number, enter 0,0,3,2,0
 - The search is complete, the disc is played from 03:20 in title 6.

C. On third A-TITLE, search a time in a chapter.

Example: search 03:20 in chapter 3

- Press the **◀** or **▶** buttons and move the cursor to illuminate the chapter number.

BASIC OPERATIONS

B. Push button 3 select chapter 3
c. Push the **◀** or **▶** buttons and move the cursor to illuminate the time number enter
0. 0. 3. 2. 0
d. The search is complete, the disc is playing from 03:20 in chapter 3.

15. ZOOM PLAY


This function can be used to enjoy a motion or motionless picture
A. Push ZOOM button when playing, the screen shows:

ZOOM	2	X
ZOOM	3	X
ZOOM	4	X
ZOOM	1/2	X
ZOOM	1/3	X
ZOOM	1/4	X

B. Push UP/DOWN/LEFT/RIGHT button to move the enlarged picture.
C. To resume the picture, push ZOOM until the screen shows ZOOM OFF.

16. PROGRAM PLAY

You may program the tracks on a disc and play them in the programmed order.
A. Push PROGRAM button, the screen shows:

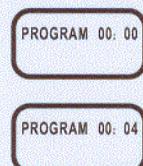

B. Push direction key and input the sequence number that you want to play in order
(First one title, second one is chapter).
C. After the programming is finished, push direction key to select START, push PLAY button to start Playing..
D. Push PROGRAM button to remove program play in stop status.

17. DIGEST PLAY

You may program the tracks on a disc and play them in the programmed order.
1. Push INTRO button when the unit is playing disc, the screen shows:

1. INTRO 2. DISC
3. TRACK 4. EXIT

2. Push direction key to select the digest type.

NOTE:

1. TITLE DIGEST

The player will play 5 seconds each time. Push NUMBER key to select the title. Then push PLAY key, the play will begin to play from the title you selected.

2. CHAPTER DIGEST

The player will display the beginning picture of each chapter in current selected title.


3. TITLE INTERVAL

Scan the story in the disc from 00:00:00 on, the unit will play the disc in 10 minutes interval.

18. PIC-CD DISC

The screen will display as below after the disc is loaded.

BASIC OPERATIONS

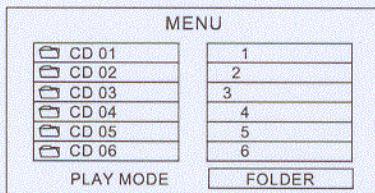

NOTE:

If the number of directory or number of the song is more than 6, you can use the key with four directions key to select the item that you prefer. You can also use NEXT button or PREVIOUS button to change the page number. For the example above, you can use LEFT button or DOWN button to select the playing area, then press UP button or DOWN button to select the item you want to play.

19. SELECT PLAYING MODE (Mp3 or PIC-CD)

Press direction button to select the play mode area, then press direction button to select different play mode, the list of the play modes as following:

- a. Single mode: the player will stop after finished playing the current item
- b. Single repeat mode: repeat the current item
- c. Directory repeat mode: repeat the items in the current directory
- d. Random mode: play items randomly
- e. Directory mode: the player will stop after finished playing the whole directory

B. When playing, push REPEAT button, you can select SINGLE, SINGLE REPEAT, DIRECTORY REPEAT, and DIRECTORY.

20. PLAY PIC-CD BY ZOOM OR ROTATING OPERATING(PIC-CD)

The screen will show ZOOM 100% when you push ZOOM key under playing status, the current picture can be zoomed by push >> or << key, and the screen will also show zoom ratio of the picture (zoom100%, zoom125%, zoom150%, zoom200%, zoom75%, zoom50%). The picture will restore to the normal status if you push PLAY key under the ZOOM status.