

Transmitter part:

1. System power supply :9-VOLT
2. Press the transmitter FRONT,BACK,LEFT,RIGHT key to control Forward,Backward,Left or Right function of CAR.
3. IC TX-2 send out encode signal,enlarged by circuitry and carrier wave,transmitter by antenna transmit circuitry.