

#### **CONTENT**

1.	OVERVIEW	3
1.1	.1 Introduction	3
1.2	.2 Features	3
2.SF	PECIFICATION AND PARAMETER	4
2.1	.1 Limit parameter	4
2.2	.2 OPERATING PARAMETER	4
3 SI	IZE AND PIN DEFINITION	5
4 C	CONNECT TO MCU	6
5 FU	UNCTION DESCRIPTION	7
5.1	.1 FIXED TRANSMISSION	7
5.2	.2 Broadcasting transmission	7
	5.6.1 Indication of UART output	8
	5.6.2 Indication of wireless transmitting	ε
	5.6.3 Configuration procedure of module	
	5.6.4 Notes for AUX	<u>g</u>
6 O	PERATING MODE	10
6.1	.1 Mode switch	10
	.2 Normal mode (mode 0)	
6.3	.3 WAKE-UP MODE (MODE 1)	11
	.4 POWER-SAVING MODE (MODE 2)	
6.5	.5 SLEEP MODE (MODE 3)	12
7 C	COMMAND FORMAT	12
7.1	.1 Default parameters	
7.2	.2 READING OPERATING PARAMETERS	13
7.3	.3 READING VERSION NUMBER	13
7.4	.4 Reset command	13
7.5	.5 PARAMETER SETTING COMMAND	
8. H	HARDWARE DESIGN	15
9 F <i>A</i>	'AQ	16

9.1 COMMUNICATION RANGE IS TOO SHORT	16
9.2 MODULE IS EASY TO DAMAGE	17
9.3 BER(BIT ERROR RATE) IS HIGH	17
10 PRODUCTION GUIDANCE	17
10.1 Reflow soldering temperature	17
10.2 Reflow soldering curve	18
12 ANTENNA GUIDANCE	18
12.1 Antenna recommendation	
12.2 Antenna Selection	19
13 PACKAGE FOR BATCH ORDER	19
REVISION HISTORY	20

#### 1. Overview

#### 1.1 Introduction

E32-A is a wireless serial port module (UART) based on SEMTECH's LLCC68 RF chip. It has multiple transmission modes, working in the 432MHz~435MHz, (default 433MHz), LoRa spread spectrum technology,

LLCC68 features LoRa<sup>TM</sup>, which will bring longer communication distance, and has the advantages of concentrated power density, meanwhile it has a very strong confidentiality. the modules of 20dBm transmitting power adopt industrial grade 32MHz crystal oscillators to ensure the stability and consistency, its precision is lower than the widely adopted 10ppm.E32-A is in stable bulk production and are widely applied in utility meters, IoT renovation, smart home, etc. The modules feature data encryption and compression. The data transmitted in air features randomness.

air Data Rate (Default 2.4kps). The encryption-decryption algorithm makes data interception meaningless. And the data compression enables shorter transmitting time and lower rate of being interfered, which increased the reliability and transmitting efficiency.

#### 1.2 Features

- Communication distance tested is up to 8km
- Maximum transmission power of 100mW, software multi-level adjustable;
- Support the global license-free ISM 433MHz band;
- Support air date rate of 2.4kbps~19.2kbps;
- Support new generation LoRa technology based on LLCC68;
- Low power consumption for battery supplied applications;
- Support 2.3V~5.2V power supply, power supply over 3.3 V can guarantee the best performance;
- Industrial grade standard design, support -40 ~ 85 °C for working over a long time;
- IPEX and stamp hole optional, good for secondary development and integration.

## 1.3 Application

- Home security alarm and remote keyless entry;
- Smart home and industrial sensors;
- Wireless alarm security system;
- Building automation solutions;
- Wireless industrial-grade remote control;
- Health care products;
- Advanced Meter Reading Architecture(AMI);
- Automotive industry applications.

# 2. Specification and parameter

# 2.1 Limit parameter


Main parameter	Performance		Remark
	Min.	Max.	
Power supply (V)	0	5.5	Voltage over 5.5V will cause permanent
	0 3.3		damage to module
Blocking power (dBm)		10	Chances of burn is slim when modules
	-	-10	are used in short distance
Operating temperature (°C)	-40	85	-

# 2.2 Operating parameter

1	Main parameter	Performance			Remark
		Min	Тур.	Max.	Kemark
Oper	rating voltage (V)	2.3	5.0	5.5	≥5.0 V ensures output power
Comm	unication level (V)		3.3	-	For 5V TTL, it may be at risk
		-	3.3		of burning down
Operati	ng temperature (°C)	-40	-	85	Industrial design
Operation	ng frequency (MHz)	432	-	435	Support ISM band
Power	Transmitting current [mA]	-	110	Instant power	Instant power consumption
consumpti				consumption	mount per en
on Receiving current [mA]  Turn-off current [μA]		-	14	-	-
		-	4	-	Software is shut down
Max	Tx power (dBm)	19.0	-	20.0	
Receivin	ng sensitivity (dBm)	-144	-146	-147	Air data rate is 2.4kbps
Aiı	data rate (bps)	2.4k	2.4k	19.2k	Controlled via user's programming

Main parameter	Description	Remark
Distance for reference	5000m	Test condition: clear and open area, antenna gain: 5dBi,
Distance for reference		antenna height: 2.5m, air data rate: 2.4kbps
TX length	58 Byte	Maximum capacity of single package
Buffer	512 Byte	-
Modulation	$LoRa^{TM}$	-
Communication interface	TTL	@3.3V
Package	SMD	-
Connector	1.27mm	-
Size	16*26mm	-


# 3 Size and pin definition

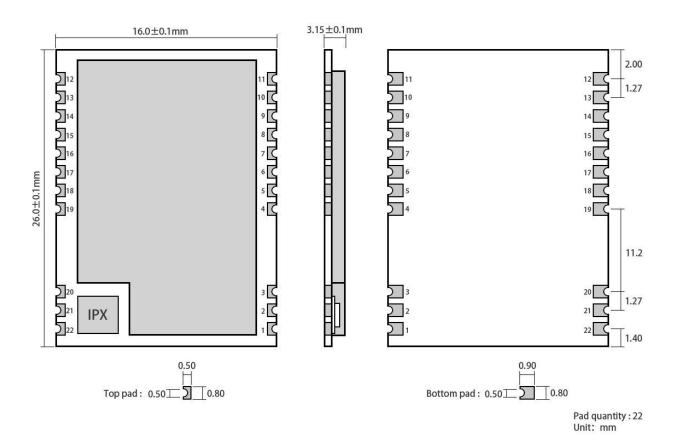

No.	Name	Direction	Features	
1	GND	-	Ground	
2	GND	-	Ground	
3	GND	-	Ground	
4	GND	-	Ground	
	MO	Input	Work with M1 to decide 4 working modes of module (not suspended, if not	
5	M0	(weak pull-up)	used, could be grounded).	
(	M1	Input	Work with M0 to decide 4 working modes of module (not suspended, if not	
6		(weak pull-up)	used, could be grounded).	
7	RXD	Input	TTL UART inputs, connects to external (MCU, PC) TXD output pin.	
8	TXD	Output TTL UART outputs, connects to external RXD (MCU, PC) input pin.		
			Used to indicate the working status of the module;	
9	AUX	AUX Output	The user wakes up the external MCU and outputs low level during power-on	
			self-check initialization; (can be left floating)	
10	VCC	-	Power supply: 2.3~ 5.5V DC	
11	GND	-	Ground	

12	NC	-	Empty Pin
13	GND	-	Ground
14	NC	-	Empty Pin
15	NC	-	Empty Pin
16	NC	-	Empty Pin
17	NC	-	Empty Pin
18	NC	-	Empty Pin
19	GND	-	Ground
20	GND	-	Ground
21	ANT	-	Antenna
22	GND	-	Ground


## 4 Connect to MCU

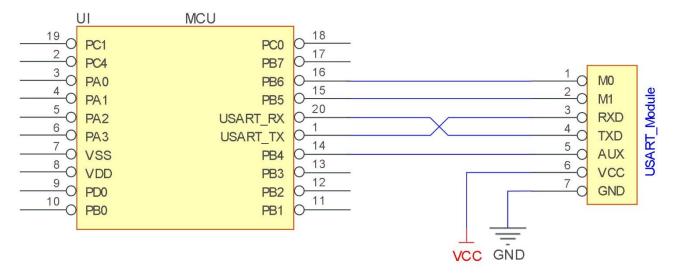


No.	Description (STM8L MCU)
1	The UART module is TTL level.
2	For some MCU works at 5VDC, it may need to add 4-10K pull-up resistor for the TXD & AUX pin.

## 5 Function description

#### 5.1 Fixed transmission

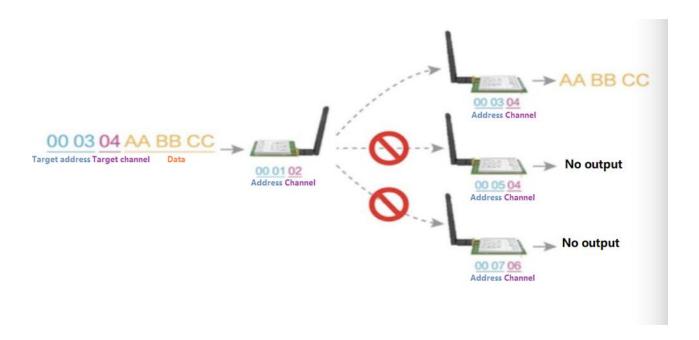

### 5.2 Broadcasting transmission

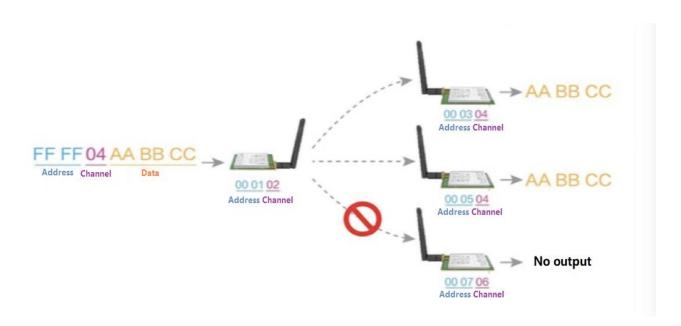

### 5.3 Broadcasting address

- For example: Set the address of module A as 0xFFFF, and the channel as 0x04;
- When module is the transmitter (transparent transmission), all modules under channel 0x04 will receive the data, the

purpose of broadcast is realized.

#### 5.4 Monitor address

- For example: Set the address of module A as 0xFFFF, and the channel as 0x04;
- When module A is the receiver, it can receive the data sent from all modules under channel 0x04, the purpose of monitor is realized.

#### 5.5 Reset


• When the module is powered, AUX outputs low level immediately, conducts hardware self-check and sets the operating mode based on user's parameters. During the process, the AUX remains low level. After the process completed, the AUX outputs high level and starts to work as per the operating mode combined by M1 and M0. Therefore, users need to wait the AUX rising edge as the start of module's normal work.

#### 5.6 AUX description

- AUX Pin can be used as indication for wireless send & receive buffer and self-check.
- It can indicate whether there are data that are not sent yet via wireless way, or whether all wireless data has been sent through UART, or whether the module is still in the process of self-check initialization.

#### 5.6.1 Indication of UART output

To wake up external MCU

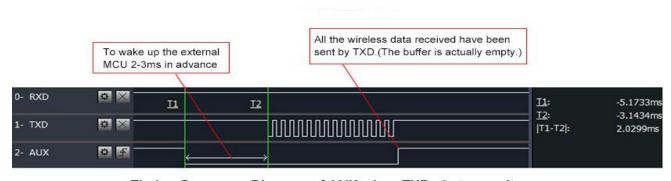

Timing Sequence Diagram of AUX when TXD pin transmits

#### 5.6.2 Indication of wireless transmitting

- Buffer (empty): the internal 512 bytes data in the buffer are written to the RFIC (Auto sub-packaging).
- When AUX=1, the user can input data less than 512 bytes continuously without overflow. Buffer (not empty): when AUX=0, the internal 512 bytes data in the buffer have not been written to the RFIC completely. If the user starts to transmit data at this circumstance, it may cause overtime when the module is waiting for the user data, or

transmitting wireless sub package.

• When AUX = 1, it does not mean that all the UART data of the module have been transmitted already, perhaps the last packet of data is still in transmission.

Subpackage transmitting: the last package of data have been written to the RFIC. When transmission is on, user can continue to input 512 new bytes. (The buffer is actually empty.)

O- RXD

T1: ###

T2: ###

T2: ###

T2- AUX

Timing Sequence Diagram of AUX when RXD pin receives

## 5.6.3 Configuration procedure of module

Only happened when power-on resetting or exiting sleep mode



Timing Sequence Diagram of AUX when self-check

#### 5.6.4 Notes for AUX

No.	Description
	For function 1 & function 2 mentioned above, the priority should be given to the one with low level output, which means if
1	it meets each of any low level output condition, AUX outputs low level, if none of the low level condition is met, AUX
	outputs high level.
	When AUX outputs low level, it means the module is busy & cannot conduct operating mode checking. Within 1ms since
2	AUX outputs high level, the mode switch will be completed.
3	After switching to new operating mode, it will not work in the new mode immediately until AUX rising edge lasts for
3	2ms . If AUX stays on the high level, the operating mode switch can be effected immediately.
4	When the user switches to other operating modes from mode 3 (sleep mode) or it's still in reset process, the module will
4	reset user parameters, during which AUX outputs low level.

## 6 Operating mode

There are four operating modes, which are set by M1 and M0, the details are as follows:

Mode (0-3)	M0	M1	Mode introduction	Remark
0 Normal	0		UART and wireless channel are open, transparent transmission is on	The receiver must work in mode 0 or mode 1
2 wake up	1	0	UART and wireless channel are open, the only difference with mode 0 is that before transmitting data, increasing the wake up code automatically, so that it can awake the receiver under mode 3.	The receiver could be 0,1 or 2
3 power saving	0	1	UART close, wireless is under air-awaken mode, after receiving data, UART open and send data.	transmitter must be mode 1, unable to transmit in this mode.
4 sleep	1	1	sleep mode, receiving parameter setting command is available.	more details on parameter specification.

#### 6.1 Mode switch

- The user can decide the operating mode by the combination of M1 and M0. The two GPIO of MCU can be used to switch mode. After modifying M1 or M0, it will start to work in new mode 1ms later if the module is free. If there are any serial data that are yet to finish wireless transmitting, it will start to work in new mode after the UART transmitting finished. After the module receives the wireless data & transmits the data through serial port, it will start to work in new mode after the transmitting finished. Therefore, the mode-switch is only valid when AUX outputs 1, otherwise it will delay.
- For example, in mode 0 or mode 1, if the user inputs massive data consecutively and switches operating mode at the same time, the mode-switch operation is invalid. New mode checking can only be started after all the user's data process completed. It is recommended to check AUX pin out status and wait 2ms after AUX outputs high level before switching the mode.
- If the module switches from other modes to stand-by mode, it will work in stand-by mode only after all the remained data process completed. The feature can be used to save power consumption. For example, when the transmitter works in mode 0, after the external MCU transmits data "12345", it can switch to sleep mode immediately without waiting the rising edge of the AUX pin, also the user's main MCU will go dormancy immediately. Then the module will transmit all the data through wireless transmission & go dormancy 1ms later automatically, which reduces MCU working time & save power.
- Likewise, this feature can be used in any mode-switch. The module will start to work in new mode within 1ms after completing present mode task, which enables the user to omit the procedure of AUX inquiry and switch mode swiftly. For example, when switching from transmitting mode to receiving mode, the user MCU can go dormancy before mode-switch, using external interrupt function to get AUX change so that the mode-switch can be realized.
- This operation is very flexible and efficient. It is totally designed on the basis of the user MCU's convenience, at the

same time the work load and power consumption of the whole system have been reduced and the efficiency of whole system is largely improved.

## 6.2 Normal mode (mode 0)

	When M1 = 0 & M0 = 0, module works in mode 0
Transmitting	The module can receive the user data via serial port, and transmit wireless data package of 58 bytes. When the data inputted by user is up to 58 byte, the module will start wireless transmission. During which the user can input data continuously for transmission bytes are less than 58 bytes, the module will wait 3-byte time and treat it as data termination unless continuous data inputted by user. Then the module will transmit all the data through wireless channel.  When the module receives the first data packet from user, the AUX outputs low level.  After all the data are transmitted into RF chip and transmission start, AUX outputs high level.  At this time, it means that the last wireless data package transmission is started, which enables the user to input another 512 bytes continuously. The data package transmitted from the module working in mode 0 can only be received by the module working in mode 0 or 1.
Receiving	The wireless receiving function of the module is on, the data packet transmitted from the module working in mode 0 & mode 1 can be received.  After the data packet is received, the AUX outputs low level, 5ms later the module starts to transmit wireless data through serial port TXD pin.  After all the wireless data have been transmitted via serial port, the AUX outputs high level.

# 6.3 Wake-up mode (mode 1)

	When M1 = 0 & M0 = 1, module works in mode 1
Transmitting	The condition of data packet transmission & AUX function is the same as mode 0. The only difference is that the module will add preamble code before each data packet automatically. The preamble code length depends on the wake-up time set in the user parameters. The purpose of the preamble code is waking up the receiving module works in mode 2. Therefore, the data package transmitted from mode 1 can be received by mode 0, model and mode 2.
Receiving	The same as that in mode 0.

## 6.4 Power-saving mode (mode 2)

	When M1 = 1 & M0 = 0, module works in mode 2
Transmitting	UART is closed, the module cannot receive any serial port data from outside MCU.  Hence the function of wireless transmission is not available for the module working in this mode.

Receiving	In mode 2, it is required the data transmitter works in mode 1.  The wireless module monitors the preamble code at regular time.  Once it gets the preamble code, it will remain as receiving status and waiting for the completion of receiving the entire valid data package.  Then the AUX outputs low level, 5ms later the serial port is open to transmit received wireless data through TXD. Finally, AUX outputs high level after process completed.  The wireless module stays in "power-saving – monitoring" working status (polling).  By setting different wake-up time, the module will have different receiving response delay (2s in maximum) and average power consumption (30uA in minimum).  The user needs to achieve a balance between communication delay time & average power consumption.
-----------	---

# 6.5 Sleep mode (mode 3)

	When M1=1, M0=1, module works in mode 3
Transmitting	N/A
Receiving	N/A
Parameter setting	This mode can be used for parameter setting. It uses serial port 9600 & 8N1 to set module working parameters through specific instruction format. (pls refer to parameters setting for details)
Notes	When the mode changes from stand-by mode to others, the module will reset its parameters, during which the AUX keeps low level and then outputs high level after reset completed. It is recommended to check the AUX rising edge for user.

## 7 Command format

In sleep mode (Mode 3: M1=1, M0=1), it supports below instructions on list.

#### (Only support 9600 and 8N1 format when setting)

No.	Instruction format	Illustration
1	C0+working parameters	C0 + 5 bytes working parameters are sent in hexadecimal format. 6 bytes in total and must be sent in succession, ( Save the parameters when power-down ).
2	C1+C1+C1	( Save the parameters when power-down )
3	C2+working parameters	Three C1 are sent in hexadecimal format. The module returns the saved parameters and must be sent in succession.
4	C3+C3+C3	C2 + 5 bytes working parameters are sent in hexadecimal format. 6 bytes in total and must be sent in succession. ( Do not save the parameters when power-down )
5 C4+C4+C4		Three C3 are sent in hexadecimal format. The module returns the version information and they must be sent in succession.

## 7.1 Default parameters

type		Default parameter values: : C0 00 00 1A 17 44											
Model	Frequency	Address	Channel	Channel Air data rate Baud rate Par			Transmitting power						
E32-A	433MHz	0x0000	0x17	2.4kbps	9600	8N1	100mW						

# 7.2 Reading operating parameters

Instruction format	Description
C1+C1+C1	In sleep mode (M0=1, M1=1), User gives the module instruction (HEX format): C1 C1 C1, Module returns the present configuration parameters. For example, C0 00 00 1A 17 44.

# 7.3 Reading version number

Instruction format	Description
C3+C3+C3	In sleep mode (M0=1, M1=1), User gives the module instruction (HEX format): C3 C3 C3, Module returns its present version number, for example C3 32 xx yy. the second bytes means frequency. 32 here means the frequency is 433MHZ, 38 means frequency is 470MHz, 45 means frequency is; 868MHz, 44 means the frequency is 915 MHz, 46 means the frequency is 170MHz; xx is the version number and yy refers to the other module features.

## 7.4 Reset command

Instruction format	Description
C4+C4+C4	In sleep mode (M0=1, M1=1), User gives the module instruction (HEX format): C4 C4 C4, the module resets for one time. During the reset process, the module will conduct self-check, AUX outputs low level. After reset completing, the AUX outputs high level, then the module starts to work regularly which the working mode can be switched or be given another instruction.

# 7.5 Parameter setting command

No.	Item			Description	Remark				
0	HEAD	Fix 0xC0	or 0xC2, i	t means this frame data is control command	<ul> <li>Must be 0xC0 or 0xC2</li> <li>C0: Save the parameters when power-down</li> <li>C2: Do not save the parameters when power-down</li> </ul>				
1	ADDH	High addr	ess byte o	f module	00H-FFH				
2	ADDL	Low addre	ess byte of	`module	00H-FFH				
		7	6	UART parity bit	UART mode can be different				
3	SPED	0	0	8N1 (default)	between communication parties				
	SI ED	0	1	801	serveen communication parties				
		1	0	8 E1					

Pro-Lite, Inc.

		1	1		8N1 (equal to 00)				
		5	4	3	TTL UART baud rate (bps)				
		0	0	0	1200	UART baud rate can be different			
		0	0	1	2400	between communication parties			
		0	1	0	4800	• The UART baud rate has nothing			
		0	1	1	9600 (default)	to do with wireless transmission			
		1	0	0	19200	parameters & won't affect the			
		1	0	1	38400	wireless transmit / receive			
		1	1	0	57600	features.			
		1	1	1	115200				
		2	1	0	Air data rate (bps)	• The lower the air data rate, the			
		0	0	0	2.4k	longer the transmitting distance,			
		0	0	1	2.4k	better anti-interference			
		0	1	0	2.4k (default)	performance and longer			
		0	1	1	4.8k	transmitting time			
		1	0	0	9.6k	The air data rate must keep the			
		1	0	1	19.2k	same for both communication			
		1	1	0	19.2k (same to 101)	parties.			
		1	1	1	19.2k (same to 101)				
				Gen	neral Specifications	Except for E32 (400T20S)			
	CHAN	7	6	5	reserved	Write 0			
4				Com	16H-19H, correspond to				
'		4-0, chann	nel (410M	+ CHAN	*1M), default 17H (433MHz)	432~435MHz			
		_							
		7	Fixed		ssion enabling bit (similar to MODBUS)	• In fixed transmission mode, the			
		0		Ir	ransparent transmission mode	first three bytes of each user's data frame can be used as high/low			
						address and channel. The module			
						changes its address and channel			
		1			Fixed transmission mode	when transmit. And it will revert			
		1			Tixed transmission mode	to original setting after complete			
						the process.			
						-			
5	OPTIO	6			IO drive mode (default 1)	This bit is used to the module			
	N	1	TXD an	d AUX pu	sh-pull outputs, RXD pull-up inputs	internal pull-up resistor. It also			
						increases the level's adaptability			
1					11				
		0	TXD, A	AUX oper	n-collector outputs, RXD open-collector	in case of open drain. But in			
		0	TXD、 A	AUX oper	n-collector outputs, RXD open-collector	some cases, it may need external			
		-	inputs			some cases, it may need external pull-up resistor.			
		5		3	wireless wake-up time	some cases, it may need external pull-up resistor.  • The transmit & receive module			
		5 0	inputs 4 0	3 0	wireless wake-up time 250ms (default)	some cases, it may need external pull-up resistor.  The transmit & receive module work in mode 0, whose delay time			
		5	inputs 4	3	wireless wake-up time	some cases, it may need external pull-up resistor.  • The transmit & receive module			

		_	١.	Ι, Γ									
		0	1	1		1000ms		can transmit the preamble code					
		1	0	0		1250ms				ponding	time		
		1	0	1	1500ms				continuously.				
		1	1	0		1750ms		•	When the recei	ver works in	mode		
								2	2, the time means the monitor interval time (wireless wake-up).				
		1	1			2000ms		i					
		1	1	1		20001118		(	Only the data from	om transmitte	r that		
								1	works in mode 1	can be receive	ved.		
		2			FEC	switch		•	After turn off	FEC, the a	actual		
		0			Turn o	ff FEC			lata transmissi	on rate incr	eases		
								1	vhile anti-int	erference a	bility		
									lecreases. Also	the transmi	ssion		
		1			Turn on FE	C (default)			listance is relati	vely short.			
		1			Turn on TE	c (default)		•	Both communication parties				
									keep on the s	same pages	pages about		
									turn-on or turn-off FEC.				
		1	0		Transmissio	n power (appro	oximation)	The	The external power must make sure				
		0	0		20d	Bm (default)		the ab	the ability of current output more than				
		0	1			17dBm		250m	A and ensure th	e power supp	ly		
		1	0			14dBm		ripple	within 100mV.				
								Lo	w power transn	nission is not			
		1	1			10dBm		recon	mended due to	its low power	c		
								suppl	y efficiency.				
For eve	amnle• Th	e meaning	of No 3 !	'SPED" by	te·								
TOI CA	ampic. III	c incaming	01110.3	SIED by									
The bir	nary bit of	the byte		7	6	5	4	3	2	1	0		
Config	ures by use	er		0	0	0	1	1	0	1	0		
Meanir	ng			UART par	T parity bit 8N1 UART baud rate is 960			s 9600	00 Air data rate is 2.4k				
Corresp	ponding he	xadecimal			1				A				

## 8. Hardware design

- It is recommended to use a DC stabilized power supply. The power supply ripple factor is as small as possible, and the module needs to be reliably grounded.;
- Please pay attention to the correct connection of the positive and negative poles of the power supply. Reverse connection may cause permanent damage to the module;
- Please check the power supply to ensure it is within the recommended voltage otherwise when it exceeds the maximum value the module will be permanently damaged;
- Please check the stability of the power supply, the voltage can not be fluctuated frequently;
- When designing the power supply circuit for the module, it is often recommended to reserve more than 30% of the margin, so the whole machine is beneficial for long-term stable operation.;
- The module should be as far away as possible from the power supply, transformers, high-frequency wiring and other

parts with large electromagnetic interference.;

High-frequency digital routing, high-frequency analog routing, and power routing must be avoided under the
module. If it is necessary to pass through the module, assume that the module is soldered to the Top Layer, and the
copper is spread on the Top Layer of the module contact part(well grounded), it must be close to the digital part of
the module and routed in the Bottom Layer;

- Assuming the module is soldered or placed over the Top Layer, it is wrong to randomly route over the Bottom Layer
  or other layers, which will affect the module's spurs and receiving sensitivity to varying degrees;
- It is assumed that there are devices with large electromagnetic interference around the module that will greatly affect the performance. It is recommended to keep them away from the module according to the strength of the interference. If necessary, appropriate isolation and shielding can be done;
- Assume that there are traces with large electromagnetic interference (high-frequency digital, high-frequency analog, power traces) around the module that will greatly affect the performance of the module. It is recommended to stay away from the module according to the strength of the interference. If necessary, appropriate isolation and shielding can be done.
- If the communication line uses a 5V level, a 1k-5.1k resistor must be connected in series (not recommended, there is still a risk of damage);
- Try to stay away from some physical layers such as TTL protocol at 2.4GHz, for example: USB3.0;
- The mounting structure of antenna has a great influence on the performance of the module. It is necessary to ensure that the antenna is exposed, preferably vertically upward. When the module is mounted inside the case, use a good antenna extension cable to extend the antenna to the outside;
- The antenna must not be installed inside the metal case, which will cause the transmission distance to be greatly weakened.

### 9 FAQ

### 9.1 Communication range is too short

- The communication distance will be affected when obstacle exists.
- Data lose rate will be affected by temperature, humidity and co-channel interference.
- The ground will absorb and reflect wireless radio wave, so the performance will be poor when testing near ground.
- Sea water has great ability in absorbing wireless radio wave, so performance will be poor when testing near the sea.
- The signal will be affected when the antenna is near metal object or put in a metal case.
- Power register was set incorrectly, air data rate is set as too high (the higher the air data rate, the shorter the distance).
- The power supply low voltage under room temperature is lower than 2.5V, the lower the voltage, the lower the transmitting power.
- Due to antenna quality or poor matching between antenna and module.

## 9.2 Module is easy to damage

• Please check the power supply source, ensure it is 2.0V~3.6V, voltage higher than 3.6V will damage the module.

- Please check the stability of power source, the voltage cannot fluctuate too much.
- Please make sure antistatic measure are taken when installing and using, high frequency devices have electrostatic susceptibility.
- Please ensure the humidity is within limited range, some parts are sensitive to humidity.
- Please avoid using modules under too high or too low temperature.

#### 9.3 BER(Bit Error Rate) is high


- There are co-channel signal interference nearby, please be away from interference sources or modify frequency and channel to avoid interference;
- Poor power supply may cause messy code. Make sure that the power supply is reliable.
- The extension line and feeder quality are poor or too long, so the bit error rate is high;

## 10 Production guidance

### 10.1 Reflow soldering temperature

Profile Feature	Curve characteristics	Sn-Pb Assembly	Pb-Free Assembly
Solder Paste	Solder paste	Sn63/Pb37	Sn96.5/Ag3/Cu0.5
Preheat Temperature min (Tsmin)	Min preheating temp.	100°C	150°C
Preheat temperature max (Tsmax)	Mx preheating temp.	150°C	200°C
Preheat Time (Tsmin to Tsmax)(ts)	Preheating time	60-120 sec	60-120 sec
Average ramp-up rate(Tsmax to Tp)	Average ramp-up rate	3°C/second max	3°C/second max
Liquidous Temperature (TL)	Liquid phase temp.	183°C	217°C
Time (tL) Maintained Above (TL)	Time below liquid phase line	60-90 sec	30-90 sec
Peak temperature (Tp)	Peak temp.	220-235°C	230-250°C
Average ramp-down rate (Tp to Tsmax)	Average ramp-down rate	6°C/second max	6°C/second max
Time 25°C to peak temperature	Time to peak temperature for 25°C	max 6 minutes	max 8 minutes

## 10.2 Reflow soldering curve

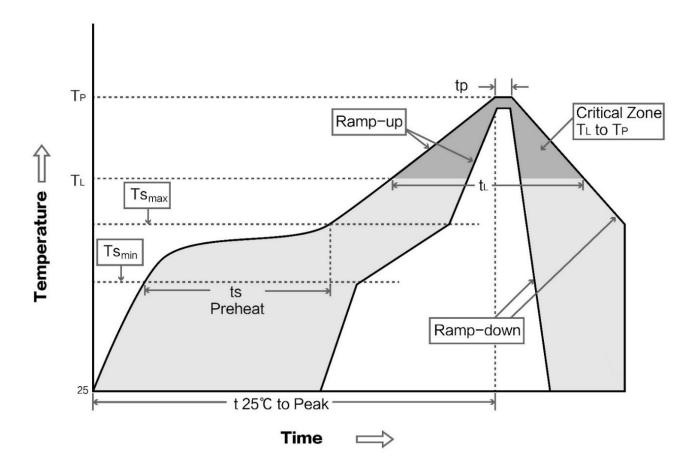


## 12 Antenna Guidance

#### 12.1 Antenna recommendation

The antenna is an important role in the communication process. A good antenna can largely improve the communication system. Therefore, we recommend some antennas for wireless modules with excellent performance and reasonable price.


Antenna Manufacturer:	CHENGDU ZIISOR TECHNOLOGY CO., LTD.	
Antenna Model:	TX433-FPC-5711	
Antenna type:	FPC Antenna	
Antenna gain:	2.6dBi	

## 12.2 Antenna Selection

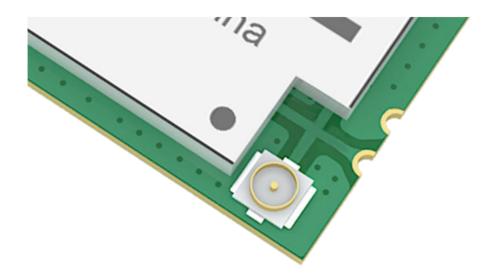

At the same time enable IPEX interface and stamp hole interface, IPEX interface and stamp hole interface can be arbitrarily selected

# 13 Package for batch order

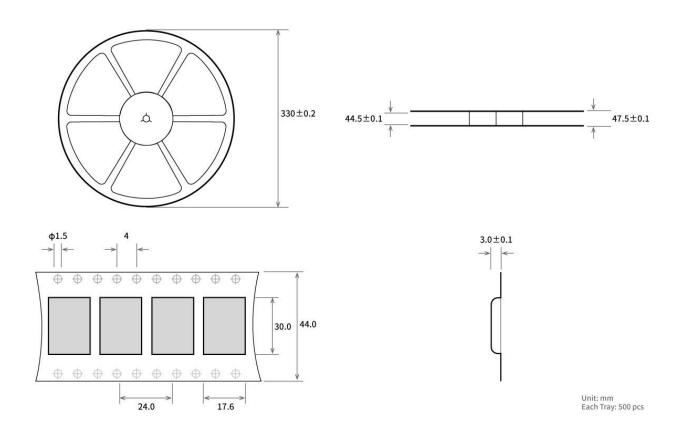

# **Revision history**

Version	Date	Description	Issued by
1.00	2021-10-11	Initial version	Linson

#### **FCC Caution:**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### **FCC RF Radiation Exposure Statement:**

- 1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- 2. This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment.
- 3. This equipment should be installed and operated with minimum distance 20cm between the radiator wour body.

Host product manufacturers that they need to provide a physical or e-label stating, "Contains FCC ID: TWNE32-A" with their finished product.

Only those antennas with same type and lesser gain filed under this FCC ID can be used with this device.

The host product manufacturer is responsible for compliance to any other FCC rules that apply to the host not covered by the modular transmitter grant of certification. The final host product still requires Part 15 Subpart B compliance testing with the modular transmitter installed.

The final host integrator must ensure there is no instruction provided in the user manual or customer documentation indicating how to install or remove the transmitter module except such device has implemented two-ways authentication between module and the host system.

The final host manual shall include the following regulatory statement: This equipment has been tested and found to comply with the limits. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This module has been tested and found to comply with part 15.231 requirements for Modular Approval. This module is intended for OEM integrator. The OEM integrator is responsible for the compliance to all the rules that apply to the product into which this certified RF module is integrated. Additional testing and certification may be necessary when multiple modules are used.