 


ASUS

System :

FX607V, FX607VU, FX607VB, FX607VUR, FX607VBR, TUF607V, TUF607VU,
TUF607VB, TUF607VUR, TUF667V, TUF667VU, TUF667VB, TUF667VUR

Label location



RF label

