

Product User Manual

GEN 2.0 S2

[This appliance is for AC 120 V only.
Please make sure to check before installation.]

inus

Important Safeguards

1. READ ALL INSTRUCTIONS BEFORE USING

Warning To reduce the risk of burns, electric shock, fire or injury, follow the all safety precautions for handling electrical outlets and especially around water.

1. Small children should not be permitted to use this appliance without adult supervision.
2. Use this appliance only for its intended purpose as described in this manual. Only use attachments recommended by the manufacturer.
3. Never operate this product if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.
4. Install the unit according to the installation instructions.
5. Do not attempt to service this appliance by yourself. Doing so could void the warranty.
6. Keep the electrical cord away from heated surfaces such as irons or hair curlers.
7. Never drop or insert any objects into any openings.
8. Not suitable for outdoor use.
9. Follow proper cleaning instructions.
10. Never block the air openings of the product. Keep the air openings free of lint, hair, and other debris.
11. Always follow the grounding instructions in this manual before powering the unit.

2. WIRING REQUIREMENTS


GROUNDING

In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product includes a cord with a grounding wire and grounding plug. They must be plugged into an outlet that is properly installed and grounded. We highly recommend a GFCI compliant outlet.

DANGER

Improper use of the grounding plug can result in a risk of electric shock. If it is necessary to repair or replace the cord or plug, do not connect the grounding wire to a flat blade terminal. The grounding wire can be identified by its insulated outer surface. It will either be colored green or will not contain yellow stripes. Check with a qualified electrician if you do not understand grounding instructions or if you do not know whether the product is properly grounded.

This product is for use on a nominal 120V circuit. It has a grounding plug that is similar to the plug illustrated in sketch A extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by the screw.

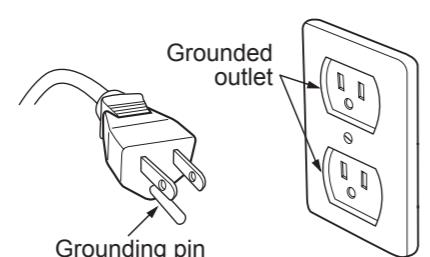

Insert the power plug correctly in proper voltage outlet and do not use an extension due to a risk of fire.

Remote control power: 2x AAA Batteries (1.5V)


* CAUTION

RISK OF EXPLOSION TO BATTERY IF REPLACED BY AN INCORRECT TYPE.

DISPOSE OF USED BATTERIES ACCORDING TO LOCAL ORDINANCES


Identification

Main unit

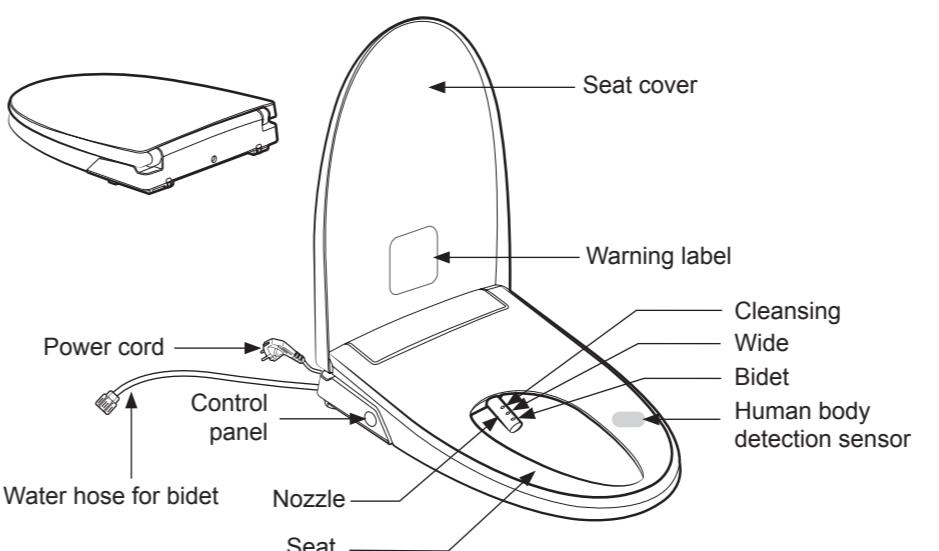

Accessories

* Specifications mentioned in this manual are subject to change without prior notice for performance enhancement and, therefore, certain detailed features for each product may not match the manual exactly.

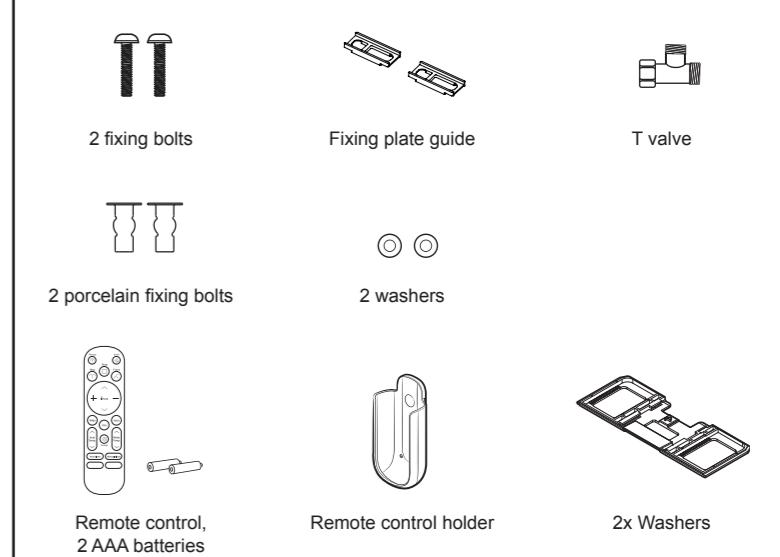

How to Use

Check the state of water supply under normal water supply conditions.
Operating the product for a long period of time or by force when the water is not being supplied may cause a malfunction.

- * Before use, check the power condition.
- * This product has a seat sensor and operates only after it is recognized.
- * When the power plug is inserted, the nozzle operates at its initial setting, as the nozzle moves back and forth.
- * Taking out or pushing in the nozzle by force may cause a malfunction.

Stop

- Press the Stop button during use to stop the operation.
- It also stops automatically when a user stands up from the seat.

Rear / Move

- Press the Rear button. It operates for 2 minutes and then stops automatically.
- When the button is pressed one more time during an operation, it activates the Move feature, which moves the nozzle front and back to clean a broader area.

Dry (exclusive for S2 PLUS)

- Press the Dry button. It operates for 3 minutes and then stops automatically.
- Press + or - button to be able to adjust the temperature of warm air in 5 different levels.

Front / Move

- Press the Front button. It operates for 2 minutes and then stops automatically.
- When the button is pressed one more time during an operation, it activates the Move feature, which moves the nozzle front and back to clean a broader area.

Wide / Move

- Press the Wide button. It operates for 2 minutes and then stops automatically.
- When the button is pressed one more time during an operation, it activates the Move feature, which moves the nozzle front and back to clean a broader area.

Auto


- Press the Auto button. S2 operates for 2 minutes and S2 PLUS operates for 5 minutes then stops automatically.
Clean → Clean & move → Clean, move & massage → Dry : S2 PLUS
Clean → Clean & move → Clean, move & massage : S2
- When the button is pressed one more time during an operation, it stops the automatic operation.

Massage

- When the Massage button is pressed during a washing operation such as Rear, Front the water pressure increases and decreases repeatedly to demonstrate a massage effect.
- When the button is pressed one more time during an operation, it stops the massage operation.

Gentle

- Rear Move feature operates with the water pressure strength and nozzle location suitable for children, and then stops.
Clean & move → Dry : S2 PLUS (for 5 minutes)
Clean & move : S2 (for 2 minutes)
It operates then stops automatically.
- When the button is pressed one more time during an operation, it stops the massage operation.

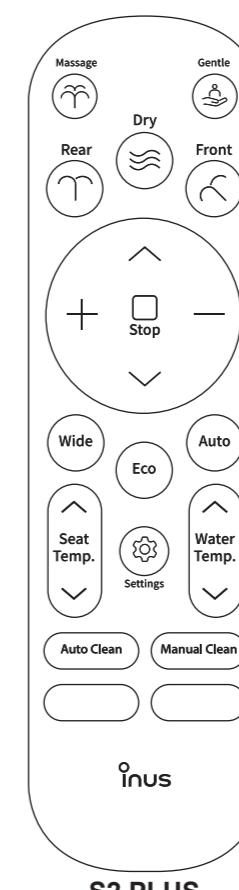

Eco

- Press the Eco button. It enters the Eco state.
- When the bidet is not in use, the toilet seat temperature is maintained at 28 °C. However, if the set temperature is OFF (room temperature), then it is maintained at OFF (room temperature).
- When using the Eco button, the amount of power and water consumption is minimized and optimized.
- If the Eco button is pressed one more time in the Eco state, it enters the Eco OFF state.

Seat Temp. / Water Temp.

- Press Up (▲) or Down (▼) for each button to be able to adjust the temperature in 4 different levels, Room-Low-Medium-High.

Nozzle location

- During a washing operation such as Rear, Front or Wide, the front and back buttons can be pressed to adjust the nozzle location in 5 different positions.

Water pressure

- During a washing operation such as Rear, Front or Wide, the high and low buttons can be pressed to adjust the water pressure at 5 different levels.

Automatic nozzle cleansing

- Press the Auto Clean button. Water is sprayed on the nozzle automatically for about 30 seconds and repeatedly comes in and out.

Manual nozzle cleansing

- Press the Manual Clean button. The nozzle comes forward for about 3 minutes. Use a toothbrush or a soft cloth to clean it.

Buzzer sound ON/OFF

- If the Settings button is pressed for 5 seconds in the seating OFF state and then the Gentle button is pressed, the buzzer sound becomes ON/OFF.

Pairing

- Press the side button of the main bidet unit for 5 or more times (within 5 seconds).
- Then, press the Settings button for 5 seconds, and press the Up button.
A buzzer sounds to complete the pairing.

Product User Manual

GEN 2.0 S2

[This appliance is for AC 120 V only.
Please make sure to check before installation.]

inus

How to Clean

Nozzle cleaning



Do not take out or push in the nozzle by excessive force.
It may cause a malfunction.

- Check if seating is deactivated.
(If you are not seated on the seat, it is the state in which seating is deactivated.)

Automatic nozzle cleansing

- Once the Auto Clean button is pressed, water is sprayed on the nozzle for 30 seconds and repeatedly comes in and out.

Manual nozzle cleansing

- Once the Manual Clean button is pressed, the nozzle comes forward for about 3 minutes.
- Use a toothbrush or a soft cloth to clean it.
When you press the STOP button after cleaning is complete, the nozzle returns.
When cleaning parts of the bidet other than the nozzle, unplug the power cord first.
- Do not push in the tip of the bidet with excessive force. (It may cause a malfunction.)

Exterior cleaning

- To wipe the surfaces of the main unit, use a sponge or a dry towel or apply a neutral detergent on a towel for use.
- Do not wipe with a thinner, benzene, detergent (for toilets or bathrooms), toilet paper and/or chemical, or let an insecticide, air freshener and/or deodorant be on the surfaces.



⚠ Any discoloration, cracks and/or damages to the main unit caused by a failure to follow the above instructions require paid services even if the warranty period still has not expired.

Handling and storage

For freeze protection in winter

- Check if the power cord is inserted into the outlet properly.
- Press the WATER TEMP button on the control panel to set the temperature.
(Thermal effect of the hot water tank may prevent freezing.)
Note : If heating is not available in the bathroom, either wrap the connection pipe with a cloth or keep it warm with another insulation material.
- If unused for a long period of time during winter, unplug the power cord and drain water from the main unit. (Refer to Drain water)

How to Install

This appliance is for AC220V only. If you are in need of electrical work, contact an electrical specialty store.
Do not connect it together with bathroom lighting or ventilator cable. It may cause a malfunction.

Test operation

- Prepare
 - Connect the power cord to a 200 V outlet. Water will begin to flow into the tank within 2 minutes.
- Check functions (when water is supplied under normal water supply conditions)
 - Check each function in the same way as in How to Use.
 - Operating the product for a long period of time or by force when the water is not being supplied may cause an incorrect operation or a malfunction.
- In some cases, remaining water may be leaked from pipes while heating up the water.

How to Use

Symptoms	How to Inspect	Countermeasures
It does not work at all.	<ul style="list-style-type: none"> Is there a blackout or an unplugged power cord? 	<ul style="list-style-type: none"> Insert the cord properly.
The water does not come out.	<ul style="list-style-type: none"> Is the water shutoff valve or water supply valve closed? Is the water filter clogged? Is the nozzle clogged? 	<ul style="list-style-type: none"> Open the water supply valve. Clean the water filter. Clean the nozzle.
The water leaks outside.	<ul style="list-style-type: none"> Check if the water hose connection part is well tightened. 	<ul style="list-style-type: none"> If it continues to leak, contact the customer center.

How to Install

This appliance is for AC 120 V only. If you are in need of electrical work, contact an electrician. Do not connect it together with bathroom lighting or a ventilator cable. It may cause a malfunction.





Until the installation of the entire water supply section is complete, do not insert the power cord. It may cause a malfunction.

How to separate existing seat

- Unfasten the 2 fixing nuts on the existing seat to detach the seat and cover seat.
- Store the detached seat, cover seat, bolts and nut packings in a secure place.


How to install main unit on toilet

- Separate the existing toilet seat.
Unfasten the fixing nuts on the existing seat to detach the seat and cover seat.
You may need them when moving, etc.
- Connect the bidet hose to the bidet.
- First, fasten the fixing nut on the porcelain.

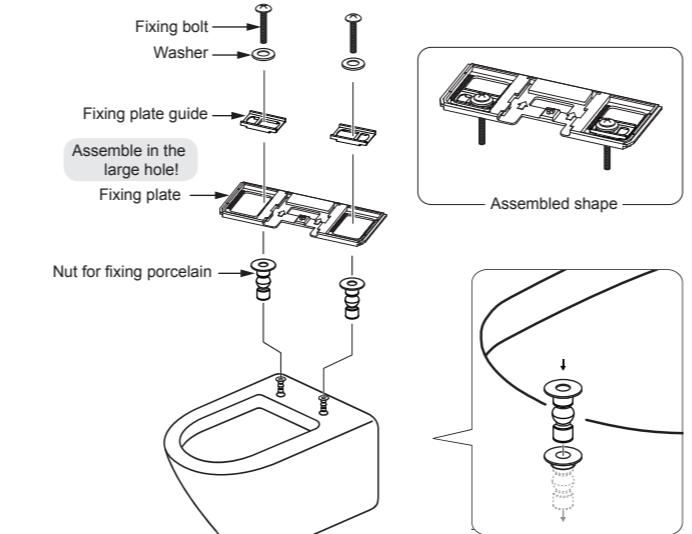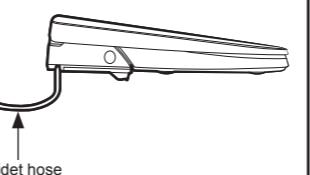

- Insert the fixing plate set in the center of the rear of the main bidet unit to assemble.

* Do not turn the bidet upside down during work.
Move the bidet front and back, left and right to check if it does not come off.

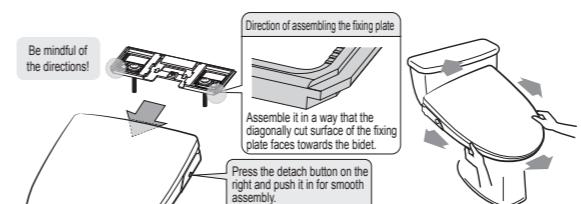


How to connect water hose


- Close the shutoff valve by turning it clockwise.
- Flush the water tank completely to empty.
- Remove the existing water supply hose from the water tank.
Install the T-valve on the water tank.

4. Connect the water supply hose from the T-valve to the shutoff valve.

- Connect the bidet hose (1/2" to 1/2") from the T-valve to the main unit.
- Open the shutoff valve by turning it counter clockwise.
Check for any water leaking or dripping.

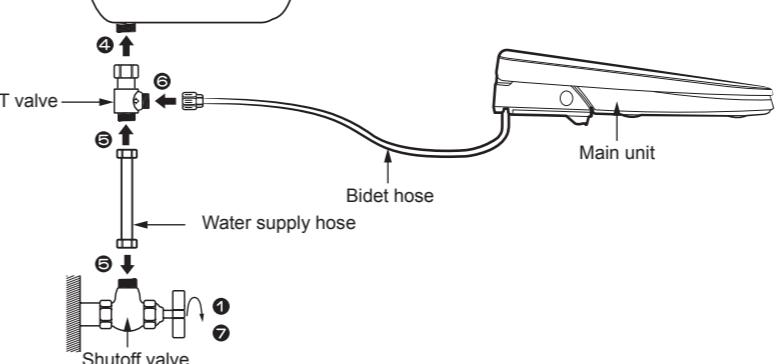

How to separate bidet

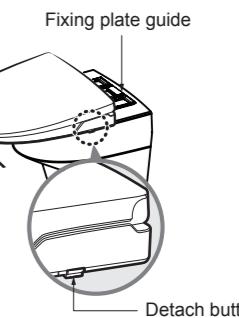


- Separate bidet
* While the detach button is being pressed, pull the bidet forward.
(For assembly, push the product on the fixing plate guide to insert it.)

Human body detection sensor


This product has a human body detection sensor.
If you are not seated on the bidet seat, the product will not work properly.

Size of toilet

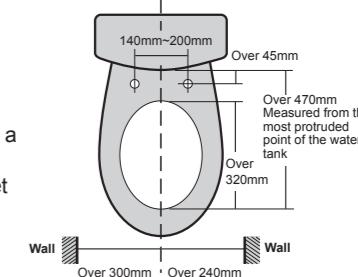

Others

Item	GEN 2.0 S2	
Water supply	Rating	Single-phase AC 220V 60Hz 1400W
	Method	Direct connection water supply
	Pressure used	0.07~0.74 MPa
Cleansing device	Volume of cleansing water	High : 590 ±100 cc / min., Low : 510 + 100 cc / - 50 cc / min.
	Volume of bidet water	High : 650 ±100 cc / min., Low : 510 + 100 cc / - 50 cc / min.
	Volume of water for wide	650 ±100 cc / min.
	Temperature control	Room temp., 31 °C, 34 °C, 37 °C
	Heater capacity	AC 220 V, 1400W (±10%)
	Safety device	Thermo switch, temperature fuse
Drying device	Category	S2 PLUS S2
	Temperature control	60 °C or below
	Heater capacity	AC 220 V 280 W (± 10 %)
	Safety device	Temperature fuse
Seat heating	Temperature control	Room temp., 31 °C, 34 °C, 37 °C
	Heater capacity	AC 220 V, 55 W (± 10 %)
	Safety device	Temperature sensor, temperature fuse
	Waterproof grade	IPX5
	Cord length	1,500 ± 60 [mm]
	Product size	525 x 413 x 97 [mm]
	Product weight	4.0 Kg

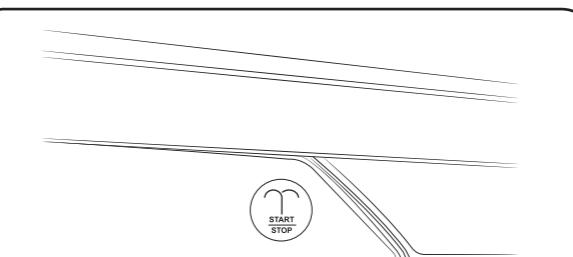

Rear(Cleansing)

Press the 'Rear' button. It automatically stops after operating for about 2 minutes.

If the 'Rear' button is pressed again, the operation stops.

FCC Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Compliance Information : This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

FCC RF Radiation Exposure Statement:
This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

Limited Warranty

Thank you for choosing INUS products. We are committed to providing you with high-quality products backed by our limited warranty policy. Please read this policy carefully to understand the terms and conditions of our limited warranty coverage.

Our obligation to you under this warranty is limited.

INUS electronic bidet products are covered by a limited warranty for a period of 2 years from the date of purchase. 100% coverage of all parts and labor for the first year from the original date of purchase. After the first year, 100% coverage on parts and replacement only. Labor costs for any repairs are not included in the coverage. The customer is responsible for shipping charges to ship the product to us for diagnosis and repair. If the repair is determined to be covered under warranty, INUS will ship the unit back to the customer via ground/economy shipping at no cost to the customer.

General Warranty:

This warranty covers defects in materials and workmanship under normal use and maintenance. INUS warrants that during the warranty period, your product will be free from defects in materials and workmanship.

This warranty does not cover:

Damage resulting from accidents, acts of God, misuse, abuse, negligence, or unauthorized modifications.

Normal wear and tear.

Discoloration due to exposure to unapproved cleaning products or exposure to heat or light.

Consumable parts, such as batteries, unless otherwise specified.

Products with altered or removed serial numbers.

Products not purchased from authorized INUS dealers or resellers.

If a covered defect arises during the warranty period, INUS will, at its sole discretion, either:

Repair the product using new or refurbished parts. Replace the product with a new or refurbished product of equal or greater value.

To initiate a warranty claim:

Complete the warranty registration and warranty claim form at www.theinushome.com

Customers are responsible for shipping products to INUS. We will cover any return shipping costs associated with shipping an item back to you. We recommend that you ship your product to us using a carrier that provides you with tracking information and proof of delivery. Customers are responsible for their product until we sign for it at the destination address.

Inus Home USA, Inc.

www.theinus.co.kr