

Contents

Getting Started with Your Phone	6
Phone Overview.....	6
The Battery	12
Charging the Battery	15
Battery Level.....	19
Turning the Phone On and Off.....	20
Making Calls	20
Redialing Calls.....	20
Receiving Calls.....	20
Screen Icons.....	21
Menu Access.....	22
Menus Overview	25
Twist and Close the phone	28
Using a Memory Card	29
Quick Access to Convenient Features	32
Camera	32
TV-OUT	32
Using the Headset Adapter/2.5mm Splitter.....	33
Vibrate Mode	33
Lock Mode.....	33
Mute Function	34
Volume Quick Adjustment	34
Call Waiting	34
Caller ID	35
Voice Commands	35
Speed Dialing	35
Entering and Editing Information.....	36
Text Input	36
Text Input Modes	36
Contacts in Your Phone's Memory	39
The Basics of Storing Contacts Entries	39
Options to Customize Your Contacts.....	40

Contents

Editing Contacts Entries	43
Deleting	46
Phone Numbers with Pauses.....	47
Searching Your Phone's Memory.....	49
Making a Call from Your Phone's Memory	49
Camera.....	53
Take Picture	55
Record Video.....	68
MEDIA CENTER.....	74
Music & Tones	75
V CAST Music with Rhapsody®	76
Get New Ringtones.....	77
My Ringtones.....	77
My Music	78
My Sounds.....	79
Sync your music from your PC to your V CAST Music with Rhapsody® wireless device.....	81
Picture & Video	82
V CAST Videos	83
Get New Pictures.....	86
My Pictures	86
My Videos.....	94
Online Album.....	97
Games	97
Mobile Web.....	98
Browse & Download	102
Extras.....	102
Info.....	103
MESSAGING	104
New Message.....	105
Inbox.....	111
Sent.....	113

Drafts	114
Voicemail	115
Visual Voice Mail	115
Mobile IM	116
Email	116
Chat	116
Message Settings	117
Message Erase	119

CONTACTS **120**

New Contact	120
Contact List	121
Backup Assistant	122
Groups	122
Speed Dials	124
In Case of Emergency (ICE)	125
My Name Card	126

RECENT CALLS **127**

Missed	128
Received	128
Dialed	129
Blocked	129
All	130
View Timers	131

SETTINGS & TOOLS **132**

My Verizon	132
Tools	133
Voice Commands	134
Calculator	136
Calendar	137
Alarm Clock	138
Stop Watch	139
Countdown Timer	139

Contents

World Clock	140
Notepad	140
Bluetooth Menu	140
Power	141
Add New Devices	142
Options	144
Sending and Receiving Name Cards	146
Sending and Receiving Images	148
Sounds Settings	149
Call Sounds	149
Alert Sounds	150
Keypad Volume	151
Service Alerts	151
Power On/Off	152
Display Settings	152
Banner	152
Backlight	153
Contrast	154
Wallpaper	154
Display Themes	155
Main Menu Settings	155
Dial Fonts	156
Clock Format	156
Slide Show	156
Phone Settings	158
Airplane Mode	158
Set Shortcuts	159
Voice Commands	161
Language	161
Location	162
Security	162
System Select	166
NAM Selection	166
Call Settings	167
Answer Options	167

Auto Retry.....	168
TTY Mode	168
One Touch Dial	169
Voice Privacy	169
Data Settings	170
DTMF Tones.....	170
Memory.....	170
Save Options	171
Phone Memory	171
Card Memory.....	172
Phone Info.....	174
My Number.....	174
SW/HW Version.....	174
Icon Glossary	174
Software Update.....	176
Included Items.....	178
Safety	179
TIA Safety Information	179
Safety Information for FCC RF Exposure.....	182
FDA Information.....	185
Emergency Calls	194
Compliance with Other FCC Regulations.....	196
General Safety	196
Games	203
Camera	204
Accessibility.....	204
RECYCLE YOUR CELL PHONE!	208
12 MONTH LIMITED WARRANTY	210
Index.....	214

Getting Started with Your Phone

Phone Overview

1. Earpiece

2. LCD Screen

The surface of the screen is made of reinforced glass. You may hurt yourself if you touch the display panel when it is cracked or broken.

3. Microphone

4. Left Soft Key

5. Camera/Video Key

6. Send Key

7. Voicemail Key

8. Clear/Voice

Command Key

9. International Dialing

Code Key

10. Next Key



11. Directional Key

12. Center Select Key

13. Right Soft Key

14. Speaker/
Flashlight Key

15. End/Power Key

16. Alphanumeric
Keypad

17. Vibrate Mode Key

18. Accessory Connector Port

19. Charge Indicator

20. Shutter Key

21. Side Select
Key


22. Volume Keys

23. BACK Key

24. Memory Card Slot



25. Charging Terminals

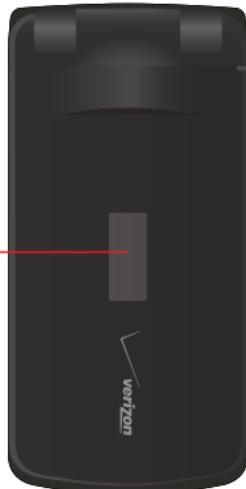

26. Outside Display



* For best performance, do not touch this area when using your phone.

1. Earpiece**2. LCD Screen**

Displays messages and indicator icons.

3. Microphone**4.  Left Soft Key**

Press to display the Message menu or access the function listed above the key.

5.  Camera/Video Key

Press for quick access to Camera/Video.

6.  Send Key

Press to place or answer calls. From the home screen, press to access your All Calls list.

7.  Voicemail Key

Press and hold to call Voicemail.

8.  Clear/Voice Command Key

In idle mode, press to access the Voice Command function.

Press and hold in idle mode to access the Sound Recorder function.

When entering a phone number or text, press to delete a single space or character. Press and hold to delete entire words. Press this key once in a menu to go back one level.

9.  International Dialing Code Key

Press and hold to enter a plus "+". A "+" is reserved for international dialing code.

10.  Next Key

In T9 mode, press to display other matching words.

11.  Directional Key

Press the Directional Key  left to access My Verizon, down to access the Calendar, up to access Mobile Web, and right to access My Shortcuts.

12. Center Select Key

Press to select a function.

13. Right Soft Key

Press to display Contacts or to access the function listed above the key.

14. Speaker/Flashlight Key

Press to turn Speakerphone on/off. You can switch from the earpiece to the speaker by turning on Speakerphone before starting a call or while a call is in progress. Press and hold to toggle the flashlight on/off when the phone is in idle mode.

When pressed while taking picture, you can lock Auto Focus*.

*Auto Focus automatically adjusts the focus.

15. End/Power Key

Press to toggle power on/off and to end a call. Also, press to return to the home screen.

16. Alphanumeric Keypad

Press to enter numbers and characters and to select menu items.

17. Vibrate Mode Key

Press and hold to turn Vibrate Mode on/off. In Vibrate Mode, all phone sounds including ringtones and keypad tones are silenced.

18. Accessory Connector Port

19. Charge Indicator

Turns red while charging.

20. Shutter Key

Press when taking picture to activate the shutter. Press halfway to adjust and lock the focus without activating the shutter.

Press while taking video to start or stop recording.

21.  Side Select Key

This key functions as FWD (fast forward) key when it is pressed while playing music.

When you Twist and Close the phone, press to select a function.

22.  Volume Keys

Press up or down to adjust the volume. Press while the phone is ringing to ignore a call.

When you Twist and Close the phone, use to select a function.

23.  BACK Key

This key functions as RWD (fast rewind) key when it is pressed while playing music.

When you Twist and Close the phone, press this key once in a menu to go back one level.

24. Memory Card Slot

Insert a microSD™ memory card here to increase memory capacity.

25. Charging Terminals**26. Outside Display****27. Camera Flash/Flashlight****28. Camera Lens****29. Speaker****30. Battery Cover****31. Internal Antenna Area****32. LOCK Switch**

■ Water Resistance

The CASIO EXILIM Phone is water resistant. It provides reliable performance for outdoor life, in such conditions as driving rain or high humidity.

For "12 MONTH LIMITED WARRANTY" see page 209.

NOTE

To maintain water resistance:

- Securely fasten the Accessory Connector Port cover.
- Completely close the battery cover and lock the LOCK switch.

■ Shock Resistance

The rugged construction of the CASIO EXILIM Phone provides outstanding shock and vibration resistance. The tested device meets the requirements of MIL-STD-810F(Drop1.22) standard.

Warning!

The CASIO EXILIM Phone shock and vibration resistance features do not guarantee protection against every type of shock and vibration. CASIO EXILIM Phone may be damaged and malfunction depending on the severity of received shock or vibration.

■ Dust Resistance

For additional peace of mind, the CASIO EXILIM Phone is also dust resistant. The device was tested using silica flour at a temperature of 95F and meets the MIL-STD-810F (Dust) standard.

NOTE

The phone can be rinsed with clean water when dirty. To ensure water resistance, make sure that all covers are securely closed before rinsing.

NOTE

Periodically, clean the Charging Terminals with a dry cloth or cotton swab. Dust may cause some electrical connection problems. Avoid wiping with excessive force, which can disfigure the terminals.



The Battery

Warning!

Use only approved batteries for the CASIO EXILIM Phone. Wipe the chassis before opening the battery cover to prevent moisture or dust from entering.

NOTE

Fully charge the battery before using the phone for the first time.

The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk and standby time.

Warning!

Failure to follow the below directions for installing/removing the battery could result in product failure.

■ Installing the Battery

Warning!

Use only the approved Battery with the CASIO EXILIM Phone.

Warning!

Do not install the battery where water or liquid may fall directly on the phone or battery or in a humid place such as a bathroom.

Otherwise, the electrical circuits may short or erode and cause the phone to malfunction.

1. Slide the LOCK switch to the FREE side (direction of the arrow).
2. Gently push up location ① of the battery cover in the following figure.
3. Remove the battery cover.
4. With the tab of the battery facing up (② in figure), match the locations of the charging terminals inside the phone with the charging terminals of the battery and firmly insert the battery.



5. Insert the cover at an angle as shown in ③.

6. Press location ④ from the top.



7. Press the battery cover to the direction indicated ⑤ and ⑥ by the arrows as shown in the figures.



8. Slide the LOCK switch to the LOCK side.



Warning!

Do not press hard on the battery cover with the battery cover tab running over the phone because you may damage the battery cover tab.

If you are using a strap, be careful not to get it caught between the battery cover and phone, in order to maintain waterproofing.

NOTE

When removing the battery, remove the battery cover in the same manner as when installing.

When removing the battery, pull up the tab of the battery.

If you try to lift from the direction other than the tab, you may damage the charging terminals inside the phone.



Warning!

Do not leave the removed battery where it can overheat such as near a flame, stove, or under direct sunlight. Otherwise, it can ignite, burst, malfunction, or cause a fire.

Do not hit, or exert excessive shock on the battery.

Otherwise, it can ignite or break.

Charging the Battery


To charge your battery:

Warning!

Use only approved chargers with the CASIO EXILIM Phone.

Using unapproved chargers with the CASIO EXILIM Phone may damage your phone or battery.

1. Connect the AC Charger to the Desk Top Cradle.
2. Plug the AC Charger power plug into an electrical outlet.
3. Insert the CASIO EXILIM Phone into the Desk Top Cradle in the order ②, ③ shown in the figure below.

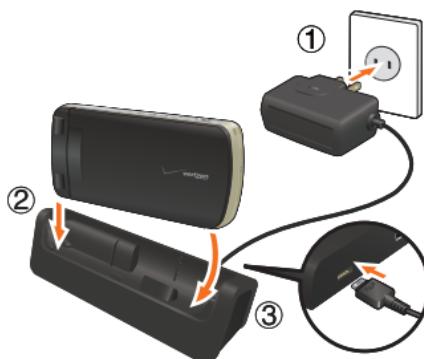

Warning!

The Charge Indicator is red while charging.

Even if the handset is inserted in the Desk Top Cradle, the phone is not charging if the Charge Indicator does not turn on. Firmly insert the phone into the Desk Top Cradle until the Charge Indicator turns on.

NOTE

The phone can be inserted into the Desk Top Cradle even if you Twist and Close it.

For "How to Twist and Close the phone" see page 27.

■ Charging by connecting to PC

You can charge the phone by only connecting the USB cable to your PC when you connect the included USB to the Desk Top Cradle.

Warning!

Be sure to install the custom USB driver from the included CD before connecting the mobile phone and PC with USB cable.

1. Connect the included USB cable to your PC as in ① in the figure below.
2. Connect the included USB cable to the Desk Top Cradle as in ② in the figure below.
3. Twist and Close the CASIO EXILIM Phone and insert in the Desk Top Cradle.



Warning!

When connecting the USB cable to the Desk Top Cradle, check that the tip of the USB cable connector matches the shape of the Desk Top Cradle jack before inserting.

Warning!

Do not use the Desk Top Cradle where water or liquid may fall directly on it or in a humid place such as a bathroom. Otherwise, the electrical circuits may short or erode and cause the phone to malfunction.

Do not touch or use the Desk Top Cradle with wet hands. Otherwise, it may cause electrical shock.

If you accidentally spill liquid on the Desk Top Cradle, pull out the electrical plug immediately.

NOTE

Charging by using the USB cable may take longer time than using the AC Charger.

Charging time when using the USB cable may vary depending on the PC to be connected.

■ Charging the battery by directly connecting the AC Charger

You can also charge the battery by directly connecting the AC Charger to the Accessory Connector Port located at the right side of the handset.

**■ Opening and Closing the Accessory Connector Port Cover**

1. To open the Accessory Connector Port cover, insert your nail in the depression of the phone near the Accessory Connector Port Cover and lift the Accessory Connector Port Cover.
2. To close the port cover, push the center of the port cover into the Accessory Connector Port.
3. Make sure the port cover is completely closed.



Warning!

Failure to completely reseal the Accessory Connector Port after charging may result in damage if the phone is exposed to water.

NOTE

The charge time varies depending upon the battery level.

NOTE

Turn ON Auto Start On/Off of the SETTINGS & TOOLS to automatically start Slide Show when CASIO EXILIM Phone insert into the Desk Top Cradle.

It takes longer to fully charge the phone if slide show is displayed while charging.

For "Auto Start On/Off" see page 156.

For "Slide Show (Flip Open)" see page 91 and for "Slide Show (Twist and Close)" see page 92.

Battery Level

The battery level is shown at the top right of the LCD screen.

When the battery level becomes low, the low battery sensor alerts you in three ways: an audible tone will sound, the battery icon will begin to blink, and **BATTERY LOW** will appear on the display.

If the battery level becomes too low, the phone automatically powers off and any function in progress will not be saved.



Fully Charged



Fully Discharged

Turning the Phone On and Off

■ Turning the Phone On

1. Press and hold the End/Power Key  until the LCD screen lights up.

NOTE

Avoid any unnecessary contact with the antenna while your phone is on.

■ Turning the Phone Off

1. Press and hold the End/Power Key  until the LCD screen turns off.

Making Calls

1. From the home screen, enter the phone number (include the area code if needed).
2. Press the Send Key  to place the call.
3. Press the End/Power Key  to end the call.

■ Correcting Dialing Mistakes

If you make a mistake while dialing a number, press the Clear Key  once to erase the last digit entered, or press and hold the Clear Key  to delete all digits.

Redialing Calls

1. Press the Send Key  twice to redial the last number you dialed.

Receiving Calls

1. When the phone rings or vibrates, press the Send Key  to answer the call.

NOTE

Since the answer option is set to Flip Open as default, you can directly answer an incoming call by simply opening the Flip Top. For how to select an answer option, for "Answer Options" see page 167.

2. Press the End/Power Key  to end the call.

Screen Icons

When the phone is turned on, the top line of the LCD screen displays icons indicating the status of the phone.

 D	Digital indicator. Digital service is available.
 EV	EVDO service indicator. EVDO service is available.
 1X	1x service indicator. 1x service is available.
 EV 1X	EVDO and 1x services are available.
 OFF	Airplane Mode
 	Battery indicator. Indicates battery level. The more lines the stronger the charge.
 	In Call State. A call is in progress. * No icon indicates the phone is in idle mode.
 	Data Session
 	Location On Mode
 	E911 Only Mode
 	No service indicator. The phone is not receiving a system signal.
 P	Voice Privacy
 	Roaming indicator. The phone is outside of the home service area.

	SSL (Secure Sockets Layer) is a protocol developed by Netscape Communications that uses encryption to secure data through the public Internet from client to server.
	TTY mode On
	Bluetooth® On
	Bluetooth® Device Connected
	Bluetooth® Discovery Mode
	Voice Commands (Active)
	Voice Commands (Listening)
	Alarm Only
	Vibrate Only
	Sound Off
	Alarm On
	Calendar
	Missed Calls
	New Message
	New Voicemail
	Speakerphone mode

Menu Access

To display the Main Menu from the home screen, press the Center Select Key  **[MENU]**.

To use the menu:

- Press the Directional Key  up, down, left or right to select your desired menu item then press the Center Select Key  **[OK]**.
- Or enter the number that corresponds to the menu or submenu item.

With the CASIO EXILIM Phone, there are three Main Menu types: **Tab**, **List**, and **Grid**.

NOTE

All directions in this manual are based on the Tab Main Menu Setting, and Classic Display Theme, which are the default settings.

NOTE

For information about how to switch between Main Menu types, see page 151.

■ Example 1: Tab Menu

The Tab Menu has five tabs.

1. From the home screen, press the Center Select Key  **[MENU]**.
2. Press the Directional Key  left or right to move between tabs.
3. Press the Directional Key  up or down to select your desired menu option then press the Center Select Key  **[OK]**.

■ Example 2: List Menu

The List Menu has nine items.

1. From the home screen, press the Center Select Key  **[MENU]**.
2. Press the Directional Key  up or down to select your desired menu option then press the Center Select Key  **[OK]**.

■ Example 3: Grid Menu

The Grid Menu has nine items.

1. From the home screen, press the Center Select Key  [MENU].
2. Press the Directional Key  up, down, left or right to select your desired menu option then press the Center Select Key  [OK].

NOTE

When navigating within menus and submenus or when configuring your phone's settings, you can return to the previous screen or step by pressing the Clear Key .

Menus Overview



MEDIA CENTER

1. Music & Tones

1. V CAST Music
2. Get New Ringtones
3. My Ringtones
4. My Music
5. My Sounds
6. Sync Music

2. Picture & Video

1. V CAST Videos
2. Get New Pictures
3. My Pictures
4. My Videos
5. Take Picture
6. Record Video
7. Online Album

3. Games

4. Mobile Web

5. Browse & Download

6. Extras



MESSAGING

1. New Message

2. Inbox

3. Sent

4. Drafts

5. Voicemail

6. Visual Voice Mail

7. Mobile IM

8. Email

9. Chat



CONTACTS

1. New Contact

2. Contact List

3. Backup Assistant

4. Groups

5. Speed Dials

6. In Case of Emergency

7. My Name Card