

Contents

Getting Started with Your Phone	4
Phone Overview.....	4
Menu Overview.....	9
Icon Reference	12
Feature Overview.....	17
The Battery	19
Turning the Phone On and Off.....	25
Making Calls	25
Receiving Calls.....	26
Menu Access.....	26
Using a Memory Card	27
Connecting the Headset.....	30
Quick Access to Convenient Features	31
Vibrate Mode	31
Mute Function	31
Volume Quick Adjustment	31
Speakerphone	32
Motion Detection.....	32
Touch Keys	34
Entering and Editing Information.....	35
Text Input	35
Text Input Modes	35
RECENT CALLS	39
Accessing the Recent Calls submenu	39
Making a Call from Recent Calls	40
Viewing Recent Call History	40
View Timers.....	41
CONTACTS	42
Adding a new Contact from the idle screen.....	42

Contents

Adding a Phone Number from the idle screen	45
Phone Numbers with Pauses.....	46
Accessing the Contacts submenu	47
New Contact.....	47
Contact List.....	48
Groups.....	50
New PTT Contact.....	51
PTT Contact List	51
PTT Groups.....	52
Temp PTT Group.....	53
Speed Dials	53
In Case of Emergency (ICE).....	55
My Name Card.....	57
Push to Talk.....	58
About Push to Talk.....	58
Making a PTT Call.....	59
Incoming PTT Call	62
MEDIA CENTER.....	64
Music & Tones	64
Picture & Video	71
Games	83
Mobile Web.....	84
Browse & Download	86
Extras.....	87
Info.....	88
MESSAGING	89
Accessing the Messaging submenu	89
New Message Alert	89
New Message	90
Inbox.....	95


Sent.....	96
Messages	97
Drafts	99
Voicemail	100
Visual Voice Mail.....	100
Mobile IM	101
Email.....	101
Chat	101
Message Settings.....	102
Message Erase.....	103
SETTINGS & TOOLS	105
My Verizon	105
Tools.....	105
USB Mass Storage	112
G'zGEAR.....	113
Bluetooth Menu.....	122
Keyguard Settings.....	128
Sounds Settings.....	130
Display Settings.....	133
Phone Settings.....	139
Call Settings.....	148
Memory.....	151
USB Mode	153
Phone Info.....	154
Set-up Wizard	156
Index.....	157

Getting Started with Your Phone


Phone Overview

Getting Started with Your Phone



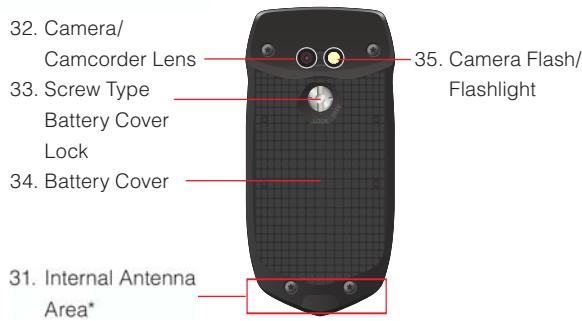

 * For best performance, do not touch this area when using your cellphone.

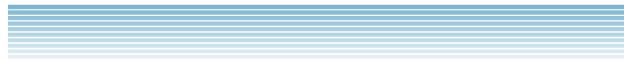**1. Earpiece****2. Main Display****3. Microphone****4. Left Soft Key**

Press to display the Message submenu or access the function listed above the key.

5. Camera/Video Key

With the flip open, press for quick access to the Take Picture mode or press and hold to access the Record Video mode.

6. Send Key

Press to place or answer calls. From the idle screen, press to access the All Calls list.

7. Voicemail Key

From the idle screen, press and hold to connect to your Voicemail server.

8. Clear/Voice Commands Key

From the idle screen, press to access the Voice Commands function. Press and hold from the idle screen to access the Sound Recorder function. When entering a phone number or text, press to delete a single space or character. Press and hold to delete entire words. Press this key once in a menu to go back one level.

9. Shift Key

Press to enter an asterisk (*) character for calling features. In text entry mode, press to change the character input type. Press and hold to display the plus sign (+) for international dialing.

10. Next Key

In T9 Word or T9 Palabra mode, press to display other matching words.

11.  Directional Key

Allows you to scroll through cellphone menu options and provides a shortcut to cellphone functions from the idle screen.

12.  Center Select Key

Press to access the MENU from the idle screen. It also allows you to accept choices when navigating through a menu.

13.  Right Soft Key

Press to display Contacts or to access the function listed above the key.

14.  Speakerphone/Flashlight Key

With the flip open, press to turn Speakerphone on/off, press and hold to turn the flashlight on/off.

15.  End/Power Key

Press and hold to turn the cellphone on/off or press to end a call or browser session. Within a menu, press to return to the idle screen.

16. Alphanumeric Keypad

Use these keys to enter numbers, letters, and characters or to select menu items.

17.  Vibrate Mode Key

Press and hold to activate/deactivate vibrate mode in the idle screen. Press to enter the number sign (#) character for calling features. In text entry mode, press to accept the word and add a space.

18. One-touch Open Button

Push to open up the flip when it is closed.

19. Charging Terminals

20. Charging/Data Port

**21. Headset Jack**

Allows you to plug in a headset (sold separately) with a standard 2.5mm plug to your cellphone.

22.  PTT Key

Press and hold to utilize Push to Talk (PTT) when the cellphone is in PTT mode.

23.  Volume Keys

Allows you to adjust the master volume in the idle screen (with the flip open) or adjust the voice volume during a call.

24.  G'zGEAR Key

From the idle screen, press to launch G'zGEAR application.

25. Speaker**26. Charge Indicator**

Turns red while charging. Turns green when fully charged.

27. Front Display**28.  Rewind key**

With the flip closed and music playing, touch and hold to rewind music. Tap to go to a previous song.

29.  Fast Forward key

With the flip closed and music playing, touch and hold to fast forward music. Tap to go to the next song.

30.  Play/Pause key

With the flip closed and music playing, Tap to play or pause a song.

31. Internal Antenna Area**32. Camera/Camcorder Lens****33. Screw Type Battery Cover Lock****34. Battery Cover****35. Camera Flash/Flashlight**

Menu Overview

Contacts

- 1. New Contact
- 2. Contact List
- 3. Groups
- 4. New PTT Contact*
- 5. PTT Contact List*
- 6. PTT Groups*
- 7. Speed Dials
- 8. In Case of Emergency
- 9. My Name Card

Messaging

- 1. New Message
- 2. Inbox
- 3. Sent
- 4. Drafts
- 5. Voicemail
- 6. Visual Voice Mail
- 7. Mobile IM
- 8. Email
- 9. Chat

Recent Calls

- 1. Missed
- 2. Received
- 3. Dialed
- 4. Blocked**
- 5. All
- 6. View Timers


My Ringtones

Media Center

- 1. Music & Tones**
 - 1. V CAST Music I
Rhapsody
 - 2. Get New Ringtones
 - 3. My Ringtones
 - 4. My Music
 - 5. My Sounds
 - 6. Sync Music
- 2. Picture & Video**
 - 1. V CAST Videos
 - 2. Get New Pictures

* These options are available only when the PTT feature is turned on.

** Blocked appears only when Contacts Only or Block All is selected for Calls under MENU > Settings & Tools > Phone Settings > Security > Restrictions > Calls > Incoming Calls or Outgoing Calls.

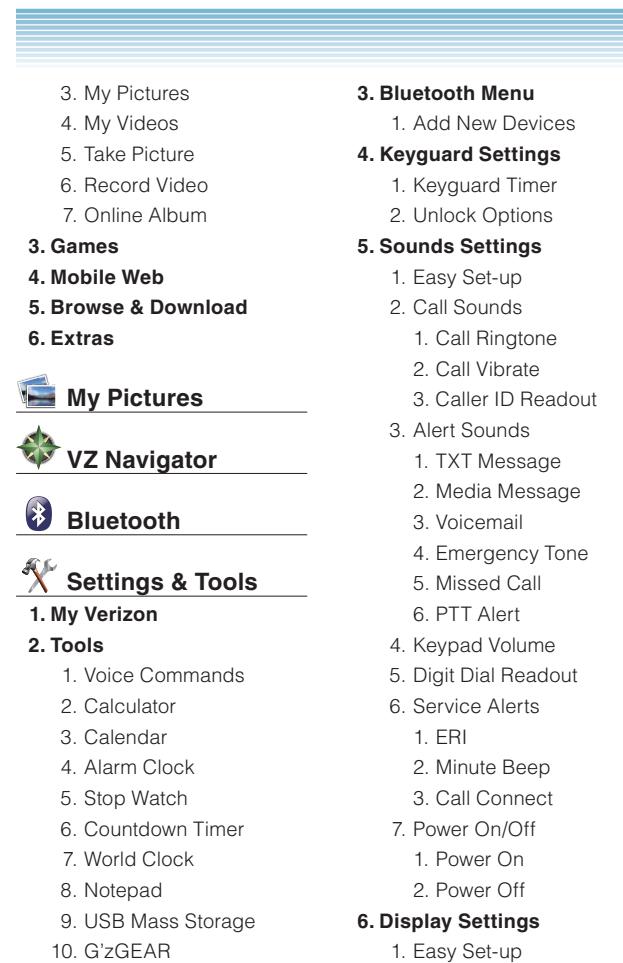

- 2. Banner
 - 1. Personal Banner
 - 2. ERI Banner
- 3. Backlight
 - 1. Display
 - 2. Keypad
- 4. Wallpaper
- 5. Display Themes
- 6. Main Menu Settings
- 7. Dial Fonts
- 8. Menu Font Size
- 9. Clock Format
 - 1. Main Clock
 - 2. Front Clock

7. Phone Settings

- 1. Airplane Mode
- 2. Set Shortcuts
 - 1. Set My Shortcuts
 - 2. Set Directional Keys
 - 3. Set Side Keys
- 3. Voice Commands
 - Settings
- 4. Language
- 5. Location
- 6. Current Country
- 7. Security
 - 1. Edit Codes
 - 2. Restrictions
 - 3. Phone Lock Setting
 - 4. Lock Phone Now

- 5. Restore Phone
- 8. System Select
- 9. NAM Selection
- 10. Motion Detection

8. Call Settings

- 1. Answer Options
- 2. Auto Retry
- 3. TTY Mode
- 4. One Touch Dial
- 5. Voice Privacy
- 6. PC Connections
- 7. DTMF Tones
- 8. PTT Mode
- 9. Assisted Dialing

9. Memory

- 1. Save Options
- 2. Phone Memory
- 3. Card Memory

10. USB Mode

11. Phone Info

- 1. My Number
- 2. SW/HW Version
- 3. Icon Glossary
- 4. Software Update


12. Set-up Wizard

Icon Reference

Screen Icons

When the cellphone is turned on, the top line of the main display displays icons indicating the status of the cellphone.

	Digital indicator. Digital service is available.
	EVDO service indicator. EVDO service is available.
	1x service indicator. 1x service is available.
	Airplane Mode
	Battery Strength indicator. Indicates battery level. The more lines the stronger the charge.
	In Call State. A call is in progress. * No icon indicates the cellphone is in idle mode.
	Data Session
	Location On Mode
	E911 Only Mode
	No Service indicator. The cellphone is not receiving a system signal.
	Voice Privacy
	Roaming indicator. The cellphone is outside of the home service area.
	SSL (Secure Sockets Layer) is a protocol developed by Netscape Communications that uses encryption to secure data through the public Internet from client to server.
	TTY mode On
	Bluetooth® On
	Bluetooth® Device Connected
	Bluetooth® Discovery Mode

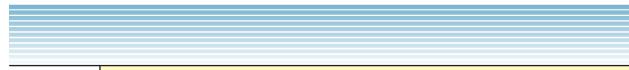 	
	PTT service is available.
	PTT service is available.
	PTT in use. A PTT call is in progress.
	Alarm Only
	Vibrate Only
	Sound Off
	Alarm On
	Calendar
	Missed Calls
	New Message
	New Voicemail
	Speakerphone mode

Recent Call Icons

The following icons are displayed in the Recent Calls lists (Missed, Received, Dialed, and All):

	indicates a dialed call.
	indicates a received call.
	indicates a missed call.



The following icons are displayed in case of PTT calls:

	Barge Call	Alert Call	Group Call
Received Call			
Dialed Call			
Missed Call			

PTT Screen Icons

The following icons are displayed on the incoming/outgoing PTT call screen or the PTT calls in the Recent Calls list:

	Connecting to [individual name]
	Connected to [individual name]
	Connecting to [group name]
	Connected to [group name]
	Talking to [individual name]
	Talking to [group name]
	Listening to [individual name]
	Listening to [group name]
	Alerting [individual name]
	Call ended [individual or group name]
	[Number of] Missed calls
	Individual available
	Individual unavailable

	Group available
	Group unavailable
	Received calls list - individual
	Dialed calls list - individual
	Received calls list - group
	Dialed calls list - group

Message Icons

The following icons are displayed in the Inbox message list:

	New/Unread Text or Web Messages
	Opened/Read Text or Web Messages
	New/Unread Picture/Video/Voice Notifications
	Opened/Read Picture/Video/Voice Notifications
	Unread Downloaded Picture/Video/Voice Messages
	Opened/Read Downloaded Picture/Video/Voice Messages
	Priority
	Locked Messages

The following icons are displayed in the Sent message list:

	Sent Messages
	Delivered Messages
	Sent failed Messages
	Incomplete delivery Messages
	Pending Messages

	Priority
	Locked Messages
The following icons are displayed in the Drafts message list:	
	Draft Text
	Draft Pictures/Videos/Voices
	Priority
	Locked Messages


Bluetooth® Icons

When the Bluetooth® wireless connection is active and paired devices are found, the following icons may appear:

	When an audio device is paired with your cellphone
	When a PC is paired with your cellphone
	When a PDA is paired with your cellphone
	When another cellphone is paired with your cellphone

When searching for a Bluetooth® wireless connection (neither connected nor paired), the following icons may appear:

	When your cellphone is searching for an audio device
	When your cellphone is searching for a PC
	When your cellphone is searching for a PDA
	When your cellphone is searching for another cellphone

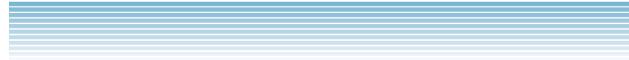 

When successfully connected, the following icons may appear:



When a headset is connected with your cellphone



Feature Overview

Water Resistance

The G'zOne ROCK™ is water resistant. It provides reliable performance for outdoor life, in such conditions as driving rain or high humidity.

The tested device meets the requirements of MIL-STD-810 (Rain & immersion 1m, 30min) standard.

NOTE

To maintain water resistance:

 
- Securely fasten the Charging/Data Port cover and the Headset Jack cover.
- Completely close the battery cover and rotate the battery lock to the LOCK position.

Shock Resistance

The rugged construction of the G'zOne ROCK™ provides outstanding shock and vibration resistance. The tested device meets the requirements of MIL-STD-810 (Drop 1.5m) standard.

Warning!

The shock and vibration resistance features do not guarantee protection against every type of shock and vibration. Your cellphone may be damaged and malfunction depending on the severity of received shock or vibration.

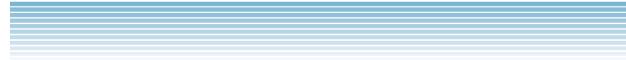

Dust Resistance

For additional peace of mind, the G'zOne ROCK™ is also dust resistant. The device was tested using silica flour at a temperature of 95F and meets the MIL-STD-810 (Dust) standard.

NOTES

- Your cellphone can be rinsed with clean water when dirty. To ensure water resistance, make sure that all covers are securely closed before rinsing.
- Periodically, clean the Charging Terminals with a dry cloth or cotton swab. Dust may cause some electrical connection problems. Avoid wiping with excessive force, which can disfigure the terminals.



Device Lock Tool

The screw type battery cover lock can be locked or unlocked by inserting the tip of the corner of the Device Lock Tool into its groove and rotating to FREE position or LOCK position. For how to close or open the battery cover, see page XX.

Device Lock Tool

Illustration

The Battery

The cellphone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize usage and standby time.

Warning!

- Use only approved batteries for the G'zOne ROCK™. Wipe your cellphone before opening the battery cover to prevent moisture or dust from entering.
- Failure to follow the below directions for installing/removing the battery could result in product failure.
- Fully charge the battery before using the cellphone for the first time.

Installing the Battery

Warning!

Do not install the battery where water or liquid may fall directly on the cellphone or battery or in a humid place such as a bathroom. Otherwise, the electrical circuits may short or erode and cause the cellphone to malfunction.

1. Insert the tip of the corner of the Device Lock Tool into the groove of the screw type battery cover lock and rotate in the direction indicated by the arrow in the figure to the right. Rotate the battery lock as far as it will go towards the FREE position.





2. Insert your finger in the groove (① in the figure to the right) on the left side of the cellphone and pull up the battery cover in the direction of the arrow ② in the figure to the right.



3. Insert the two tabs on the left side of the battery into the cellphone (in the direction of the arrow ① in the figure to the right) and insert the battery into the cellphone (in the direction of the arrow ② in the figure to the right).



4. Insert the three tabs at the bottom of the battery cover into the cellphone (in the direction of the arrow ① in the figure to the right) and insert the battery cover into the cellphone (in the direction of the arrow ② in the figure to the right).



5. Press four locations on both sides of the battery cover in the direction of the arrow in the figure to the right.



6. Slide your finger over both sides of the battery cover in the direction of the arrow and check that the battery cover is firmly in place.

