

# Contents

---

<b>Getting Started with Your Phone .....</b>	<b>4</b>
Phone Overview.....	4
Menu Overview.....	10
Icon Reference.....	14
Feature Overview.....	19
The Battery .....	21
Turning the Phone On and Off.....	27
Making a call .....	28
Answering a call .....	29
Menu Access.....	30
Using a Memory Card .....	31
Connecting the Headset.....	34
<b>Quick Access to Convenient Features .....</b>	<b>35</b>
Vibrate Mode .....	35
Mute Function .....	35
Volume Quick Adjustment .....	36
Speakerphone .....	36
Operating Your Cellphone with the Flip Closed.....	37
<b>Entering and Editing Information.....</b>	<b>39</b>
Text Input with the Flip Open .....	39
Text Input with the Flip Closed.....	40
<b>RECENT CALLS.....</b>	<b>44</b>
Accessing the Recent Calls submenu .....	44
Making a Call from Recent Calls .....	45
Viewing Recent Call History .....	45
View Timers.....	46
<b>CONTACTS .....</b>	<b>47</b>
Adding a new Contact from the idle screen .....	47
Adding a Phone Number from the idle screen .....	50

---

# Contents

---

Phone Numbers with Pauses.....	51
Accessing the Contacts submenu .....	52
New Contact.....	52
Contact List.....	52
Favorites .....	55
Groups.....	56
New PTT Contact.....	57
PTT Contact List .....	57
PTT Groups.....	58
Temp PTT Group.....	59
Speed Dials .....	60
In Case of Emergency (ICE).....	62
My Name Card.....	63

## **Push to Talk.....64**

About Push to Talk .....	64
Making a PTT Call.....	65
Incoming PTT Call .....	68

## **MEDIA CENTER.....70**

Music & Tones .....	70
Picture & Video .....	76
Games .....	92
Mobile Web.....	93
Browse & Download .....	97
Extras.....	98
My Documents.....	98
Info .....	99

## **MESSAGING .....**100

Accessing the Messaging submenu .....	100
New Message Alert .....	100
New Message.....	101

---

Inbox .....	106
Sent .....	108
Messages .....	109
Drafts .....	111
VoiceMail .....	112
Visual Voice Mail .....	112
Mobile IM .....	113
Email .....	113
Chat .....	114
Message Settings .....	114
Message Erase .....	116

## **SETTINGS & TOOLS .....** **117**

My Verizon .....	117
Tools .....	117
USB Mass Storage .....	125
Bluetooth Menu .....	125
Sounds Settings .....	134
Display Settings .....	137
Phone Settings .....	143
External Keylock Settings .....	152
Call Settings .....	153
Memory .....	158
USB Mode .....	160
Phone Info .....	161
Set-up Wizard .....	163


## **Index .....** **164**

# Getting Started with Your Phone

## Phone Overview



\* The surface of the display is made of reinforced glass.

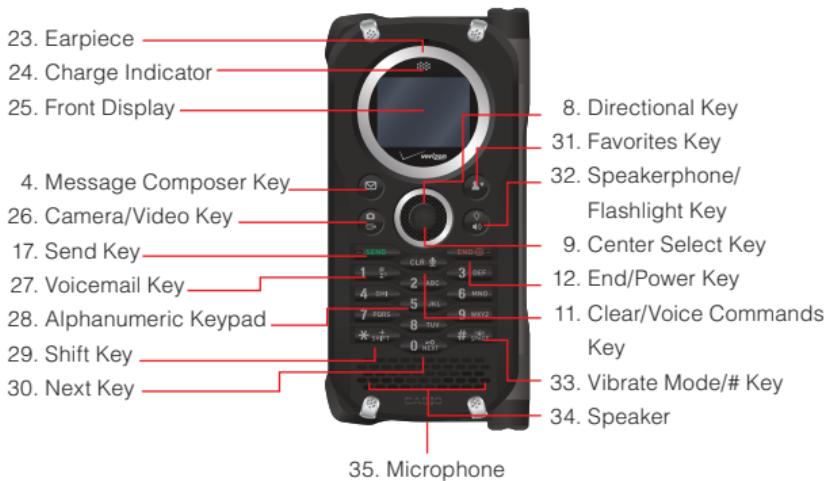

\*\* For best performance, do not touch this area when using your cellphone.

## 1. Main Display

## 2. Qwerty Keypad

For the entry of numbers, letters, and symbols or selection of menu items.

## 3. Left Soft Key

For the display of Message submenu or access to the function displayed at the bottom left of the Main Display.

## 4. Message Composer Key

For a new message creation by pressing the key in the idle screen, dialing screen, Contacts List, Favorites List, Recent Calls, My Pictures, My Sounds, My Videos.

## 5. Speakerphone/Shift/Caps Lock Key

For turning Speakerphone on/off from the idle screen and changing lowercase to uppercase or vice versa in the text entry mode.

## 6. Function Key

For the entry of right upper symbol on the key. To enter a symbol, press a key after pressing this Function Key  in the text entry mode.

## 7. Right Soft Key

For the display of Contacts from the idle screen or access to the function displayed at the bottom right of the Main Display.

## 8. Directional Key

For scrolling through cellphone menu options in the submenu or direct access to the cellphone function assigned to each key from the idle screen.

## 9. Center Select Key

For access to the MENU from the idle screen. The key can also be used to accept your choices when navigating through a menu.

**10.  AF Lock/Line Feed Key**

For the camera to automatically focus the subject and lock it in the Take Picture mode, and insertion of a line feed in the text entry mode.

**11.  /  Clear/Voice Commands Key**

For accessing to the Voice Commands function from the idle screen or to the Sound Recorder function by pressing and holding the key from the idle screen. When entering a phone number or text, the key is also used for the deletion of a single space or character. Entire words can be deleted by pressing and holding the key as well. Pressing this key once in a menu returns to the previous menu level.

**12.  /  End/Power Key**

For turning the cellphone on/off or ending a call or browser session. Within a menu, the key is used to return to the idle screen.

**13.  Vibrate Mode/Z Key**

For activation/deactivation of the vibrate mode in the idle screen.

**14.  Camera Key**

For quick access to the Take Picture mode in the idle screen.

**15.  Video Key**

For quick access to the Record Video mode in the idle screen.

**16.  /  Space/PTT Key**

For insertion of a space in the text entry mode. The key is used as a substitute of the PTT Key when the cellphone is in the PTT mode with the flip closed.

**17.  /  Send Key**

For placing/answering a call, or accessing to the All Calls list from the idle screen.

**18. Charging/Data Port**

**19.  PTT Key**

For the utilization of Push to Talk (PTT) when the cellphone is in PTT mode.

**20.  Volume Keys**

For the adjustment of master volume in the idle screen or voice volume during call in progress.

**21.  Music Key**

For quick access to My Music and capturing of an image in the Take Picture mode. This key also functions as recording key in the Record Video mode.

**22. Headset Jack**

For the connection of an external headset equipped with standard 2.5mm plug (sold separately).

**23. Earpiece****24. Charge Indicator**

Turns red while charging.

**25. Front Display****26.  Camera/Video Key**

For quick access to the Take Picture mode or Record Video mode by pressing and holding the key.

**27.  Voicemail Key**

For the connection to your Voicemail server from the idle screen by pressing and holding the key.

**28. Alphanumeric Keypad**

For the entry of numbers, letters, and symbols or selection of menu items.

**29.  Shift Key**

For entry of an asterisk (\*) character for calling features. The key is also used to change the character input type in text

entry mode. The plus sign (+) for international dialing, can be displayed by pressing and holding the key.

### 30. **Next Key**

For the display of other matching words in T9 Word or T9 Palabra mode.

### 31. **Favorites Key**

For quick access to the Favorites List in the idle screen.

### 32. **Speakerphone/Flashlight Key**

For turning Speakerphone on/off, or flashlight on/off by pressing and holding the key.

### 33. **Vibrate Mode/# Key**

For activation/deactivation of the vibrate mode in the idle screen. The key is also used to enter the number sign (#) character for calling features. In the text entry mode, the key can be used to accept the word and add a space.

### 34. **Speaker**

### 35. **Microphone**

### 36. **Internal Antenna Area**

### 37. **Camera Flash/Flashlight**

### 38. **Camera/Camcorder Indicator**

Blinks green in the Take Picture mode and Record Video mode and turns red when taking a picture or while recording video.

### 39. **Battery Cover Lock**

### 40. **Camera/Camcorder Lens**

### 41. **Battery Cover**

### 42. **Charging Terminals**

# Menu Overview



## Contacts

1. New Contact
2. Contact List
3. Favorites
4. Groups
5. New PTT Contact\*
6. PTT Contact List\*
7. PTT Groups\*
8. Speed Dials
9. In Case of Emergency
10. My Name Card



## Messaging

1. New Message
2. Inbox
3. Sent
4. Drafts
5. Voicemail
6. Visual Voice Mail
7. Mobile IM
8. Email
9. Chat



## Recent Calls

1. Missed
2. Received
3. Dialed
4. Blocked\*\*
5. All
6. View Timers



## My Ringtones



## Media Center

1. Music & Tones
  1. V CAST Music I  
Rhapsody
  2. Get New Ringtones
  3. My Ringtones
  4. My Music
  5. My Sounds
  6. Sync Music
2. Picture & Video
  1. V CAST Videos
  2. Get New Pictures
  3. My Pictures

\* These options are available only when the PTT feature is turned on.

\*\* Blocked appears only when Contacts Only or Block All is selected for Calls under MENU > Settings & Tools > Phone Settings > Security > Restrictions > Calls > Incoming Calls.

4. My Videos
5. Take Picture
6. Record Video
7. Online Album

### 3. Games

### 4. Mobile Web

### 5. Browse & Download

### 6. Extras

### 7. My Document



## My Pictures



## VZ Navigator



## Bluetooth



## Settings & Tools

### 1. My Verizon

### 2. Tools

1. Voice Commands
2. Calculator
3. Calendar
4. Alarm Clock
5. Stop Watch
6. Countdown Timer
7. World Clock
8. Notepad
9. USB Mass Storage

### 3. Bluetooth Menu

1. Add New Devices

### 4. Sounds Settings

1. Easy Set-up
2. Call Sounds
  1. Call Ringtone
  2. Call Vibrate
  3. Caller ID Readout
3. Alert Sounds
  1. TXT Message
  2. Media Message
  3. Voicemail
  4. Emergency Tone
  5. Missed Call
  6. PTT Alert
4. Keypad Volume
5. Digit Dial Readout
6. Service Alerts
  1. ERI
  2. Minute Beep
  3. Call Connect
7. Power On/Off
  1. Power On
  2. Power Off

### 5. Display Settings

1. Easy Set-up
2. Banner
  1. Personal Banner
  2. ERI Banner
3. Backlight
  1. Display
  2. Keypad

- 4. Wallpaper
  - 1. My Pictures
  - 2. My Videos
  - 3. Fun Animations
- 5. Display Themes
- 6. Main Menu Settings
- 7. Dial Fonts
- 8. Menu Font Size
- 9. Clock Format
  - 1. Main Clock
  - 2. Front Clock

## **6. Phone Settings**

- 1. Airplane Mode
- 2. Set Shortcuts
  - 1. Set My Shortcuts
  - 2. Set Internal  
Directional Keys
  - 3. Set Qwerty Shortcut
  - 4. Set Red Side Key
- 3. Voice Commands  
Settings
- 4. Language
- 5. Location
- 6. Current Country
- 7. Security
  - 1. Edit Codes
  - 2. Restrictions
  - 3. Phone Lock Setting
  - 4. Lock Phone Now
  - 5. Restore Phone

- 8. System Select
- 9. NAM Selection
- 10. External Keylock  
Settings
  - 1. Keylock Timer
  - 2. Unlock Options

## **7. Call Settings**

- 1. Answer Options
- 2. End Call Options
- 3. Auto Retry
- 4. TTY Mode
- 5. One Touch Dial
- 6. Voice Privacy
- 7. PC Connections
- 8. DTMF Tones
- 9. PTT Mode
- 10. Assisted Dialing

## **8. Memory**

- 1. Save Options
- 2. Phone Memory
- 3. Card Memory

## **9. USB Mode**

## **10. Phone Info**

- 1. My Number
- 2. SW/HW Version
- 3. Icon Glossary
- 4. Software Update

## **11. Set-up Wizard**

## Front Display Menu Displayed with the Flip Closed

### 1. Messaging

1. New Message
2. Inbox
3. Sent
4. Drafts

### 2. Contacts

1. New Contact
2. Contact List
3. Favorites
4. PTT Contact\*

### 3. Recent Calls

1. Missed
2. Received
3. Dialed
4. Blocked\*\*
5. All

### 4. Bluetooth

1. Add New Dev
2. Pairing Dev
3. BT Settings
1. Turn On/Turn Off
2. Discovery On/  
Discovery Off

### 5. Keylock

1. Keylock Timer
2. Unlock Option

### 6. My Music

1. Play All
2. Shuffle
3. Playlists

\* These options are available only when the PTT feature is turned on.

\*\* Blocked appears only when Contacts Only or Block All is selected for Calls under MENU > Settings & Tools > Phone Settings > Security > Restrictions > Calls > Incoming Calls.

# Icon Reference

## Screen Icons

When the cellphone is turned on, the top line of the main display displays icons indicating the status of the cellphone.

	Digital indicator. Digital service is available.
	3G service indicator. 3G service is available.
	1x service indicator. 1x service is available.
	Airplane Mode
	Battery Strength indicator. Indicates battery level. The more lines the stronger the charge.
	In Call State. A call is in progress. * No icon indicates the cellphone is in idle mode.
	Data Session
	Location On Mode
	E911 Only Mode
	No Service indicator. The cellphone is not receiving a system signal.
	Voice Privacy
	Roaming indicator. The cellphone is outside of the home service area.
	SSL (Secure Sockets Layer) is a protocol developed by Netscape Communications that uses encryption to secure data through the public Internet from client to server.
	TTY mode On
	Bluetooth® On
	Bluetooth® Device Connected
	Bluetooth® Discovery Mode

	PTT service is available.
	PTT service is available.
	PTT in use. A PTT call is in progress.
	Alarm Only
	Vibrate Only
	Sound Off
	Alarm On
	Calendar
	Missed Calls
	New Message
	New Voicemail
	Speakerphone mode

## Recent Call Icons

The following icons are displayed in the Recent Calls lists (Missed, Received, Dialed, and All):

	indicates a dialed call.
	indicates a received call.
	indicates a missed call.

The following icons are displayed in case of PTT calls:

	Barge Call	Alert Call	Group Call
Received Call			
Dialed Call			
Missed Call			

## PTT Screen Icons

The following icons are displayed on the incoming/outgoing PTT call screen or the PTT calls in the Recent Calls list:

	Connecting to [individual name]
	Connected to [individual name]
	Connecting to [group name]
	Connected to [group name]
	Talking to [individual name]
	Talking to [group name]
	Listening to [individual name]
	Listening to [group name]
	Alerting [individual name]
	Call ended [individual or group name]
	[Number of ] Missed calls
	Individual available
	Individual unavailable

	Group available
	Group unavailable
	Received calls list - individual
	Dialed calls list - individual
	Received calls list - group
	Dialed calls list - group

## Message Icons

The following icons are displayed in the Inbox message list:

	New/Unread Text or Web Messages
	Opened/Read Text or Web Messages
	New/Unread Picture/Video/Voice Notifications
	Opened/Read Picture/Video/Voice Notifications
	Unread Downloaded Picture/Video/Voice Messages
	Opened/Read Downloaded Picture/Video/Voice Messages
	Priority
	Locked Messages

The following icons are displayed in the Sent message list:

	Sent Messages
	Delivered Messages
	Sent failed Messages
	Incomplete delivery Messages
	Pending Messages

	Priority
	Locked Messages

The following icons are displayed in the Drafts message list:

	Draft Text
	Draft Pictures/Videos/Voices
	Priority
	Locked Messages

## Bluetooth® Icons

When the Bluetooth® wireless connection is active and paired devices are found, the following icons may appear:

	When an audio device is paired with your cellphone
	When a PC is paired with your cellphone
	When a PDA is paired with your cellphone
	When another cellphone is paired with your cellphone

When searching for a Bluetooth® wireless connection (neither connected nor paired), the following icons may appear:

	When your cellphone is searching for an audio device
	When your cellphone is searching for a PC
	When your cellphone is searching for a PDA
	When your cellphone is searching for another cellphone

When successfully connected, the following icons may appear:



When a headset is connected with your cellphone

## Feature Overview

### Water Resistance

The G'zOne XXXXXX is water resistant. It provides reliable performance for outdoor activities, and in wet conditions such as driving rain or high humidity.

The tested device meets the requirements of MIL-STD-810F (Rain & immersion 1m, 30min) standard.

#### **Warning!**

Do not use the cellphone in water.

#### **NOTE**

To maintain water resistance:

- Securely fasten the Charging/Data Port cover and the Headset Jack cover.
- Completely close the battery cover and rotate the screw type battery cover lock to the LOCK position.

### Shock Resistance

The rugged construction of the G'zOne XXXXXX provides outstanding shock and vibration resistance. The tested device meets the requirements of MIL-STD-810F (Drop 1.22m) standard.

**Warning!**

The shock and vibration resistance features do not guarantee protection against every type of shock and vibration. Your cellphone may be damaged and malfunction depending on the severity of received shock or vibration.

**Dust Resistance**


For additional peace of mind, the XXXXXX is also dust resistant. The device was tested using silica flour at a temperature of 95F and meets the MIL-STD-810F (Dust) standard.

**NOTES**

- Your cellphone can be rinsed with clean water when dirty. To ensure water resistance, make sure that all covers are securely closed before rinsing.
- Periodically, clean the Charging Terminals and the Battery Terminals with a dry cloth or cotton swab. Dust may cause some electrical connection problems. Avoid wiping with excessive force, which can disfigure the terminals.



Charging Terminals

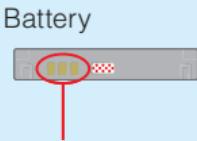

Battery Terminals

**Warning!**

Do not clean terminals inside the cellphone, or they may be deformed.