

# The Battery

The cellphone comes with a rechargeable battery.

## **Warning!**

- Use only approved batteries for the G'zOne XXXXXX. Wipe your cellphone before opening the battery cover to prevent moisture or dust from entering.
- Failure to follow the below directions for installing/removing the battery could result in product failure.
- Fully charge the battery before using the cellphone for the first time.

## Installing the Battery

## **Warning!**

Do not install the battery where water or liquid may fall directly on the cellphone or battery or in a humid place such as a bathroom. Otherwise, the electrical circuits may short or erode and cause the cellphone to malfunction.

1. Slide the Battery Cover Lock to the FREE position in the direction of the arrow in the figure to the right.



2. Insert your nails of the thumb in the recesses of the battery cover indicated with arrows in the figure to the right, and slightly move its both ends up.



**3.** Insert your fingertip into the recess ①, and then pull the battery cover up to the direction ② as indicated in the figure to the right.



**4.** Insert the two tabs on the left side of the battery into the cellphone (in the direction of the arrow ① in the figure to the right) and insert the battery into the cellphone (in the direction of the arrow ② in the figure to the right).



**5.** Place the battery cover properly on the cellphone, and then press six locations on both sides of the battery cover in the direction of the arrow in the figure to the right.



**6.** Slide your finger over both sides of the battery cover in the direction of the arrow and check that the battery cover is firmly in place.



**7.** Slide the Battery Cover Lock to the LOCK position in the direction of the arrow in the figure to the right.



**Warning!**

- Follow steps 1 to 3 to remove the battery cover instead of prying it open at one location. Otherwise, the battery cover and/or the cellphone may be damaged.
- If you are using a wrist strap (purchased separately), be careful not to get it caught between the battery cover and cellphone, in order to maintain waterproofing.

## Removing the battery

1. To remove the battery cover, perform steps 1 through 3 under "Installing the Battery" on page XX.
2. Gently pull the tab of the battery up in the direction of arrow ① in the figure to the right to draw out one side of battery, and then slide and remove it in the direction of arrow ②.


**Warning!**

Do not leave the removed battery where it can overheat such as near a flame, stove, or under direct sunlight. Otherwise, it may burst, malfunction, or ignite -causing fire. Do not hit or exert excessive shock on the battery, as it can ignite or break.

## Charging the Battery

To charge your battery:

1. Connect the Wall Charger to the Handset Charging Cradle (included in box).
2. Plug the Wall Charger power plug into an electrical outlet.
3. Insert the cellphone into the Handset Charging Cradle.

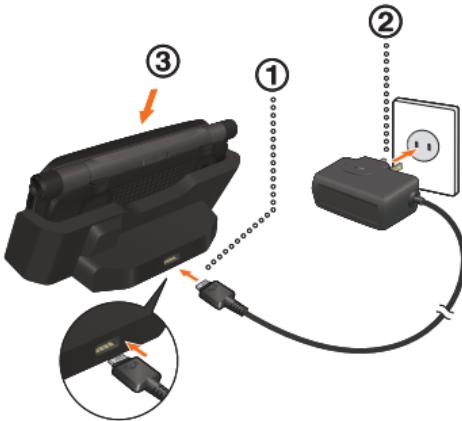

**Warning!**

- Hold the Wall Charger power plug horizontally and carefully insert it into the Handset Charging Cradle.
- Whenever placing the cellphone into or removing it from the Handset Charging Cradle, hold the cradle steady as shown in the figure to the right. Slide the cellphone along the guides on the cradle back support.
- The Charge Indicator is turns red while charging. Even if the cellphone is inserted in the Handset Charging Cradle, the cellphone will not charge if the Charge Indicator does not turn on. Firmly insert the cellphone into the Handset Charging Cradle until you see the Charge Indicator illuminate.
- Do not connect Wall Charger to the Charging/Data Port, when a cellphone is charging in the charging cradle. Damage or overheating may result.



## Charging the battery by directly connecting the Wall Charger

You can also charge the battery by directly connecting the Wall Charger to the Charging/Data Port and plugging the power plug into an electrical outlet.

1. To open the Charging/Data Port cover, insert your finger tip into the notch near the Charging/Data Port cover and pull the cover to open.



2. Plug the Wall Charger power plug into an electrical outlet and the Wall Charger connector to the Charging/Data Port.



3. When the cellphone is completely charged, unplug the Wall Charger connector and push the center of the port cover into the Charging/Data Port.



4. Make sure the port cover is completely closed.

**Warning!**

- Do not forcibly insert the Wall Charger power plug into the Charging/Data Port. Hold it horizontally and carefully insert it into the Charging/Data Port.
- Failure to completely reseal the Charging/Data Port after charging may allow liquids to enter the casing, and damage the cellphone.

## Battery Level

The battery level is shown at the top of the main display. When the battery level becomes low, the low battery sensor alerts you in three ways: an audible tone will sound, the battery icon will begin to blink, and **BATTERY LOW** will appear on the display. If the battery level becomes too low, the phone automatically powers off and any function in progress will not be saved.



Fully Charged



Fully Discharged

### NOTE

The charge time varies depending upon the battery level.

## Turning the Phone On and Off

### Turning the Phone On

1. With the flip either open or closed, press and hold the End/Power Key until the display lights up.

### NOTE

Avoid any unnecessary contact with the internal antenna area while your cellphone is on.

### Turning the Phone Off

1. With the flip either open or closed, press and hold the End/Power Key until the display turns off.

## Making a call

1. From the idle screen with the flip either open or closed, enter a phone number (include the area code if needed).
2. Press the Send Key to make a call.
3. Press the End/Power Key to end a call.

### NOTE

When you make a call with the flip open, the alphabetical characters entered in the dial up window will be converted into the corresponding numbers when origination a call. The following table shows the mapping between alphabetical characters and numbers.

Alphabetical characters	Converted Numbers
a/b/c	2
d/e/f	3
g/h/i	4
j/k/l	5

Alphabetical characters	Converted Numbers
m/n/o	6
p/q/r/s	7
t/u/v	8
w/x/y/z	9

## Correcting Dialing Mistakes

If you make a mistake while dialing a number, press the Clear Key  /  once to erase the last digit entered, or press and hold the Clear Key  /  to delete all digits.

## Redialing Call

1. From the idle screen with the flip either open or closed, press the Send Key twice to redial the last number you dialed.

# Answering a call

## NOTES

- Since the answer option is set to Flip Open as default, you can directly answer an incoming call by simply opening the cellphone. For how to select an answer option, see page XXX.
- Caller ID displays the number of the person calling when your cellphone rings. If the caller's identity is stored in Contacts, the name appears on the screen.

1. When the cellphone rings or vibrates with the flip either open or closed, press the Send Key to answer an incoming call.
2. Press the End/Power Key to end a call.

## NOTE

When you ignore an incoming call by pressing the Right Soft Key **[Ignore]**, you are prompted whether to send a text message to a caller. Selecting **Yes** and pressing the Center Select Key **[OK]** displays the Quick Text list. You can select an appropriate text phrase from the list and press the Center Select Key **[OK]** to create a text message to a caller. For how to create a text message, see page XX.

## Call Waiting

If you are on a call and you receive another incoming call, you will hear two beeps. With Call Waiting, you may put the active call on hold while you answer the incoming call. To use Call Waiting:

1. With the flip either open or closed, press the Send Key to answer the waiting call.
2. Press the Send Key again to switch between calls.

## Menu Access

To display the Main Menu from the idle screen, press the Center Select Key **[MENU]**.

To use the menu:

- Press the Directional Key  up, down, left or right to select your desired menu item then press the Center Select Key **[OK]**.
- Or enter the number or alphabet that corresponds to the menu or submenu item.

There are three Main Menu types: **Tab**, **List**, and **Grid**.

### NOTES

- All directions in this manual assume that Main Menu Settings is set to **•••** and **•••**, and Display Themes is set to **•••**, which are the default settings.
- For information about how to switch between Main Menu types, see page XXX.

## Grid Menu

The Grid Menu has nine items.

1. From the idle screen, press the Center Select Key **[MENU]**.
2. Press the Directional Key  up, down, left or right to select your desired menu option then press the Center Select Key **[OK]**.

### NOTE

When navigating within menus and submenus or when configuring your cellphone's settings, you can return to the previous screen or step by pressing the Clear Key  / .

## Selecting Menu with the Flip Closed

When you press the Center Select Key from the idle screen with the flip closed, the front display Menu is always displayed in the list layout regardless of the menu layout selected in the Main Menu Settings.

1. From the idle screen with the flip closed, press the Center Select Key.
2. Press the Directional Key  up or down to select your desired menu option, and then the Center Select Key.

## Using a Memory Card

The G'zOne XXXXXXX supports the use of a microSD™ memory card as a source of external memory.

### NOTE

The microSD™ memory card is sold separately.

## Installing a Memory Card

### **Warning!**

- Whenever installing or removing a memory card, make sure the cellphone is turned off and that the Wall Charger is not connected.
- When installing or removing a memory card, avoid touching the memory card contacts and avoid damaging the memory card. Either can cause malfunction or loss of data.
- The front and back of the memory card look different. When inserting the memory card, make sure the correct side is facing up. If not, the memory card may not be removed, or the memory card and/or memory card slot may be damaged.



Insert like this.

- Do not forcibly insert the memory card into the memory card slot. Hold it horizontally and carefully insert it.
- Failure to completely reseal the battery cover after installing may result in damage if the cellphone is exposed to water.

### **NOTE**

For information about how to remove and install the battery, see page XX.

1. Remove the battery cover and the battery.
2. Carefully press the memory card into the memory card slot until it locks into place.
3. Install the battery and the battery cover.



## Removing a Memory Card

### **Warning!**

- Never remove a memory card from the cellphone while it is being accessed. Doing so can damage the memory card or the data stored on it.
- The memory card is very small. Make sure you do not drop it.
- Failure to completely reseal the battery cover after removing may result in damage if the cellphone is exposed to water.

### **NOTE**

For information about how to remove and install the battery, see page XX.

1. Remove the battery cover and the battery.
2. Gently press the memory card into the memory card slot. This will cause the memory card to eject slightly from the slot.
3. Pull it out the rest of the way.
4. Install the battery and the battery cover.



## Connecting the Headset

You can connect a compatible headset equipped with a standard 2.5mm plug to your cellphone for safe, convenient, hands-free conversations.

1. To open the Headset Jack cover, insert your finger in the depression of the cellphone near the Headset Jack cover and lift open.
2. Plug the headset connector into the Headset Jack.



### **Warning!**

- Do not forcibly insert/remove the headset plug into/from the Headset Jack. Hold it horizontally and carefully insert/remove it.
- Failure to completely reseal the Headset Jack after using may result in damage if the cellphone is exposed to water.

# Quick Access to Convenient Features

## Vibrate Mode

Vibrate Mode mutes key tones and activates an alert for an incoming call or message. To activate Vibrate Mode from the idle screen with the flip open, press . Press  again, to deactivate Vibrate Mode.

### NOTE

With the flip closed, press and hold  to activate Vibrate Mode from the idle screen. Press and hold  again, to deactivate Vibrate Mode.

## Mute Function

If you press the Left Soft Key **[Mute]** during a call with the flip open, the person you are speaking with cannot hear you or any sounds from your side of the conversation. However, you can still hear them.

To activate Mute:

1. During a call, press the Left Soft Key **[Mute]**.
2. To unmute, press the Left Soft Key **[Unmute]**.

### NOTE

To activate Mute with the flip closed:

1. During a call, press the Center Select Key on the front of the cellphone.
2. Select **Mute**, then press the Center Select Key.
3. To unmute, press the Center Select Key, select **Unmute**, then press the Center Select Key.

## Volume Quick Adjustment

1. With the flip either open or closed, press the Volume Keys  up or down to select from: **All Sounds Off, Alarm Only, Vibrate Only, Low, Medium Low, Medium, Medium High and High.**
2. Press the Center Select Key **[OK]** to save. Or, press the Left Soft Key **[Play]** to check the ringtone's volume.

### NOTE

The keypad volume is adjusted through the Menu. For more detail, see page XXX.

### NOTE

With the flip either open or closed, press and hold the Volume Key  Down to enable the Sounds Off mode. Sounds Off mode turns off all phone sounds. Press and hold the Volume Key  Up to revert to Normal Mode.

## Speakerphone

To activate and deactivate the speakerphone with flip open:

1. To activate, press the Speakerphone Key  from the idle screen.
2. To deactivate, press the Speakerphone Key  again.

**NOTE**

To activate and deactivate the speakerphone with the flip closed:

1. To activate, press the Speakerphone/Flashlight Key  from the idle screen.
2. To deactivate, press the Speakerphone/Flashlight Key  again.

## Operating Your Cellphone with the Flip Closed

With the flip closed, you can operate your cellphone using the Alphanumerical Keypad and side keys. The following functions are available with the flip closed:

**Call Feature:** Able to make phone call by entering a phone number or answer an incoming call with the flip closed.

**Push to Talk:** Able to use the Using Push to Talk feature.

**Messaging:** Able to send a text messages or view the Inbox, Sent, and Drafts folders.

**Contacts:** Able to register a new contact or view and use the Contact List, Favorites, and PTT Contact List for a phone call.

**Recent Calls:** Display a Recent Calls list such as Dialed and Received and use it for a phone call.

**Bluetooth Menu:** Able to add and pair a Bluetooth® device with your cellphone, and also turn the Bluetooth® function On/Off and the Discovery Mode On/Off.

**Keylock Setting:** Able to set the Keylock Timer and Unlock Option.

**My Music:** Able to playback songs stored in My Music.

**Camera:** Able to take a picture in the Take Picture mode or record video in the Record Video mode, with the front display used as the Viewfider.

**Voice Commands:** Able to use the Voice Commands by pressing the Clear/Voice Commands Key .

**Sound Recorder:** Able to recording sound with the Sound Recorder which is activated by pressing and holding the Clear/voice Commands Key .

### NOTES

- When registering a contact with the flip closed, only Name/ Mobile 1/Home/Work/Zip Code fields can be registered.
- Available functions are limited when the flip is closed. To fully use the cellphone functions, use it with the flip open.

## Text Input with the Flip Open

With the flip open, you can enter or edit Messages, Contacts, and Schedule using the Qwerty Keypad.

### Key Functions



**Left Soft Key [Symbols]:** Press to display the SYMBOLS popup box for the selection of a symbol.



**Shift/Caps Lock:** Press to change case.



**Function:** Press to enter the right upper symbol on the key after pressing the Function Key



**Space:** Press to insert a space.



**Clear:** Press to delete a single space or character. Press and hold to delete entire words.

### Entering Symbols using the SYMBOLS entry box

There are 60 symbols including "SP" which inserts a space and "LF" a line feed to move the text to the next line, if any.

To insert symbols or punctuation:

1. From the text entry screen with the flip open, press the Left Soft Key **[Symbols]**.
2. Press the Right Soft Key **[Next]** to view the next 12 symbols or Left Soft Key **[Prev]** to view the previous 12 symbols.
3. Select the symbol you want to insert, then press the Center Select Key **[OK]**.

# Text Input with the Flip Closed

With the flip closed, you can enter or edit Messages and Contacts using the front Alphanumeric Keypad.

With the flip closed, you can also enter a text in any of 5 modes including T9 Word and T9 Palabra modes.

## Key Functions



**Shift:** Press to change case.

**T9 Word: T9 Word → T9 WORD → T9 word**

**Abc text: Abc → ABC → abc**

**T9 Palabra: T9 Palabra → T9 PALA. → T9 palabra**



**Next:** T9 Word or T9 Palabra mode to display other punctuation and symbols. Pressing  after pressing  displays other punctuation and symbols.



**Space:** Press to complete a word and insert a space.



**Clear:** Press to delete a single space or character. Press and hold to delete entire words.

## Using Abc (Multi-tap) Text Input

To enter words in this mode, you need to press each key repeatedly until the desired letter appears. It can also be used to add words to the T9 database.

**Example:** From the text entry screen with the flip closed, in Abc mode, press       , wait one second, then press  . “Vzw” is displayed.

### NOTES

- Abc is the default text entry mode.
- Press and hold the alphanumeric key to enter a number in Abc mode.

## Using T9 Word Mode Text Input

T9 Word mode incorporates a built-in-dictionary to determine a word based on the entered characters. A word can be entered more quickly by pressing each key once per character.

To type the message “Call the office.” follow these steps from the text entry screen:

1. From the text entry screen with the flip closed, press the Center Select Key **[Options]**.
2. Select **Entry Mode**, then press the Center Select Key.
3. Select **T9 Word**, then press the Center Select Key.
4. Press .
5. Press to complete the word and add a space.
6. Press   
 .

“Call the office.” is displayed.

### NOTES

- After you have finished entering a word, if the word displayed is not the one you want, press the Next Key to display additional word choices.
- Pressing after pressing to input a period displays other punctuation and symbols.

## Adding Words to the T9 Database

If a word is not in the T9 database, add it by using Abc (Multi-tap) mode text entry. To add a new word:

1. From the text entry screen with the flip closed, in Abc mode, press . “Kop” is displayed.
2. Press the Center Select Key **[Options]**.

3. Select **Entry Mode**, then press the Center Select Key.
4. Select **T9 Word**, then press the Center Select Key.
5. Press and hold the Clear Key  to erase the existing word.
6. Press   . "Kop" is displayed.
7. Press  to accept your choice and add a space.

## Using 123 (Numbers) Text Input

To type numbers using one keystroke per number:

1. From the text entry screen with the flip closed, press the Center Select Key **[Options]**.
2. Select **Entry Mode**, then press the Center Select Key.
3. Select **123**, then press the Center Select Key.
4. Press       . "5551212" is displayed.

## Using Symbol Text Input

There are 36 symbols including "SP" which inserts a space and "LF" which moves the text to the next line.

To insert symbols or punctuation:

1. From the text entry screen with the flip closed, press the Center Select Key **[Options]**.
2. Select **Entry Mode**, then press the Center Select Key.
3. Select **Symbols**, then press the Center Select Key.
4. Press the Favorites Key  **[Next]** to view the next 12 symbols or the Message Composer Key  **[Prev]** to view the previous 12 symbols.
5. Select the symbol you want to insert, then press the Center Select Key **[OK]** to select it.


## Using T9 Palabra Mode Text Input

The T9 Palabra mode is a T9 mode for Spanish input.

To type the message “Llame la oficina.” follow these steps from the text entry screen:

1. From the text entry screen with the flip closed, press the Center Select Key **[Options]**.
2. Select **Entry Mode**, then press the Center Select Key.
3. Select **T9 Palabra**, then press the Center Select Key.
4. Press **5 JKL** **5 JKL** **2 ABC** **6 MNO** **3 DEF**.
5. Press **# SPACE** to complete the word and add a space.

6. Press **2 ABC** **2 ABC** **# SPACE**

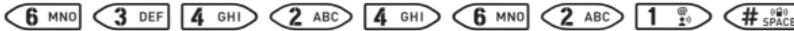

“Llame la oficina.” is displayed.

# RECENT CALLS

The Recent Calls menu is a list of the last phone numbers or Contact entries for calls (including PTT calls) you placed, accepted, missed, or blocked. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

## Accessing the Recent Calls submenu

1. From the idle screen with the flip open, press the Center Select Key **[MENU]**, then select **Recent Calls** and press the Center Select Key **[OK]**.
2. Select a submenu.

**Missed:** Displays a list of the 90 most recently missed calls.

**Received:** Displays a list of the 90 most recently received calls.

**Dialed:** Displays a list of the 90 most recently dialed calls.

**Blocked:** Displays a list of the 90 most recently blocked calls.

**All:** Displays a list of the 270 most recent calls.

**View Timers:** Displays the duration of selected calls.

- If you select **Blocked**, enter the four-digit Lock Code, then press the Center Select Key **[OK]**. The default Lock Code is the last 4 digits of your cellphone number.

### NOTES

- Pressing the Send Key from the idle screen with the flip either open or closed takes you to the All Calls list.
- Blocked appears only when Contacts Only or Block All is selected for Calls under MENU > Settings & Tools > Phone Settings > Security > Restrictions > Calls > Incoming Calls. For information about how to configure this setting, see page XXX.

## Making a Call from Recent Calls

1. From the **Recent Calls** submenu, select one of the following call lists:  
**Missed/Received/Dialed/Blocked/All**
2. Scroll to highlight an entry, then press the Send Key to make the call.

## Viewing Recent Call History

1. From the **Recent Calls** submenu, select one of the following call lists:

**Missed/Received/Dialed/Blocked/All**

2. Scroll to highlight a call entry, then:
  - Press the Center Select Key **[OPEN]** to view the entry.
  - Press the Right Soft Key **[Options]** to select:
    - Save to Contacts:** Stores the phone number in your Contacts.
    - Save to PTT Contacts:** Stores the phone number in your PTT Contacts.
    - Details:** Displays the entry content.
    - Erase:** Erases the entry from the call list.
    - Lock/Unlock:** Locks or unlocks the entry in the call list.
    - Erase All:** Erases all the entries in the selected call list.
    - View Timers:** Displays the duration of the call.
  - Press the Left Soft Key **[Message]** to select:  
**New TXT Message/New Picture Message/New Video Message/New Voice Message**
    - If you selected a PTT Contact, press the Right Soft Key **[Options]** to select:  
**New TXT Message/New Picture Message/New Video Message/New Voice Message/Save to Contacts/Save to PTT Contacts/Erase/Lock (Unlock)/Erase All/View Timers**

- If you selected a PTT Group or Temp PTT Group from the Missed or Received Calls list, press the Right Soft Key **[Options]** to select:  
**New TXT Message/New Picture Message/New Video Message/New Voice Message/Save to Contacts/Save to PTT Contacts/Erase/Lock (Unlock)/Erase All/View Timers**
- If you selected a PTT Group or Temp PTT Group from the Dialed Calls list, press the Right Soft **[Options]** to select:  
**Erase/Lock (Unlock)/Erase All/View Timers**

## View Timers

To view the duration of selected calls:

1. From the **Recent Calls** submenu, select **View Timers**, then press the Center Select Key **[OK]**.
2. Scroll to highlight a call list. Call timers include:

**Last Call/All Calls/Received Calls/Dialed Calls/Roaming Calls/Transmit Data/Received Data/Total Data/Last Reset/Lifetime Calls/Lifetime Data Counter**

- Press the Left Soft Key **[Reset]** to reset highlighted timer.
- Press the Right Soft Key **[Reset All]** to reset all timers.

The Contacts menu allows you to store names, phone numbers and other information in your cellphone's memory. You may store up to 500 entries.

## Adding a new Contact from the idle screen

1. From the idle screen with the flip open, enter the phone number (up to 48 characters) you want to register.
2. Press the Right Soft Key **[Options]**.

### NOTE

Pressing the Right Soft Key **[Options]** allows you to access the following options:

**Add 2-Sec Pause:** Inserts a 2-sec Pause into the number.

**Add Wait:** Inserts a Wait pause into the number.

**Add From Contact:** Adds a phone number which is stored in the Contact List.

**Add From Recent Call:** Adds a phone number which is stored in the Recent Calls.

**Save to Contacts:** Saves the phone number to the Contact List.

**Save to PTT Contacts:** Saves the phone number to the PTT Contact List.

**New TXT Message:** Sends a text message to the given phone number.

**New Picture Message:** Sends a picture message to the given phone number.

**New Video Message:** Sends a video message to the given phone number.

**New Voice Message:** Sends a voice message to the given phone number.

**Assisted Dialing:** Sets the Assisted Dialing setting. For more detail, see page XXX.

3. Press  **Save to Contacts**,  **Add New Contact**.
4. Select the type of phone number you want to save, then press the Center Select Key **[OK]**.

#### **Mobile 1/Mobile 2/Home/Work**

5. Scroll to highlight the information field you want to enter. These fields include:

**Name/Mobile 1/Home/Work/Email 1/Group/Picture/  
Ringtone/Mobile 2/IM Screen Name/Email 2/Street/City/  
State/Zip Code/Country**

- To add the name, scroll to highlight the **Name** field, then enter a name for the contact (up to 32 characters).
- To add the phone number, scroll to highlight the **Mobile 1**, **Home**, **Work**, or **Mobile 2** field, then enter the phone number (up to 48 characters).
- To add an e-mail address, scroll to highlight the **Email 1** or **Email 2** field, then enter an e-mail address (up to 48 characters).
- To add the Contact entry into a group, scroll to highlight the **Group** field, then press the Left Soft Key **[Set]**. Then select the Group, press the Center Select Key **[MARK]**, press the Left Soft Key **[Done]**.
- To assign the Picture ID, scroll to highlight the **Picture** field, then press the Left Soft Key **[Set]**. Then select a picture, press the Center Select Key **[OK]**.

- To assign the call ringtone, scroll to highlight the **Ringtone** field, then press the Left Soft Key [**Set**]. Then select a ringtone, press the Center Select Key [**OK**].
- To add the IM Screen Name, scroll to highlight the **IM Screen Name** field, then press the Left Soft Key [**Set**]. Then select a service provider, press the Center Select Key [**OK**]. Enter the IM Screen Name, then press the Center Select Key [**SAVE**].
- To add street address, scroll to highlight the **Street, City, State, Zip Code**, or **Country** field then enter street, city, state, zip code, or country.

**6.** Select the entered phone number field and press the Right Soft Key [**Options**] to select one of the following options, as desired:

**Set Speed Dial/Set As Default/Add 2-Sec Pause/Add Wait**

- To add the Contact entry to the Speed Dial list, press **[1] Set Speed Dial**. Select the desired Speed Dial digit by using the keypad or by scrolling to highlight it, then press the Center Select Key [**SET**]. Press the Center Select Key [**OK**] to select **Yes**.
- To set the phone number as the Default Number, press **[2] Set As Default**, then press the Center Select Key [**OK**] to select **Yes**.
- To insert a pause to an existing number, press **[3] Add 2-Sec Pause** or **[4] Add Wait**.

**NOTE**

- A phone number entered when the new Contact is created becomes the Default Number. If more than one number is entered for the Contact entry, another number can be selected as the Default Number.

7. After entering the information as necessary, press the Center Select Key **[SAVE]** to save.
8. **CONTACT SAVED** appears on the display. The phone number reappears on screen. Press the End/Power Key to exit, or press the Send Key to make a call to the displayed phone number.

## Adding a Phone Number from the idle screen

1. From the idle screen with the flip open, enter the phone number (up to 48 characters) you want to register.
2. Press the Right Soft Key **[Options]**, then press  **Save to Contacts**,  **Update Existing**.
3. Scroll to highlight the existing Contact entry you want to update, then press the Center Select Key **[OK]**.
4. Select the phone number type, then press the Center Select Key **[OK]**.

### Mobile 1/Mobile 2/Home/Work

If a phone number is already assigned to the field you selected, **Entry is already assigned. Overwrite?** appears on the display. Select **Yes** to overwrite, then press the Center Select Key **[OK]**.

5. Perform steps 5 through 8 under "Adding a new Contact from the idle screen" on page XX, to update and save the Contact entry. When the phone number you selected is already registered, **CONTACT UPDATED** appears on the display. The phone number reappears on screen. Press the End/Power Key to exit, or press the Send Key to make a call to the displayed phone number.

## Phone Numbers with Pauses

Pauses are used for automated systems (e.g. voicemail or calling cards). Insert a pause after a set of numbers then enter another set. The second set of numbers is dialed after the pause. This feature is useful for dialing into systems that require a code. There are two different types of pauses you can use when registering a phone number:

- **Wait (W):** The cellphone stops dialing until you press the Left Soft Key **[Release]** to advance to the next number.
- **2-Sec Pause (P):** The cellphone waits 2 seconds before dialing the next set of numbers automatically.

## Registering a Phone Number with Pauses

1. From the idle screen with the flip open, enter the phone number.
2. Press the Right Soft Key **[Options]**, then press **[1] Add 2-Sec Pause** or **[2®] Add Wait**.
3. Enter additional number(s) (e.g. PIN number or credit card number).
4. Press the Right Soft Key **[Options]**, then press **[5%] Save to Contacts**, **[1] Add New Contact**.
5. Perform steps 4 through 8 under “Adding a new Contact from the idle screen” on page XX, to add and save the Contact entry.

## Accessing the Contacts submenu

1. From the idle screen with the flip open, press the Center Select Key **[MENU]**, select **Contacts** and press the Center Select Key **[OK]**.
2. Select a submenu:

**New Contact/Contact List/Favorites/Groups/New PTT  
Contact/PTT Contact List/PTT Groups/Speed Dials/In Case  
of Emergency/My Name Card**

### NOTE

When on the idle screen with the flip open, the Right Soft Key **[Contacts]** functions as a hot key to access the Contact List.

## New Contact

To add a new number to your Contact List:

1. From the **Contacts** submenu, press  **New Contact**.
2. Perform steps 5 through 8 under "Adding a new Contact from the idle screen" on page XX, to add and save the Contact entry.

### NOTE

Using this submenu, the number is saved as a new Contact. To save the number into an existing Contact, edit the Contact entry.

## Contact List

To view your Contact List:

## NOTE

Your cellphone is able to perform a dynamic search of the contents in your cellphone's memory. A dynamic search compares entered letters or numbers against the entries in your Contacts, and displays matches in alphabetical order. You can then select a number from the list to call or edit. You may locate a contact by:

- Searching by Letter
- Scrolling Alphabetically

### 1. From the **Contacts** submenu, press **Contact List**.

Or, from the idle screen, press the Right Soft Key **[Contacts]**. The list of names in your contacts is displayed alphabetically.

### 2. Searching by Letter: Enter a name or beginning letters of a name in the **Go To** Field at the bottom of the screen.

Scrolling Alphabetically: Press the Directional Key  up or down to scroll through your Contact List. You can select one of the following options:

- To view the contact information, press the Center Select Key **[VIEW]**.
- To edit the entry, press the Left Soft Key **[Edit]**.
- Press the Right Soft Key **[Options]** to select one of the following options:

**New Contact/Erase/New TXT Message/New Picture**

**Message/New Video Message/New Voice Message/Send**

**IM/Set As Favorite (Unassign Favorite)/Set As ICE Contact**

**(Unassigned ICE contact)/Call/Manage Contacts/Send**

**Name Card/Save To PTT Contacts**

## Making a Call from Your Contacts

Once you have registered phone numbers into your Contacts, you can make calls to those numbers quickly and easily.

1. From the **Contacts** submenu, press  **Contact List**.
2. Select the Contact entry, then press the Center Select Key **[VIEW]**.
3. Select the phone number, then press the Send Key to make the call.

### NOTES

- Selecting the Contact entry and then pressing the Send Key will dial the Default Number of the Contact entry automatically. If multiple numbers are saved in the Contact entry, select the number you want to dial by pressing the Directional Key  left or right, then press the Send Key.
- Selecting the Contact entry and then pressing the Message Composer Key  will create a text message to be sent to the Default Number of the Contact entry as destination. If multiple phone numbers and/or e-mail addresses are saved in the Contact entry, select the phone number or e-mail address as destination to which you want to send by pressing the Directional Key  left or right, and then Message Composer Key  to create a text message to send to the selected phone number or e-mail address.

## Editing a Contact Entry

1. From the **Contacts** submenu, press  **Contact List**.
2. Select the Contact entry, then press the Left Soft Key **[Edit]**.
3. Perform steps 5 through 8 under “Adding a new Contact from the idle screen” on page XX, to edit the Contact entry.

## Erasing a Contact Entry

1. From the **Contacts** submenu, press **Contact List**.
2. Select the Contact entry, then press the Center Select Key **[VIEW]**.
3. Press Left Soft Key **[Erase]**, then press the Center Select Key **[OK]** to select **Yes**.

## Favorites

### Assigning Contacts to Favorites

Up to 10 contacts can be assigned to Favorites.

1. From the **Contacts** submenu, press **Favorites**.
2. Select an unassigned position, then press the Center Select Key **[Assign]**.
3. Select the Contact you want to assign to the Favorites, then press the Center Select Key **[OK]**.

A confirmation message appears.

### Using Favorites

1. From the **Contacts** submenu, press **Favorites**.
2. Select the Contact entry. You can perform the following operations:
  - To view the contact information, press the Center Select Key **[VIEW]**.
  - To unassign the entry, press the Left Soft Key **[Unassign]**.
  - Press the Right Soft Key **[Options]** to select one of the following options:

#### **Call/New TXT Message/New Picture Message/New Video Message/New Voice Message**

- Press the Send Key to dial the Default Number of the Contact entry. If multiple numbers are saved in the Contact entry, select

the phone number you want to dial by pressing the Directional Key  left or right, then press the Send Key.

- Press the Message Composer Key  to create a text message to be sent to the Default Number of the Contact entry as destination. If multiple phone numbers and/or e-mail addresses are saved in the Contact entry, select the phone number or e-mail address as destination to which you want to send by pressing the Directional Key  left or right, and then Message Composer Key  to create a text message to send to the selected phone number or e-mail address.

## Groups

Groups allow you to classify phone entries into groups with up to 10 numbers in each group.

To view your grouped Contacts, add a new group, change the name of a group, delete a group, or send a message to everyone in the selected group:

1. From the **Contacts** submenu, press  **Groups**.
2. You can select one of the following options:
  - To add a new group to the Groups list, press the Left Soft Key **[New]**, enter a new group name, then press the Center Select Key **[SAVE]**.
  - To view your grouped Contacts, select a group, then press the Center Select Key **[VIEW]**.
  - To access the options menu, select a group, then press the Right Soft Key **[Options]**. These options include:  
**New TXT Message/New Picture Message/New Video Message/New Voice Message/Rename/Erase Group/Add**

**[Options].** Press  **Add**, then your contact entries will be displayed in alphabetical order. Select the contact you want to add then press the Center Select Key **[MARK]**. Press the Left Soft Key **[Done]**.

- To change the group name, select the existing group name that you want to change, then press the Right Soft Key **[Options]**. Press  **Rename**, then edit the group name, press the Center Select Key **[SAVE]**.
- To erase the group, select the existing group that you want to erase, then press the Right Soft Key **[Options]**. Press  **Erase Group**, then press the Center Select Key **[OK]** to select **Yes**.

## New PTT Contact

To add a new Push To Talk (PTT) Contact:

1. From the **Contacts** submenu, press  **New PTT Contact**.
2. Enter the name, then press the Directional Key  down.
3. Enter the 10-digit cellphone number of the Verizon Wireless PTT subscriber, then press the Directional Key  down.
4. To add the new PTT Contact as a member of an existing PTT Group, press the Left Soft Key **[Add]**, select the PTT Group, press the Center Select Key **[MARK]**, then press the Left Soft Key **[Done]**.
5. Press the Center Select Key **[SAVE]**.

## PTT Contact List

To save up to 500 PTT Contact entries:

1. From the **Contacts** submenu, press  **PTT Contact List**.
2. Select the PTT Contact entry. You can select one of the following options:

- To call and talk with the selected individual, press the Left Soft Key **[Alert]**. Then press and release the PTT Key .
- Press the Right Soft Key **[Options]** to select one of the following options:  
**New PTT Contact/Copy To Contacts/Temp PTT Group/  
Erase/Edit/Call/New TXT Message/New Picture Message/  
New Video Message/New Voice Message/Sort**

**NOTE**

When on the idle screen, the PTT key  functions as a hot key to access the PTT Contact List.

## PTT Groups

1. From the **Contacts** submenu, press  **PTT Groups**.
2. You can select one of the following options:
  - To add a new PTT Group to the PTT Groups list, press the Left Soft Key **[New]**, enter a new PTT group name, then press the Center Select Key **[SAVE]**.
  - To view your grouped PTT Contacts, select a PTT Group, then press the Center Select Key **[VIEW]**.
  - To access the options menu, select a PTT Group, then press the Right Soft Key **[Options]**. These options include:  
**Rename/Erase/Add/Sort**
    - To change the PTT Group name, select the existing PTT Group that you want to change the name, then press the Right Soft Key **[Options]**. Press  **Rename**, then edit the PTT Group name, press the Center Select Key **[SAVE]**.

- To erase the PTT Group, select the existing group that you want to erase, then press the Right Soft Key **[Options]**. Press  **Erase**, then press the Center Select Key **[OK]** to select **Yes**.
- To add PTT Contacts to the PTT Group, select the existing PTT Group where you want to add the PTT Contact, and then press the Right Soft Key **[Options]**. Press  **Add**, then your PTT Contact entries will be displayed in alphabetical order. Select the PTT Contact you want to add, then press the Center Select Key **[MARK]**. Press the Left Soft Key **[Done]**.

## Temp PTT Group

The following operation temporarily assigns a PTT Contact to the Temp PTT Group. When assigned, displaying the Temp PTT Group and holding down the PTT Key  will initiate a Barge Call.

### Adding PTT Contacts

1. From the **Contacts** submenu, press  **PTT Contact List**.
2. Press the Right Soft Key **[Options]**, then press  **Temp PTT Group**.
3. Press the Center Select Key **[ADD]**, select a PTT Contact entry, press the Center Select Key **[MARK]**, then press the Left Soft Key **[Done]**.

### Viewing Temp PTT Group Members

1. From the **Contacts** submenu, press  **PTT Contact List**.
2. Press the Right Soft Key **[Options]**, then press  **Temp PTT Group**.
3. Select the PTT Contact entry. You can select one of the following options:

- Press the Left Soft Key [**Remove**] to remove the entry.
- Press the Right Soft Key [**Options**] to select one of the following options:  
**Remove All/New TXT Message/New Picture Message/New Video Message/New Voice Message/Save As PTT Group**

## Speed Dials

Speed Dialing is a convenient feature that allows you to make phone calls quickly and easily (Speed Dial 1 is reserved for Voicemail). Assign the Speed Dial digits to your Contacts to use this calling feature.

### NOTE

You will need to activate One-Touch Dialing to use Speed Dialing, see page XXX.

### Setting a Speed Dial

To view your list of Speed Dials or assign Speed Dial digit for a phone number entered in your Contacts:

1. From the **Contacts** submenu, press  **Speed Dials**.
2. Select the Speed Dial position, or enter the Speed Dial digit, then press the Center Select Key [**SET**].
3. Select the Contact, then press the Center Select Key [**OK**].
4. Select the number you want to assign to the selected Speed Dial digit, then press the Center Select Key [**OK**].
5. Press the Center Select Key [**OK**] to select **Yes**.

A confirmation message appears.

## Resetting a Speed Dial

1. From the **Contacts** submenu, press  **Speed Dials**.
2. Select the Speed Dial position, or enter the Speed Dial digit, then press the Right Soft Key **[Remove]**.
3. Press the Center Select Key **[OK]** to select **Yes**.  
A confirmation message appears.

## Single-Digit Speed Dialing

1. From the idle screen with the flip either open or closed, press and hold the Speed Dial digit.
2. Your cellphone recalls the phone number from your Contacts, displays it briefly, and then dials it.

## Double-Digit Speed Dialing

1. From the idle screen with the flip either open or closed, press the first Speed Dial digit, then press and hold the key of the last Speed Dial digit.
2. Your cellphone recalls the phone number from your Contacts, displays it briefly, and then dials it.

## Triple-Digit Speed Dialing

1. From the idle screen with the flip either open or closed, press the first and second Speed Dial digits, then press and hold the key of the last Speed Dial digit.
2. Your cellphone recalls the phone number from your Contacts, displays it briefly, and then dials it.

### NOTE

When the three digits you input are not registered for Speed Dial, your cellphone dials the number you input.

# In Case of Emergency (ICE)

Follow the procedure below to register a Contact to be contacted in case of emergency, or to register a medical record number or other personal info. Up to three different Contacts can be registered to ICE.

## NOTE

Even when the cellphone is locked, the Contact or personal info registered as ICE can be viewed without unlocking the cellphone by pressing the Left Soft Key **[ICE]**.

## Adding a Contact to ICE

To register to ICE:

1. From the **Contacts** submenu, press  **In Case of Emergency**.
2. Select **Contact 1**, **Contact 2**, or **Contact 3**, then press the Center Select Key **[ADD]**.
3. To select from the Contact List, press  **From Contacts**, select the Contact entry, then press the Center Select Key **[OK]**.  
To add a new Contact, press  **New Contact**, enter the contact information, then press the Center Select Key **[SAVE]**.

## NOTES

- For details about adding a new Contact, see page XX.
- The contact name assigned as the ICE contact is displayed in red font in the Contact List.

## Entering Personal Info

To register a Medical Record Number or other information that may be used in case of an emergency:

1. From the **Contacts** submenu, press  **In Case of Emergency**.

2. Select **Personal Info**, then press the Center Select Key **[VIEW]**.
3. Select **Note 1**, **Note 2**, or **Note 3**, then press the Center Select Key **[ADD]**.
4. Enter the information, then press the Center Select Key **[SAVE]**.
5. The information you entered now appears in place of **Note 1**, **Note 2**, or **Note 3**.

## My Name Card

To register a name, telephone number, and e-mail address to My Name Card:

1. From the **Contacts** submenu, press  **My Name Card**.
2. Enter the name, then scroll to highlight the information field you want to enter. Information fields include:  
**Mobile 1/Home/Work/Email 1/Mobile 2/Email 2**
3. After entering the information as necessary, press the Center Select Key **[SAVE]**.

### NOTE

My Name Card can be added to a message. See page XXX.

## Push to Talk

The Push to Talk (PTT) feature on your cellphone allows you to use your cellphone like a walkie-talkie to communicate with an individual or group of individuals who are also Verizon Wireless Push to Talk subscribers.

### NOTES

- The PTT mode is Off by default, and you are not be able to send or receive PTT calls and alerts.
- For how to turn the PTT mode on, see page XXX.
- When the PTT mode is ON, with the flip either open or closed, pressing the PTT Key from the idle screen displays the PTT Contact List, and pressing and holding the PTT Key initiates a barge call to the phone number to/from which you sent/received the last PTT call.

## About Push to Talk

Push to Talk calls may only be made with other Verizon Wireless Push to Talk subscribers, and only from the National Enhanced Services Rate and Coverage Area. A Push to Talk call is terminated by pressing the End/Power Key or will automatically time out after ten (10) seconds of inactivity. If you receive a voice call while on a Push to Talk call, they will go directly to Voice Mail. When you are on a voice call, you cannot receive a Push to Talk call. You cannot prevent others who have your wireless phone number from entering you into their Push to Talk contact list. Only one person can speak at a time during Push to Talk calls. When using your phone keypad to make a Push to Talk call, you must enter the 10-digit phone number

of the called party. Your Push to Talk service cannot be used for any applications that tether your phone to computers or other devices for any purpose. Push to Talk-capable phone and service required.

## Making a PTT Call

You can make two types of PTT calls:

- A **barge call** automatically connects to the other party. The called party does not have the option to ignore the call.
- An **alert call** is a call to notify a called party that the calling party want to talk with using a tone. The called party has the option to answer or ignore the call.

### Calling from PTT Contact List (Barge)

1. From the idle screen with the flip either open or closed, press the PTT Key  to access your **PTT Contact List**.
2. Scroll to highlight the PTT Contact entry you wish to call.
3. Press and hold the PTT Key . Wait until the "OK to Talk" tone sounds and the message "Talking to" appears on the display. Speak while holding the PTT Key .
4. Release the PTT Key  to let the other party talk.
5. Press the End/Power Key to end the call. Otherwise, it will automatically time out after ten (10) seconds of inactivity.

### Calling from PTT Contact List (Alert)

You can send an alert to any user with Verizon Wireless PTT service. The user may answer or ignore the alert.

1. From the idle screen with the flip open, press the PTT Key  to access your **PTT Contact List**.
2. Scroll to highlight the PTT Contact entry you wish to call.

3. Press the Left Soft Key **[Alert]**. The message “Press PTT Key to Alert” will appear on the display.
4. Press and release the PTT Key  to alert the selected individual.  
The “PTT Outgoing Alert” tone will sound, and “Alerting” will appear on the display.
5. If the called party answers the alert, “Listening to” appears on the display and you will hear the called party speaking.  
If the called party chooses to ignore the alert, or if the cellphone is unavailable to accept a PTT call, an “Unavailable” message will appear on your display.
6. When the called party finishes speaking, you will hear the “Floor Available” tone and the “Connected to” screen will appear on your display.
7. Press and hold the PTT Key  to talk.
8. Release the PTT Key  to let the other party talk.
9. Press the End/Power Key to end the call. Otherwise, it will automatically time out after ten (10) seconds of inactivity.

## **Calling from Temp PTT Group (Barge)**

---

1. From the idle screen with the flip open, press the PTT Key  to access your **PTT Contact List**.
2. Press the Right Soft Key **[Options]**, then press  **Temp PTT Group**.
3. Press and hold the PTT Key . Wait until the “OK to Talk” tone sounds and the message “Talking to” appears on the display. Speak while holding the PTT Key .
4. Release the PTT Key  to let the other party talk.
5. Press the End/Power Key to end the call. Otherwise, it will automatically time out after ten (10) seconds of inactivity.

## Calling from Keypad (Barge)

1. From the idle screen with the flip open, enter the 10-digit cellphone number of the Verizon Wireless PTT subscriber you wish to contact.
2. Press and hold the PTT Key . Wait until the “OK to Talk” tone sounds and the message “Talking to” appears on the display. Speak while holding the PTT Key .
- If the cellphone number you entered has already been registered in your PTT Contact List, the contact name will replace the cellphone number entered on the display when you initiate the call by pressing the PTT Key .
3. Release the PTT Key  to let the other party talk.
4. Press the End/Power Key to end the call. Otherwise, it will automatically time out after ten (10) seconds of inactivity.

## Calling from Keypad (Alert)

1. From the idle screen with the flip open, enter the 10-digit cellphone number of the Verizon Wireless PTT subscriber you wish to alert.
2. Press the Left Soft Key **[Alert]**.
3. Press and release the PTT Key  to alert the individual. The “PTT Outgoing Alert” tone will sound, and “Alerting” will appear on the display.  
If the cellphone number you entered has already been registered in your PTT Contact List, the contact name will replace the cellphone number entered on the display when the alert is initiated.
4. If the called party answers the alert, “Listening to” appears on the display and you will hear the called party speaking.  
If the called party chooses to ignore the alert, or if the cellphone

is unavailable to accept a PTT call, an “Unavailable” message will appear on your display.

5. When the called party finishes speaking, you will hear the “Floor Available” tone and the “Connected to” screen will appear on your display.
6. Press and hold the PTT Key  to talk.
7. Release the PTT Key  to let the other party talk.
8. Press the End/Power Key to end the call. Otherwise, it will automatically time out after ten (10) seconds of inactivity.

## Incoming PTT Call

### Incoming PTT (Barge)

1. When your cellphone receives a barge call, you will hear the calling party speaking through the speakerphone. The calling party's cellphone number will appear on your display. If the calling party's number has already been registered in your PTT Contact List, the contact name will replace the cellphone number on the display.
2. Press and hold the PTT Key  to talk.
3. Release the PTT Key  to let the other party talk.
4. Press the End/Power Key to end the call. Otherwise, it will automatically time out after ten (10) seconds of inactivity.

### Incoming PTT (Alert)

1. When your cellphone receives an alert, you will hear the “PTT Alert” tone. The message “Incoming Alert” will be displayed with the cellphone number or contact name of the calling party. The PTT Alert tone repeats every 5 seconds until you answer or ignore the call. If you do not answer an incoming alert within 20 seconds, the PTT call will be automatically disconnected.

**2. Answer or ignore the alert:**

To answer the alert, press and hold the PTT Key  and begin talking.

To ignore the alert, press the Right Soft Key **[Ignore]**.

**3. Release the PTT Key ** to let the other party talk.

**4. Press the End/Power Key to end the call. Otherwise, it will automatically time out after ten (10) seconds of inactivity.**

Push to Talk

# MEDIA CENTER

Media Center gives you customizable service right on your cellphone that lets you get ringtones, play games, surf the web, get up-to-the-minute information and more.

You can use Media Center and download applications anywhere on the Verizon Wireless network, as long as you have a digital signal available for your cellphone.

## Music & Tones

You can personalize your phone's ringtones and download music. You can select from a wide variety of genres.

### Accessing the Music & Tones submenu

1. From the idle screen with the flip open, press the Center Select Key **[MENU]**, then select **Media Center** and press the Center Select Key **[OK]**.
2. Press  **Music & Tones**.
3. Select a submenu.

**V CAST Music | Rhapsody/Get New Ringtones/My Ringtones/My Music/My Sounds/Sync Music**

### V CAST Music with Rhapsody®

V CAST Music with Rhapsody® is a digital music service that lets you listen to millions of songs from thousands of artists. Discover new and old favorites in an extensive music catalog. Download V CAST Music with Rhapsody® to sync tracks, albums, and playlists to your new compatible phone, while managing your existing PC music library all in one place.