


## TX Operation Diagram

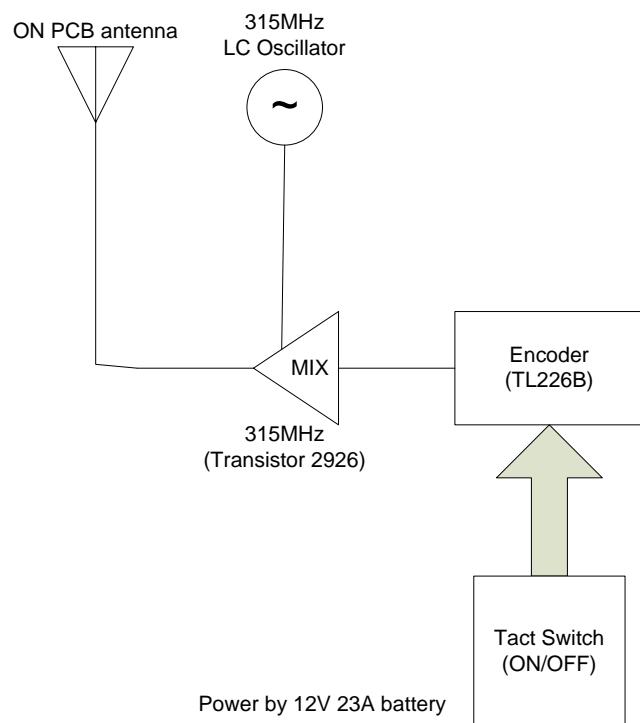

At the hand held remote, there are two push buttons.

- **CONCAVE** shape button for OFF function.
- **CONVEX** shape button for ON function.
- When either button pressed, LED is flash as indication of wireless transmission.

When press either button, a defined 4 bits data inputs to encoder TL226B. A serial data packet is generated and it would be mixed with a 315MHz frequency. Then it transmits the signal to air by internal build antenna.