

# The Gleike Taximeter, the meter that is so easy to Use!

## Starting the meter, Extra and Preauthorization

- PB1 to start the meter – the display will say “HIRED”
- PB4 to add extras
- Credit Card Preauthorization (only if requested)
  - PB3 → push once for \$10, twice for \$20, 3x \$30, 4x \$40, 5x \$50 ...
  - Swipe the credit card
- ☞ If the antenna and the credit card logo keep blinking ask for another card or Cash because the preauthorization is refused.

## Time off, 50% Suburb

- PB2 to go to Time Off,
- PB4 for suburbs and enter the 50%
  - PB 1 → \$1 (short push) or \$10 (long push)
  - PB 2 → 1 quarter
  - PB 3 → 1 nickel
- ☞ PB 2 and 3 at the same time → reset to \$0.00
- ☞ PB 4 → enter the amount

## Cash payments

- No receipt → PB1 once
- With receipt → PB1 twice
- Late receipt request in “Vacant” mode → PB4 once.

## Credit Card payments (When you are in Time Off)

- Swipe the credit card even if you already swiped the card for the Preauthorization
- Present the first receipt (“Driver Copy”) of the receipt on this clipboard to the passenger in a nice way.
- The passenger just enters the tip and signs
- Add the tip on the meter:
  - PB 1 → \$1 (short push) or \$10 (long push)
  - PB 2 → 1 quarter
  - PB 3 → 1 nickel
- ☞ PB 2 and 3 at the same time → reset to \$0.00
- ☞ PB 4 → enter the amount
- Give the second receipt (“Customer Copy”) to the passenger
- **Save your “Driver Copy” signed** –with a receipt copy if requested- **to be paid**
- Make a copy of the customer receipt for yourself by pressing PB4

# The Gleike Taximeter, the meter that is so easy to Use!

## Starting the meter, Extra and Preauthorization

- PB1 to start the meter – the display will say “HIRED”
- PB4 to add extras
- Credit Card Preauthorization (only if requested)
  - PB3 → push once for \$10, twice for \$20, 3x \$30, 4x \$40, 5x \$50 ...
  - Swipe the credit card
- ☞ If the antenna and the credit card logo keep blinking ask for another card or Cash because the preauthorization is refused.

## Time off, 50% Suburb

- PB2 to go to Time Off,
- PB4 for suburbs and enter the 50%
  - PB 1 → \$1 (short push) or \$10 (long push)
  - PB 2 → 1 quarter
  - PB 3 → 1 nickel
- ☞ PB 2 and 3 at the same time → reset to \$0.00
- ☞ PB 4 → enter the amount

## Cash payments

- No receipt → PB1 once
- With receipt → PB1 twice
- Late receipt request in “Vacant” mode → PB4 once.

## Credit Card payments (When you are in Time Off)

- Swipe the credit card even if you already swiped the card for the Preauthorization
- Present the first receipt (“Driver Copy”) of the receipt on this clipboard to the passenger in a nice way.
- The passenger just enters the tip and signs
- Add the tip on the meter:
  - PB 1 → \$1 (short push) or \$10 (long push)
  - PB 2 → 1 quarter
  - PB 3 → 1 nickel
- ☞ PB 2 and 3 at the same time → reset to \$0.00
- ☞ PB 4 → enter the amount
- Give the second receipt (“Customer Copy”) to the passenger
- **Save your “Driver Copy” signed** –with a receipt copy if requested- **to be paid**
- Make a copy of the customer receipt for yourself by pressing PB4

## Important notes

- Warning: Changes or modifications made to this equipment not expressly approved by Gleike Inc. may void the FCC authorization to operate this equipment.
- FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.

**Information or trouble: (773)489-4142**