



Ultimate Security Sensor Lock

USER GUIDE



CH-960G

INDEX

PREFACE	2
WARNING	3
ATTENTION	4
PACKAGING	5
FEATURE / FUNCTION	6
BATTERY CHANGE	7
ACTIVATED	8
UNLOCK	9
LOCK	10
PAGER	11
PROBLEMS ELINIMATION	12
SPECIFICATIONS	13

ADVICE :

- + In case of warning siren you have heard from the pager or CH-960G, do not go to your vehicle directly.
- + For safety reason, please make sure there are no thieves around your vehicle or make emergency call for help.

PREFACE

**The following is contained ways for how to use
CH-960G steering wheel lock.**

+ Due to our safety goal, please comply with following steps while you operate.

Please read this manual book carefully before operating the steering wheel lock. **WARNING** and **ATTENTION** are very important parts of the operating.

+ We are not responsible for any damage/injured of vehicle or person if the user not obeys the following instruction.

WARNING

LOCK

+ Installation

- Lock on the steering wheel only.
- Make sure the lock is tight on steering wheel while using.

+ Stop

- Do not swing the lock, it might damage the product or injured people.
- Do not start your vehicle until you remove the CH-960G from your steering wheel.
- Never attempt to start or drive your vehicle with CH-960G locked onto the steering wheel.
- Do not separate or modify the lock for other purpose : the lock is made by precise material, you might get shock or damage the lock by separating or modifying the lock.
- We are not responsible for any lock damage if the lock is modified or separated.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

Notice : The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ATTENTION

LOCK

Way to use

- Remember to keep your hands away from the metal bar while you unlock the lock, it might be heated by sunshine at the day time : touched the foam rubber bar first is suggested.
- Always remove the lock before starting vehicle; otherwise, it might distract driver attention and cause accident.
- Remove the CH-960G from steering wheel and store it out of the way. Be sure it won't interfere with any pedals or levers while not in use and is secured from movement in the event of a sudden stop or accident.
- CH-960G is operated at inside of car only : do not use for other purpose.
- We are not responsible for the lock damage of moisture.

Maintenance

- Dry-rub the lock with cotton cloth for cleaning, CH-960G surface might be damaged by alcoholic cleaner.

PAGER

Way to use

- Always keep the pager dry , we are not responsible for damage of pager in wet or moisture.
- Dry-rub the pager with cotton cloth for cleaning only.

BATTERY

- Heating and separating used battery are prohibited, it might cause fire or explosion.

PACKAGING

ITEMS :

CH-960G Steering wheel lock × 1

Keys × 2

Receiving pager × 1

Manual book × 1

Spare screws × 3

LOCK :

- Lock cylinder is for unlock only.
- Hooks will be opened While you unlock CH-960G.
- LED indicator will be flashing once every 5 seconds while CH-960G is armed.
- Latch CH-960G upon dashboard tight and force steering wheel immobilizing.
- Always keep the keys in safe place , we might be unable to offer spare key if keys lost.

PAGER :

- Indicator shows two function of door opening and vibrating.
- RESET~pause the warning and switch the mode of vibrate and siren.
- ON/OFF~beep once for ON, and twice for OFF.

FEATURE/FUNCTION

- CH-960G will be flashing 110dB alarm and sending siren signal up to 1,200 meters away to it pager with no interfering, if it detects any invading situation.
- Pager will receive siren signal when CH-960G detects any invading situation after 10 seconds.
- CH-960G can be activated in +80 to -40 of Celsius.
- Hardened steel lock body and resists sawing and cutting.
- Up to 500,000,000 signal frequency of each lock/pager set, preventing signal jamming.
- Up to 20,000 key codes, lessening keys' duplicate.
- Keys are copper alloy made, high toughness and anti-rust.
- 2pc of 3A alkaline battery is needed for lock and 1pc of 4A alkaline battery is needed for pager.

BATTERY CHANGE

- As the illustration, please match the +、- way of battery case while you change the battery.
- Due to products testing, alkaline new battery life might be short, which is packed with package : new alkaline battery life for CH-960G can be last for 90 days of normal operating.

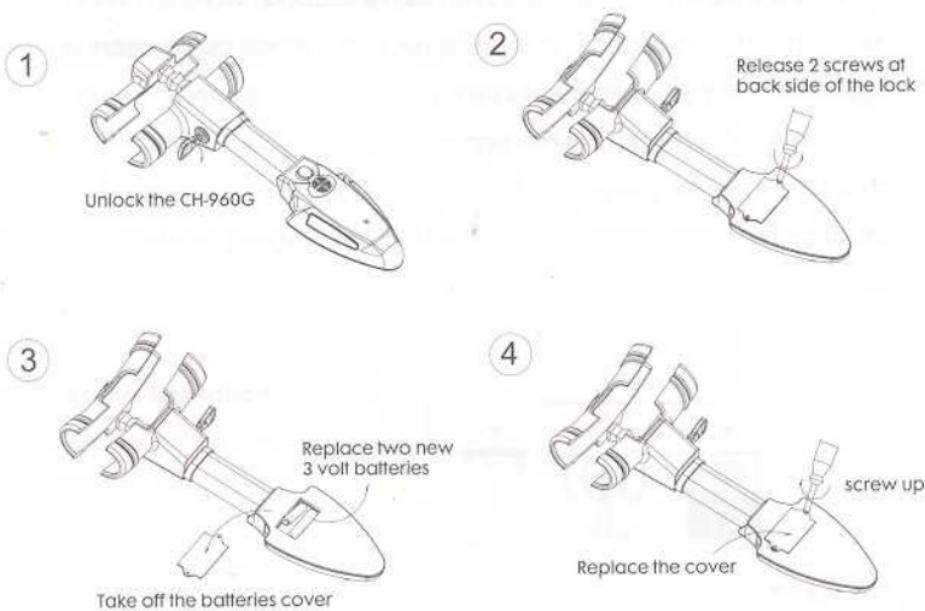


Illustration of batteries change for CH-960G

- As the illustration, please match the +、- way of battery case while you change the battery.
- Due to products testing, alkaline new battery life might be short, which is packed with package : new alkaline battery life for CH-960G can be last for 90 days of normal operating.

ACTIVATED

While CH-960G power on, you will hear beep once for a second : after 30 seconds CH-960G warning system will be activated.

Remember, warning system is not activating during the 30 seconds. CH-960G will beep twice right away and LED will keep shining when warning system detects any invading situation. Pager will receive signal and sound a siren for 10 seconds while CH-960G warning system is activated after 10 seconds. When pager siren signal off, CH-960G will sound a siren alarm for 10 seconds : after that CH-960G will resend siren signal to pager again. The LED will stop shining when pager receive second signal. The invading situation mode will remain on pager until the pager is reseted.

UNLOCK

Insert the right key into locking cylinder fully and angle 90degree to right turn.

The driver has 10 seconds to unlock CH-960G after car door opened while the warning system is activated, or cause siren on if driver take over the time.


Locking cylinder is anti-dust and anti-drill designed. The lock will not be open if the right key not insert into the cylinder fully.

Be sure the battery is working before operate CH-960G.

MODE INDICATION

As the illustration :

- 1.Pager battery low
- 2.Pager warning system on (receiving)
- 3.CH-960G is in low battery
- 4.Vibration mode
- 5.Warning for vehicle moving
- 6.Warning for vehicle door opened

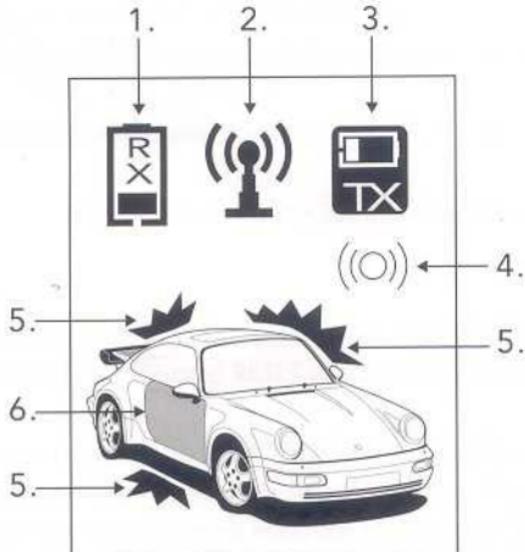

LOCK

CH-960G grasp on steering wheel only, upon dashboard is suggested.

CH-960G will beep once for a second at beginning for power on while its metal hooks matched. The warning system will be activated after 30 seconds. Remember the warning sensor is idle during the 30 seconds for driver leave vehicle.

Either lock or pager battery is needed to change when the pager shows low battery indication. New alkaline battery life for CH-960G can be last for 90 days and pager can be last for 10 to 14 days of normal operating.

PAGER

FUNCTION

Be sure the battery is working before operating the pager.

As long as the signal is receivable, pager will indicate the warning mode of CH-960G while the warning system is activated. CH-960G can send siren signal up to 1,200 meters away to its pager without any interfering. To be known the pager is receiver only, it doesn't contain any way to control CH-960G on or off.

BATTERY CHANGE

Slide out of the battery cover on the back side of pager, replace a new 4A alkaline battery with matching + - ways, slide back the cover to the pager.

HOW TO USE THE PAGER :

PAGER SETUP

- 1.turn on : press and hold **ON/OFF** for a second, the pager will beep once.
- 2.pause the siren : press **RESET** to pause the siren warning.
- 3.turn off : press and hold **ON/OFF** for a second, the pager will beep twice.
- 4.vibrate mode : turn the pager on, press and hold **RESET** until the pager vibrates.
- 5.siren mode : turn the pager on, press and hold **RESET** until the pager beeps.

RESET PAGER FREQUENCY

Reset must be made during the warning signal sending from CH-960G.

- 1.turn the pager off first, press **ON/OFF** and **RESET** at same time and hold for 2 seconds.
- 2.While the pager power on, release the **ON/OFF** (still press **RESET**) until the pager beeps 3 times, and then release **RESET**. At this time the pager indicator of receiving will light up at most for 15 seconds. The pager has 15 seconds to receive and load the signal from CH-960G.
- 3.The pager will beep 3 times when the signal is loaded. Then the receiving indicator will flash once every 5 seconds. If not, please redo the steps again.

PROBLEMS ELIMINAION

CH-960G : NO SIREN WARNING

- 1.run down battery : please change new battery (alkaline batteries are suggested).
- 2.battery installation is opposite : please match the + - way for installation.

PAGER : NO POWER

- 1.battery installation might not correct, please reinstall again.

NO SIREN WARNING

- 1.the pager is out of the range of signal receivable.

- 2.vibrate mode.

★ Please contact with our customer service if your CH-960G problems are not in the list above.

★ We are not responsible for any damage by owner's fixing even still under the warranty.

SPECIFICATIONS

CH-960G

Siren volume	up to 110db
Working temperature	+80 to -40 of Celsius
Pulling strength	up to 4,500 kg (metal bar)
Cutting strength	up to 5,000 kg(metal bar)
Electric shock test	up to 200,000 volt
Surface hardness	HRC 60 degree upper
Size	180 × 370 mm
Weight	1,400 gm (battery no include)

PAGER

Power	1.5 volt
Range of receiving	up to 1,200 M (with no interfering)
Size	64×31mm
Weight	30 gm

12 MONTHS WARRANTY BY MEGACELL