# **RED**i

# TECHNICAL MANUAL

© Copyright 2002, Escort Data Logging Systems Ltd.

V1.0a WH 6/12/02 V1.1a WH 14/5/04 V1.1f JAL 12/10/04 V1.1j JAL 17/12/04 V1.1k SYE 11/02/05 V1.1m WCH 12/04/05 V1.1n WCH 26/04/05 V1.1p WCH 10/05/05 V1.2 WCH 3/8/5 V.13 WCH 17/10/5 V1.4 WCH 5/12/5

# **CONTENTS**

CONTENTS	2
1. INTRODUCTION	5
2. OVERALL SPECIFICATION	6
STORAGE & DATABASE	6
READOUT	6
POWER SUPPLY	6
PROCESSOR	
COMMUNICATIONS	
KEYBOARD	
OTHER FEATURES	
3. FUNCTIONALITY	
3.1 Menu 1 - Main menu	
3.2 SCREEN 1.1 - TRANSFER PROGRESS	
3.3 MENU 2 - VIEWING OF STORED DATA	
3.4 MENU 3 - SELECTION OF PREVIOUSLY STORED DATA	
3.5 MENU 4 - STATISTICS	
3.6 MENU 7 OUT OF SPECIFICATION READINGS	
3.7 Graphical display	
3.9 MENU 6 - SYSTEM OPTIONS	
4. MEMORY ORGANISATION	15
4.0 Introduction	
4.2 DATABASE	
4.3 MEMORY REFERENCE	
4.4 HEADER STRUCTURE	
4.5 REDI MEMORY MAP (F/W VER. 1.01F)	21
4.6 MEMORY FAULTS	22
5. COMMUNICATIONS	23
5.1 RS232 OVERVIEW	23
5.2 COMMUNICATIONS MESSAGE SUMMARY	24
P_STATUS	25
P_COMMSPROPS	
P_COMMSPROPSET	
P_COMMSBAUDSET	
P_SCONFIG.	
P_GETRTC	
P_SETRTC P_RMEMREAD	
P_RMEMREAD P_RMEMWRITE	
P_FWLOAD_BOOT	
P_GETCHARGER	
P_SETCHARGER	
P TEST	
P_GETLOGTABLE	
P FLUSHLOGGER	
P_SETPASSWORD	
P_SETPROGRAM	46
P_FLUSHPROGRAM	
5.3 COMMUNICATIONS MESSAGE CONTROL CHARACTER VALUES	47
6.0 RADIO COMMUNICATIONS	47

# **REDITECHNICAL MANUAL**

6.1 DATASTREAM	
6.3 SPECIFIC PACKET TYPES	
REDi to Logger	47
Logger to REDi	47
7.0 HARDWARE	47

# **Revision History**

- 1.1f BAUDRATEMAP redefined
  - Start character redefined (0x5A -> 0x54)
  - Position of CRC changed in internal memory structure (see 4.2 DATABASE)
- 1.1j Update to RF chapter from some docs in Warren's archive 1.1e, 1.1g, 1.1h etc. Password get/set protocol added
  - RF Frequency ID byte added to "Status"
- 1.1k Add RFTEST test type in P\_TEST for test radio communication with RFMini.
- 1.1m Corrected format of Status packet (page 46)
- 1.1n Updated restart logger section, included REDi header structure (4.4) and product code
- 1.1p Flag added to PassWordFlags to allow or disallow the user to delete data blocks. Memory map included.
  - P\_SCONFIG updated with battery type.
- 1.2 Radio section abbreviated and reader directed to "Wireless Mini Technical Manual Implant" for further information.
  - A note added about capacitance on the supply line.
  - Functionality section brought up to date.
- 1.3 Hardware description added.
  - Break down of firmware added.
- 1.4 More tests added to P\_TEST
  - Error codes listed

#### 1. INTRODUCTION

The *Escort REDi* provides the facility to gather recorded data from selected Escort loggers by using radio communications to talk directly to the radio equipped loggers. The REDi is portable and enables a user to collect the log data from many remote sites before transferring this data to a PC. The product also has the ability to display statistics about the data as well as rearm or reprogram loggers.

The unit is physically arranged in an easy to hold handheld plastic case which is battery powered and contains a large liquid crystal display (160 x 160 bitmap) and 7 key keyboard. A communications connector is also mounted at the top of the unit which allows the REDi to be connected to a PC.

The REDi is heavily based on the Escort Thermocheck (Cox Templist) and incorporates most of the basic hardware with the removal of the temperature sensing ability and the addition of radio communications. This technical manual was originally the Thermocheck manual and has been edited to form the REDi spec.

#### 2. OVERALL SPECIFICATION

#### **STORAGE & DATABASE**

- Up to 1Mbyte of logged data.
- Data is stored in a generic format always starting on a 256 byte page boundary.
- Can store any combination of loggers, e.g. 500 <sup>1</sup> x 2K logs or 16 x 32k(x2) logs.

#### **READOUT**

- Dot Matrix LCD 160 x 160 pixels. Back lit.
- Menu driven interface.

#### **POWER SUPPLY**

- Type: 2 x Alkaline or Nicad AA batteries.
- Design Target life for continuous life (Alkaline cells): 80 hours.
- In-built intelligent Nicad/NiMH charger.

#### **PROCESSOR**

Mitsubishi M16 / 20K RAM / 128k ROM.

#### **COMMUNICATIONS**

- Between REDi and PC RS232 at 9600 baud. Could be increased in furture revisions.
- Between REDi and Logger Radio Communication 83k baud (roughly 2.5k bytes per second actual transfer rate).

#### **KEYBOARD**

- 7 Mechanical buttons up, down, left, right, select, escape and power down.
- The case can accommodate up to 12 buttons.

#### **OTHER FEATURES**

Field uploadable firmware.

#### **USER SOFTWARE.**

Operating systems supported: Microsoft Windows 98<sup>®</sup>/Me<sup>®</sup>/NT<sup>®</sup>/2000<sup>®</sup>/Xp<sup>®</sup>

#### PRODUCT CODE

• EA-RI-[FR] with [FR] identifying the frequency: 8 for 868 MHz, 9 for 916 MHz, 4 for 433 MHz

\_

<sup>&</sup>lt;sup>1</sup> but see limitation described below Fig412

#### 3. FUNCTIONALITY

The REDi is menu based. To trigger actions and display data the user must select a menu item by using the up / down arrow keys to move a highlight bar over that option then select it using the Select key. The left and right keys are used to change values.


For menus which are greater than the height of the screen, the up and down arrow keys will move the highlight bar until it gets to the top or bottom of the display then they will scroll the entire menu up or down.

The REDi also has a power down key (bottom left hand button) which will immediately put the unit into sleep mode and an escape key which will return the screen to an earlier menu (generally Menu 1).

#### 3.1 Menu 1 - Main menu

After a greeting screen this is the first menu the user sees after power on and all other menus stem from here. The highlight bar defaults to the first option (Read new) so if the user is simply collecting data all they need to do is keep pressing Select each time they approach a new logger.

The menu options are:

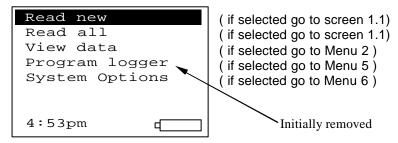

'Read new' loggers means scan the local environment for all responding loggers but only retrieve logger data from loggers that have not previously been downloaded.

'Read all' loggers means retrieve logger data from all loggers regardless of whether they have been accessed before or not. This can result in more than one image of the logger being available in memory.

At the bottom of the display the current time is shown and if the battery is low or is charging then a battery symbol is shown to indicate this. If the battery is low the symbol flashes and if the battery is charging the symbol repeatedly 'fills up'.

# 3.2 Screen 1.1 - Transfer progress

When attempting to upload a logger's data the various program cycles are sequentially shown as in the following figures. If a valid connection is established the user will see the sequence shown in Fig 3.2.1, 3.2.2, 3.2.3. After data is uploaded the display remains as shown in Fig 3.2.3 until the user presses Select after which the display changes to Menu 2.

If a connection cannot be established then the message in figure 3.2.5 is displayed until the user presses Select after which the display is returned to Menu 1.



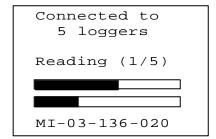


Fig 3.2.1

Fig 3.2.2

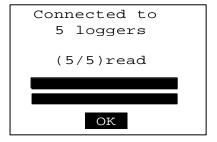


Fig 3.2.3



Fig 3.2.4

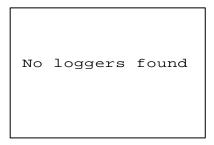


Fig 3.2.5

#### 3.3 Menu 2 - Viewing of stored data



Fig 3.3.1

The user can choose to select a logger from a list of the most recently retrieved logger data or from all the logger data stored in memory as shown in Fig 3.3.1. After the user selects this option a summary of the details of each logger is shown in Menu 3.

#### 3.4 Menu 3 - Selection of previously stored data

This menu gives the user the option to review the data of any of the loggers that have been downloaded so far. As shown in Fig 3.4.1 the user is viewing the last of 5 recently loaded loggers.

By pressing Left or Right the user can bring up the 'next' logger. If the user wishes to examine the logger data in more detail then selecting 'View Summary' will move to Menu 4. If the user wishes to view all readings that were out of specification then selecting "View Out Spec" will take them to Menu 7.

Some loggers will also allow restarting. For these loggers an option 'Restart Logger' will appear in the menu after 'View Out Spec'. For a description of this function refer to section 3.7.

Pressing the Escape key will take the user back to Menu 2. Scrolling down and selecting 'Exit' will take the user back to Menu 1.

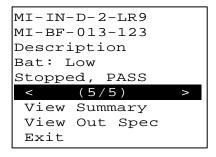


Fig 3.4.1 Selection of previously stored data

#### 3.5 Menu 4 - Statistics

Menu 4 displays statistics about the logged data. The up and down keys scroll the highlight bar and menu up and down as described above.

For a multi sensor logger the statistics are repeated for each sensor.

The menu is as follows:

Product name

Serial number

Description

Trip number

Battery status

Time zone

Sampling rate

Number of readings taken

Start time

End time

[ First sensor ]

Active range of the logger

High alarm level

Low alarm level

Maximum reading

Average reading

Minimum reading

Alarm status

Time spent above high alarm spec

Time spent below low alarm spec

Logger state (Ready, Stopped etc.)

[ Further sensors if applicable ]

View new logger ( if selected go to Menu 3 )
Exit ( if selected return to Menu 1)

eg.

# MI-IN-D-2-LR9

MI-BF-136-020
Description
Trip No: 2
Battery: OK
Time Zone:
GMT+12:00
Sampling: 2min

Sampling: 2min Readings: 1868

and after scrolling down ..

# Start Time:

11/04/05 11:17 End Time: 14/04/05 01:31

Active: -40~70°C

High Spec:40.0°C

Low Spec:0.0°C Max: 57.5°C

Avg: 13.5°C

and after scrolling down ..

```
Min: -23.0°C
Alarm: High+Low
Time over:40.0°C
16:02:00
Time under:40.0°C
1,01:46:00
State: Stopped
View new logger
Exit
```

#### 3.6 Menu 7 Out of specification readings

The user can generate a list of all out of spec readings that are present in the logged data from a logger they have downloaded. An example of such a list is shown in Fig. 3.6.1

```
Next

11/04/05 13:19

Reading: -3.0°C

11/04/05 13:21

Reading: -3.0°C

11/04/05 13:23

Reading: -3.0°C

11/04/05 13:25

Reading: -3.5°C
```

Fig. 3.6.1 Out of spec readings

Scrolling the highlight bar up or down can scroll the list up  $\sigma$  down (the list is taller than the screen) and moving the bar over "Next" and pressing Select will bring up the next (chronologically) list of out of spec readings. Pressing Escape will return to Menu 3.

# 3.7 Graphical display

This feature has not been implemented.

This feature displays the data graphically and will look as shown in Fig 3.6.1. The display has a menu across the top of the screen and either the menu is active (controlled by the keys) or the display is. When graphical display mode is first entered the menu is active and pressing the left or right arrow keys cycles through the four options (Scroll, Expand, Cursor, Exit) and Select selects one.

By selecting Scroll the display immediately becomes active and the up and down arrow keys can be used to scroll the data up and down the vertical temperature (or %RH etc) axis. Similarly the left and right keys can scroll back and forth along the horizontal time axis. Pressing Select makes the menu active again.

By selecting Expand the display immediately becomes active and the up key can be used to expand the temperature axis while the down key can be used to contract this axis. Similarly the left and right keys expand and contract the time axis. Pressing Select makes the menu active again.

By selecting Cursor the display immediately becomes active and cross hairs appear. The left and right keys move the vertical hair and the up and down keys move the horizontal hair. Unfortunately the display is too small to practically display any information based on the cursors

so this is just an 'added value' feature - further brainstorming may make this more useful. Pressing Select makes the cross hairs disappear and returns to active menu mode.

Selecting Exit returns to Menu 2.

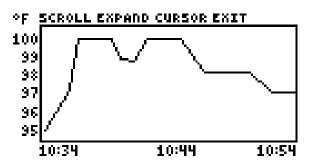


Fig 3.7.1 Graphical display

#### 3.8 Menu 5 - Reprogramming

As of 3<sup>rd</sup> August 2005 the REDi does not allow the operator to create and/or send a program to a logger. The facility has been built into the RF protocol and all loggers are set up to receive a program however the user interface side of reprogramming has yet to be discussed.

The REDi can, however, tell a logger to restart it's current program. This function is selected from Menu 3 and can only be selected once a loggers data has been retrieved by REDi. The user is warned that they will erase all existing data in that logger then, if they proceed, the logger is instructed to flush it's statistics, rewind its address pointer and begin logging afresh.

If the logger is password protected then it will block any attempt to restart it. The REDi operator is not given the option to enter a password.

If the logger is leased then it will decrement the lease count prior to restarting. If the lease has expired then the logger will refuse to restart.

Depending on the response of the logger the REDi may display one of several messages listed below.

"MI-XX-XXX-XXX Started."

Means everything occurred as expected and the logger has restarted.

"Starting MI-XX-XXX-XXX Failed."

Means there was some error and the logger has not restarted. The most likely cause is that the logger is out of range of RF signals. It is also possible that the logger got part way through restarting but some event caused it to abort the process. In this case the logger will have either done nothing or have switched to Ready mode but not started. In either case it is safe to resend the Restart command and the trip number and lease count will not be updated a second time.

"MI-XX-XXX-XXX is protected so NOT started."

The logger is password protected so is refusing to accept the Reprogram command.

"The lease of MI-XX-XXX-XXX has expired so NOT started."

The logger is leased and the lease has expired so the logger is refusing to accept the Reprogram command.

"Command sent to MFXX-XXX-XXX but response could not be confirmed."

The REDi sends a Restart command to the logger and then, after a couple of seconds, sends a further command to the logger to read back confirmation that the program was in fact restarted. This error message means that the Restart command was sent to the logger and the logger acknowledged receipt of it, however the REDi lost communication with the logger and was unable to confirm (either yes or no) that the logger was successful in restarting. In this circumstance it is likely that the logger did indeed restart. If the operator simply sends the Restart command again then the logger may restart a second time which generally will achieve the desired result but will have increased the trip number by 2 and decreased the lease count by 2. To avoide this the operator should find the logger and check it, or alternately download it's data again to check it's state.

#### 3.9 Menu 6 - System options

Using this menu the user can custom configure REDi system variables. These settings are stored in non-volatile memory so will not be affected by a battery change.

The menu options are:

Shut down
AutoOff 10 min
Backlight 25 s
Mem left 1008k
Rechargeable Y
Temp Unit °C
Erase all data
System info
Exit

If Shut down is selected the unit immediately goes to sleep.

Auto off refers to the time before the unit automatically goes to sleep. This can be adjusted (left and right arrow keys) in minutes from 1 to 30. The auto off function cannot be disabled.

Back-light time can be increased or decreased using the left and right arrow keys. This is the amount of time that the back light remains on for after the last key press before automatically turning off. It can be adjusted from 0 to 180 in steps of 5 seconds.

Mem left gives an indication of how full the memory is. It cannot be adjusted but, depending on market requirements, a feature could be added allowing a user to purge readings to free up memory.

Rechargeable allows the user to set whether the batteries that have been installed are rechargeable batteries or not. If set to 'N' then the REDi will not attempt to recharge them.

Temp unit governs whether the temperature data is displayed as Celsius or Fahrenheit on the REDi display. This only affects how readings are displayed. The conversion is done on the fly and does not alter data records held in memory.

Erase all data, if enabled, allows the user to delete all records stored in memory. The user cannot delete selected records.

System info brings up the 'splash screen' that is shown briefly after power up. This shows the device description, firmware version, battery level, part number and serial number.

Selecting Exit will return to the main menu. Pressing Escape will also return to the main menu.

# 4. Memory Organisation

#### 4.0 Introduction

The REDi provides two ways of accessing its internal memory from the PC. The first is direct physical access and the second is through commands.

The PC can directly read and write to any address inside the REDi. This gives the PC the ability to really screw things up so must be used carefully. In general, the user software should never directly write to memory it should only ever read.

The primary method of access is through commands requesting or delivering certain blocks of information. The REDi will gather or distribute the information from / to its internal memory and control the locations.

The only exception to the command access is reading out a logger memory dump. In this case the PC must lock the memory using a P\_LOCKMEM command, request a list of addresses and data lengths using the P\_GETLOGTABLE command, read out the required data using the P\_RMEMREAD command then unlock the memory again using the P\_UNLOCKMEM command.

The protocols are detailed in the section "5.0 Communications".

#### 4.1 Internal structure

The REDi memory is organised as a collection of data blocks which are referenced using an index table. The index is stored in a  $2k E^2$  memory chip due to the number of expected write cycles and has the structure shown in Fig. 4.1.1. The first 3 bytes of  $E^2$  indicate the amount of Flash memory that remains free, above the last block used. The next two bytes indicate the next free address in  $E^2$ .

The first 1k of Flash is reserved for system use and stores system variables as well as some scratch memory. The remaining 1023k holds data blocks.

Fig 4.1.1 EEPROM Memory structure

Name	Size	Description	
MemFree	3	Flash memory remaining	
TableTop	2	Next free address in this table	
Cluster000	12	Memory block index	
Cluster001	12	Memory block index	
	:		
Cluster161	12	Memory block index	
	99	System variables (top of memory)	

Fig 4.1.2 Memory block index structure

Name	Size	Description
Type of block	1	0x00 = Retrieved data record
		0x01 = Program to download
		0xE5 = Deleted (free) block - Note 1
		0xFF = End-of-table marker
Type of log	1	Type of logger
S/N	4	Serial number, lowest addr first (LSB or
		MSB depends on format in logger)
Address	3	The 3 byte flash address (LSB will be 0 as
		all blocks start on a new 256-byte page)
Length	3	The exact size (not rounded up to a page)

Each memory block index is 12 bytes long which limits the number of blocks to 162 if a 2048 byte memory chip is used with 5 bytes at the start and 99 bytes free at the end.

# The type of blocks are:

Type	Description
0	A complete memory dump that has been extracted from a radio equipped logger.
1	A complete unalterable program, ready for sending to a logger with the associated serial number. <i>The structure is still to be determined.</i>
229	Indicates a purged block and more data may follow
255	Indicates an empty block and no more data follows this

# Logger Type Code

Code	Meaning
1	IntelliMini
5	iLog
\$FF	Reserved (uninitialised EEPROM, thus "No Logger")

# Notes:

1. A block of free space is not reused until all blocks above it are freed. A "Defrag" can be forced by calling the R\_COMPACTMEM protocol.

#### 4.2 DATABASE

While the REDi interprets the data read from each logger and displays information about the logger on its display, the stored data is a raw memory dump and is not altered in any way. This will be buffered verbatim and sent on to the PC when requested. It will be stored in memory in a different way from the ChartReader (Compare to page 14 & 15 of ChartReader manual) and is as follows.

Size	Name	Description		
1	LoggerType	LOGG	ERTYPE	
3	Size			
2	CRC			
N	Data	Size	Name	Description
		18	Status reply	
		Х	Base memory	
		х	Log buffer	Full 1868 bytes for iMini Only memused for iLog
		х	НМА	Top 32 bytes for Junior

For the Intelligent Mini the exact data is:

Size	Name	Description		
1	LoggerType	1		
3	Size	2072		
2	CRC			
2066	Data	Size	Name	Description
		18	Status reply	18 bytes from RAM nibble address 0x8C to RAM nibble address 0xAF inclusive
		180	Base memory	Includes lookup table
		1868	Log buffer	
		0	НМА	

Note: The "Base memory" and "Log buffer" will always be 2048 bytes and will be the entire contents of the EEPROM.

The CRC includes the LoggerType, Size and Data. Note that it is the third item and not the last for firmware optimisation reasons.

For the iLog the exact data is:

Size	Name	Description		
1	LoggerType	5		
3	Size			
2	CRC			
N	Data	Size	Name	Description
		18	Status reply	
		768	Base memory	
		Х	Log buffer	
		128	НМА	Last X bytes of memory

Note: The "Base memory" and "Log buffer" will always be a contiguous section of memory from address \$0000 to the last valid log.

The HMA area will contain 128 bytes of humidity calibration. It will be present but blank for a non humidity iLog.

The "Status reply" will contain the standard 12 byte Status reply padded to 18 bytes with zeros.

# 4.3 Memory reference

The REDi allows the PC to directly read and write memory. To do this the PC must define not only an address and data length but also specify which memory bank is to be accessed. The following table describes the available resources.

# 1. PHYSICALMEMID

Memory ID	Description
0	Reserved
1	FLASH memory
2	FLASH memory – external ?
\$20	I2C bus 1 : EEPROM
\$21	I2C bus 2 : RTC
\$10	CPU RAM
\$11	CPU ROM
\$12	CPU Registers

Note

I<sup>2</sup>C devices

If the physical device is an I2C device then the ADDR entry is mapped as set out below:-

MSB			LSB
I2C_device Type 0 = Normal, 1=Extended	Not used	I2CWORDADDR1	I2CWORDADDR2

#### 4.4 Header Structure

REDi header structure as stored in the first 256 bytes of each logger image in Flash.

```
Note:
typedef struct PreLoggerHeader
                                                                uchar is 1 byte
uchar
        LoggerType;
                         // 0x01 = RF Mini
                                                                ulong is 4 bytes LSB first
uchar
        SerialNumber[4]; // as per Mini
                                                                uint is 2 bytes LSB first
uchar
                         // not relevant in Flash copy
        Address[3];
                                                                short is 2 bytes LSB first
uchar
                         // not relevant in Flash copy
        Length[3];
                                                                ushint (unsigned short int) is 2 bytes LSB first
uchar
        Description[25];
uchar
        BatStat;
                         // 1 = OK, 0 = Low
ulong
        StartTime;
                         // seconds since Midnight Dec 31 1999
        LoggingInterval; // in seconds
ulong
        StartTimeOffset; // day light saving in Geoffs strange format
uchar
ulong
        NumReadings;
ulong
        FirstLogAddress; // offset from the start of the loggers EEPROM dump
uint
        ProgramStatus; // same format as Mini
        MaxLoggingNum; // Num of logging to take
ulong
        TripNum;
uint
                         // in seconds
ulong
        StartDelay;
uchar
        NumberOfSensors;
short
        Sens1UpperSpec;// temperature in "Mini format"
short
        Sens1LowerSpec;
short
        Sens1Max;
short
        Sens1Min;
        Sens1Avg;
short
ushint
        Sens1Alarm;
                         // bit 0 = low alarm, bit 1 = high alarm
uchar
        Sens1AlarmDelay;
uchar
        Sens1Range;
                         // 9 = D range, 17 = LCDMini Celsius, 18 = LCDMini Fahrenheit
short
        Sens2UpperSpec;
        Sens2LowerSpec;
short
        Sens2Max:
short
        Sens2Min:
short
        Sens2Avg;
short
        Sens2Alarm;
ushint
        Sens2AlarmDelay;
uchar
uchar
        Sens2Range;
uchar
        Sens3UpperSpec;
uchar
        Sens3LowerSpec;
short
        Sens3Max;
short
        Sens3Min;
short
        Sens3Avg;
ushint
        Sens3Alarm;
uchar
        Sens3AlarmDelay;
uchar
        Sens3Range;
short
        E2Offset:
                        // not relevant in Flash copy
ushint Flags;
                      // not relevant in Flash copy
} PreLoggerHeader;
```

# 4.5 REDi Memory Map (f/w ver. 1.01f)

Structure of the data stored in the 2k EEPROM

Add.		Name	Description
0x00	3	MemLeft	Amount of free Flash memory remaining
0x03	2	NextFree	Next free address in the EEPROM where an index
			to logger data can be stored
0x05	12x	Start of index table	The logger image index table (see section 4.1)
0x793	13	Not used	
0x7A0	4	Serial Number	The serial number of this REDi. 8 BCD digits. YYWW.IIII
0x7A4	2	Product ID	LSB: Minor is Product code 0 = REDi. MSB: Brand code 0 = EDLS, [1 = Cox,] 2 = Digitron.
0x7A6	2	Hardware version	1=916, 2=868, 3=433MHz
0x7A8	4	Network address	Available for REDi's on a multidrop network Initially this will always be 0x0000 Upper 2 bytes not used
0x7AC	2	CRC	CRC of the S/N, Product ID, H/W version and Network address
0x7AE	1	Sensor type (Not used)	
0x7AF	1	BackLight time	Number of seconds before the backlight goes out
0x7B0	1	Auto off time	Number of minutes before the REDi shuts down
0x7B1	1	Num Recent	Number of loggers for the "View recent" option
0x7B2	1	Contrast	Contrast setting (no longer used)
0x7B3	1	Temperature units	"C" or "F" as an ASCII digit
0x7B4	6	Date format	5 digits, NULL terminated eg. "m-d-y", "d-m-Y"
0x7BA	2	Base year	
0x7BC	9	Time format	8 digits NULL terminated eg. "12:00:00", "24:00". Actually only second digit check for either 12 or 24
0x7C6	2	Last page refreshed	Records the page to be refreshed in Flash for long term data retention
0x7C8	1	Description length	The length of the description in bytes
0x7C9	42	Description	Description stored as ASCII
0x7F3	1	Not Used	
0x7F4	1	Baud rate (Not used)	hard coded at 9600 baud
0x7F5	1	RS232 timeout (Not used)	hard coded at 2s
0x7F6	1	Preset battery type	Bit 7 = Rechergeable
0x7F7	2	Low batt voltage level	BCD, LSB first eg. 0x02, 0x35 means 2.35V
0x7F9	1	Disable watchdog	Bit 0 : 1 = disable, 0 = enable
0x7FA	1	Crash recovery	FALSE written here during normal power down
0x7FB	1	Password flags	bit 5,6,7 - spare bit 4 - the password is masked by asterisks bit 3 - the user can erase data blocks bit 2 - Password is NOT required bit 1 - the user can re-program loggers bit 0 - the user can list loggers
0x7FC	4	Password	4 ASCII digits (only 0-9 are valid)

Unless otherwise stated multibyte values are LSB at lower address.

# 4.6 Memory faults

There are various conditions that the REDi will detect which constitute a serious malfunction of the device. Under normal operation these should never be seen and are displayed as "Internal error #" where the # is one of the numbers listed below. These may be caused by hardware faults or by incorrect or corrupt device set up.

#	Description				
1	Problem reading / writing EEPROM				
2	Problem reading / writing EEPROM				
3	Problem reading / writing EEPROM				
4	Problem reading / writing Flash				
5	Problem reading / writing Flash				
6	undefined				
7	undefined				
8	Problem reading / writing EEPROM				
9	Problem formatting the data just clocked in from a logger				

# 5. COMMUNICATIONS

#### 5.1 RS232 Overview

All RS232 communications to & from REDi are structured with the following format.

#### Header:-

	\$54	Start Character
	Network Address 1	]
	Network Address 2	Network Address characters
	Control Char	ControlCharacter
	Numdata bytes (L)	]
	Numdata bytes (H)	
		_
Data Section	Data byte 1	1 <sup>st</sup> Data byte
	Data byte 2	2 <sup>nd</sup> Data byte
	:	_
	Databyte n	n <sup>tn</sup> data byte
CRC		_
	CRC (LSB)	CRC LSB
	CRC (MSB)	CRC MSB

#### Notes

- 1. CRC used is CRC\_CCITT  $(X^{16} + X^{12} + X^5 + 1)$
- 2. Standard initial comms baud rate is 9600 baud. Negotiation up to 115k baud will then be attempted.
- 3. Communications mode is 1 start bit, 1 stop bit, no parity.
- 4. Network address to be used in multidrop comms applications.

  Will always reply to Network Address = 0, or its own network address.
- 5. It is stipulated that the control character in the expected reply will always be different to the control character sent.

See Section <u>5.4 Communications Message Control Character Values</u>

# **5.2 Communications Message Summary**

Message Control	Returns control	Description		
Woodago Comion	acknowledge	Boompaon		
P_STATUS	R_STATUS Status Info	Returns status summary of REDi - includes:  Firmware version,  Serial Number  Product ID  Hardware Version  Memory allocation,  battery voltage,  current reading,  diagnostic values  max packet size		
		This is the first message sent to find out what's there.		
P_RCONFIG	R_RCONFIG	Returns general configuration settings for REDi.		
P_SCONFIG	R_SCONFIG	Upload configuration settings to REDi.		
P_GETRTC	R_GETRTC	Requests current RTC		
P_SETRTC	R_SETRTC	Sets RTC including daylight saving info.		
P_COMMSPROPS	R_COMMSPROPS	Returns max speed of comms and any other properties that we can think of. Bit mapped properties.		
P_COMMSBAUDSET	R_COMMSBAUDSET	Sets comms speed. (bitmapped) Comms returns to default speed (9600) after defined non valid comms time.		
P_COMMSPROPSET	P_COMMSPROPSET	Low level communications properties set.		
P_LOCKMEM	R_LOCKMEM	Locks the memory so that the PC can access it without the REDi interfering		
P_RMEMREAD	R_RMEMREAD	Raw random read defined memory device at defined address.		
P_RMEMWRITE	R_RMEMWRITE	Raw random Write to defined memory device at defined address.		
P_UNLOCKMEM	R_UNLOCKMEM	Unlocks the memory passing control back to REDi		
P_FWLOAD_BOOT	R_FWLOAD_BOOT	Boots processor firmware load RAM program		
P_GETCHARGER	R_GETCHARGER	Returns with current charger configuration		
P_SETCHARGER	R_SETCHARGER	Sets charger's configuration		
P_TEST	R_TEST	Performs requested diagnostic test on REDi		
P_GETLOGTABLE	R_GETLOGTABLE	Obtains a list of all the logger memory dumps in REDi		
P_FLUSHLOGGER	R_FLUSHLOGGER	Deletes one memory dump from memory		
P_SETLOGGER	R_SETLOGGER	Sends a logger memory dump to REDi		
P_SETPROGRAM	R_SETPROGRAM	Sends a pre-formatted logger program to REDi		
P_FLUSHPROGRAM	R_FLUSHPROGRAM	Deletes one program from memory		

<sup>\*</sup>Greyed out items are planned but not currently defined.

# **Communications Message Protocols**

\$54

# P\_STATUS

Msg to unit:-

This message is to be used as the first enquiry message to determine the type and firmware. All multibyte quantities are "little endian" (lowest byte at lowest address).

Start Character

_	0	i	
	0	Network Address	
	P_STATUS	Control Character	
	0	Control Character	
	0	Num data bytes = 0	
		Nam data bytes = 0	
	CRC (LSB)	ļ	
Daraha	CRC (MSB)	J	
Reply:-	<b>654</b>	1 2: : 2: :	
Header:	\$54	Start Character	
	0		L (O NETWORKARRY)
	0		adcast 0 or my NETWORKADDR)
	R_STATUS	Control Character	
	\$40	Numdata bytes = 64	
	0	j	
Data Section :		J	
0	FWVER MINOR	FWVER MAJOR	7
2	SERIALNUM (LSB)	SERIALNUM	┪
4	SERIALNUM	SERIALNUM (MSB)	Note 1
6	PRODUCTID_MINOR	PRODUCTID_MAJOR	Note 2
8	HARDWARE_VERSION	1=916, 2=868, 3=433MHz	i
10	NETWORKADDR (LSB)	NETWORKADDR (MSB)	Current Unique Network Addr
12	MEMSIZE (LSB)	MEMSIZE	for logger memory dumps etc.
14	MEMSIZE	MEMSIZE (MSB)	7
16	FREEMEM (LSB)	FREEMEM	free memory remaining
18	FREEMEM	FREEMEM (MSB)	i
20	0	0	i
22	0	0	i
24	BATTERYVOLTS_LSB	BATTERYVOLTS_MSB	BCD format xx.xx 0xFFFF if reading fails
26	0	0	i i
28	SYSTEM_STATUS_L	SYSTEM_STATUS_M	Note 3
30	0	0	<b>i</b>
32	MEMORY_STS	MEMORY_STS	0=unlocked, 1 locked by M16, 2 = locked by PC
34	BUILD_NUMBER_L	BUILD_NUMBER_M	16-bit int
36	1 = SAFE_MODE	Password flags	ヿ゙
38	PASSWORD_1	PASSWORD_2	ヿ゙
40	PASSWORD_3	PASSWORD_4	Ť
l	:	:	<del></del>
62	0	0	7
	CRC (LSB)	CRC (MSB)	CRC
Notes	•	•	

# Notes

- 1.
- The serial number of the unit. (XXXX.XXXX). BCD format YYWW.IIII.

  Product ID: Major is Brand code 0 = EDLS, [1 = Cox,] 2 = Digitron.

  Minor is Product code 0 = REDi.

# System Status

Bit #	Meaning of SET bit
0	External Power connected
1	Battery Overtemp warning (discontinued)
2	Charging now
3	Rechargeable batteries fitted
4	Charger suspended (e.g. no battery, or faulty battery detected)
5	Required password has not been entered correctly (into REDi)
6-15	Clear (always 0)

#### P\_COMMSPROPS

Provides communications properties of unit.

Message to unit:-

\$54
0
0
P_COMMSPROPS
0
0
CRC (LSB)
CRC (MSB)

Start Character

Network Address Control Character

Num data bytes = 0

Reply:-

Header:

\$54	
0	
0	
R_COMMSPROPS	
12	
0	

Start Character

Network Address Control Character Numdata bytes.

Data Section:

BAUDRATEMAP	Reserved (0)
DF_BAUDRATEMAP	Reserved (0)
MAX_MSGNUMBYTES	MAX_MSGNUMBYTES
NETWORKADDR (LSB)	NETWORKADDR
RESETTIMEOUT	Reserved (0)
INTERCHAR TIMEOUT	0

Note 4 Note 5 Note 6

Note 1 Note 2 Note 3

**CRC** 

CRC (LSB)	
CRC (MSB)	

CRC LSB CRC MSB

# **Notes**

1. BAUDRATEMAP: bit mapped properties showing available baud settings:-

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
115k2	57k6	38k4	19k2	9600	921k6	460k8	230k4

2. DF\_BAUDRATEMAP: Current System Default is 9600. Shown with bit set in 9600 field.

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
115k2	57k6	38k4	19k2	9600	921k6	460k8	230k4
0	0	0	0	1	0	0	0

- 3. MAX\_MSGNUMBYTES: The max number of bytes allowed in a message data section. (both for TX & RX)
- 4. Network ID
- 5. RESETTIMER: Number of 10<sup>th</sup> of seconds of no or invalid messages before resetting comms to default..
- 6. INTERCHAR TIMEOUT : timeout value between characters during reception. (units to be defined but probably 1 ms)

#### P\_COMMSPROPSET

Message to set the settable communications properties.

Message to unit:-

\$54	Start Character
0	
0	Network Address
P_COMMSPROPSET	Control Character
12	Num data bytes = 12
0	

Data Section:

0	
0	Note 1
0	
NETWORKIDADDR	Note 3
0	Note 2
0	Note 4
	0 0 0 NETWORKIDADDR 0 0

 CRC
 CRC (LSB)
 CRC LSB

 CRC (MSB)
 CRC MSB

Reply:-

\$54 0	Start Character
0	Network Address
R_COMMSPROPSET	Control Character
1	Numdata bytes.
0	

Data Section:

Return Code Note 5

 CRC
 CRC (LSB)
 CRC LSB

 CRC (MSB)
 CRC MSB

#### **Notes**

1. DF\_BAUDRATEMAP : bit mapped baud settings:-

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
115k2	57k6	38k4	19k2	9600	921k6	460k8	230k4

Defines the default baud rate for the unit.

- 2. RESETTIMEOUT in 10ths of seconds  $0.1 \sim 25.5$  seconds. 0 = reset to default immediately.
- 3. NETWORKID: Sets the network id for the unit.
- 4. INTERCHAR TIMEOUT : future we may need this.
- 5 Reply Message Return Codes:-

Reply message always at same speed as sent message.

Return Code	Meaning
0	OK
1	Baud rate unavailable

# P\_COMMSBAUDSET

Message to set the comms to a new speed and timeout

Message to unit:-

\$54	Start Character
0	
0	Network Address
P_COMMSBAUDSET	Control Character
4	Num data bytes = 4
0	

Data Section:

BAUDRATEMAP	0	Note 1
RESETTIMEOUT	0	Note 2

**CRC** 

CRC (LSB)	CRC LSB
CRC (MSB)	CRC MSB

Reply (at same speed as sent):-

Header:

\$54	Start Character
0	
0	Network Address
R_COMMSBAUDSET	Control Character
1	Numdata bytes.
0	

Data Section:

|--|

CRC

CRC (LSB)	CRC LSB
CRC (MSB)	CRC MSB

#### **Notes**

1 BAUDRATEMAP: bit mapped baud settings:-

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
115k2	57k6	38k4	19k2	9600	921k6	460k8	230k4

Bit is set in field of required baud rate.

- 2 RESETTIMEOUT in 10ths of seconds 0.1 ~ 25.5 seconds.
- 1 Reply Message Return Codes:-

Reply message always at same speed as sent message.

Return Code	Meaning
0	OK : next messages(s) will be at baud rate defined.
1	Baud rate unavailable

#### P RCONFIG.

Protocol to read the general configuration of the REDi. The configuration contains:-

- Degrees C or F display
- Date & Time format (MM/DD/[YY]YY or DD/MM/[YY]YY)
- General description string (max 42 characters)
- LCD contrast setting
- Backlight off time (if backlight installed)
- Automatic turn-off time.

Messag	e to	unit:
IVICOOUG	10	uiii.

\$54	Start Character
0	
0	Network Address
P_RCONFIG	Control Character
0	
0	Num data bytes = 0
CRC (LSB)	
CRC (MSB)	
	•

Reply:-Header:

Start Character

Network Address Control Character Numdata bytes.

Data Section:

		_
F 0 0 D D S T Y	N 0 0 0 0 0 0	Note 1
AUTOOFFTIME	BACKLIGHTOFFTIME	Notes 3,4
LCDCONTRASTVAL	0	Note 5.
Numdescrchars		Note 2
Descchar 1		
:		
Databyte n		
	-	
	1	

CRC

CRC (LSB)	CRC LSB
CRC (MSB)	CRC MSB

#### **Notes**

1. Bit D : date format (1=US (MM/DD/YY), 0 = Euro (DD/MM/YY)

Bit F: 1 =temperatures in degrees F, 0 =temperatures in degrees C.

Bit Y: Set if year 4 digit, else 2 digit.

Bit T: Set if 24 hour time format, 0 if 12 hour format (am/pm).

Bit S: Display Seconds : 1 = disable

Bit N: Set if recharging of batteries is allowed

- 2. General description string that appears on opening screen banner and software printouts.
- 3. Automatic off time in minutes (1-255), 0 = no autooff time.
- 4. Backlight off time in 1 second units (1~255), 0 = no backlight off time.
- 5. LCD contrast setting.

#### P\_SCONFIG.

Protocol to set the general configuration of the REDi.

Message to unit:-

\$54	Start Character
0	
0	Network Address
P_SCONFIG	Control Character
N	
0	Num data bytes

Data Section:

F 0 0 D D S T Y	B 0 0 0 0 0 0 0	Note 1
AUTOOFFTIME	BACKLIGHTOFFTIME	Notes 3,4
LCDCONTRASTVAL	0	Note 5.
Numdescrchars		Note 2
Descchar 1		
:		
Databyte n		

**CRC** 

CRC (LSB)	CRC LSB
CRC (MSB)	CRC MSB

Reply:-Header:

	•
\$54	Start Character
0	
0	Network Address
R_SCONFIG	Control Character
1	Numdata bytes.
0	
status	0 = OK, 1 = Error – I've stuffed it up for some reason
CRC (LSB)	
CRC (MSB)	
	•

#### **Notes**

1. Bits D : date format (01=US (MM/DD/YY), 00 = Euro (DD/MM/YY)

Bit F: 1 =temperatures in degrees F, 0 =temperatures in degrees C.

Bit Y: Set if year 4 digit, else 2 digit.

Bit T: Set if 24 hour time format, 0 if 12 hour format (am/pm).

Bit S: Display Seconds: 1 = disable

Bit B: Battery type : 1 = rechargeable, 0 = non-rechargeable

- 2. General description string that appears on opening screen banner and software printouts.
- 3. Automatic off time in minutes (1-255), 0 = no autooff time.
  4. Backlight off time in 0.5 seconds units (1~255), 0 = no backlight off time.
- 5. LCD contrast setting.

# P\_GETRTC

Provides current RTC registers

Message to unit:-

\$54
0
0
P_GETRTC
0
0
CRC (LSB)
CRC (MSB)

Start Character

Network Address Control Character

Num data bytes = 0

Reply:-

Header:

\$54	
0	
0	
R_GETRTC	
12	
0	

Start Character

Network Address Control Character Numdata bytes.

Data Section (for P\_GETRTC):

SECONDS	
MINUTES	
HOURS	
DOW	
DOM	
MONTH	
Year Code 0	-3
YEAR (LSB)	
YEAR (MSB)	
0	
0	
0	

CRC

CRC (LSB	)
CRC (MSB	<u>)</u>

CRC LSB CRC MSB

NOTE: All time values are in BCD.

# P\_SETRTC

Writes new values to RTC registers

Message to unit:-

\$54
0
0
P_SETRTC
12
0

Start Character

Network Address Control Character

Num data bytes = 12

Data Section:

SECONDS	
MINUTES	
HOURS	
DOW	
DOM	
MONTH	
Year Code	0-3
YEAR (LSB)	
YEAR (MSB)	
0	
0	
0	

CRC

CRC (LSB)	
CRC (MSB)	

CRC LSB CRC MSB

Reply:-

Header:

\$54
0
0
R_SETRTC
1
0
Status
CRC (LSB)
CRC (MSB)

Start Character

Network Address Control Character Numdata bytes.

Note 1

NOTE: All time values are in BCD.

Notes:

1.	Error	Definition
	0x00	OK (no error)
	0x01	RTC hardware unavailable
	0x02	invalid data (non BCD)

# P\_LOCKMEM

Protocol to lock one of the banks of REDi memory. This is used to effectively disable the user from retrieving or deleting memory blocks while the PC is accessing the memory.

Message	to	unit:-
---------	----	--------

\$54	Start Character
0	]
0	Network Address
P_LOCKMEM	Control Characte
1	Num data bytes
0	)

Data Section : PHYSICALMEMID The ID of the memory block to lock

CRC (LSB)	CRC LSB
CRC (MSB)	CRC MSB

Reply:-

\$54	Start Character
0	
0	Network Address
R_LOCKMEM	Control Characte
1	Numdata bytes.
0	

Note 1

Data Section:

CRC (LSB)	CRC LSB
CRC (MSB)	CRC MSB

Error Code

Notes:

CRC

1.	Error	Definition
	0x00	Memory successfully locked
	0x01	Memory cannot be locked

# P\_RMEMREAD

Provides raw read of specified physical memory device.

Message	tΛ	III	14
IVICOSAUC	w	un	IL.

\$54	Start Character
0	7
0	Network Address
P_RMEMREAD	Control Character
8	Num data bytes = 8
0	7

Data Section:

PHYSICALMEMID	Not used	Note 1
ADDR_LSB	ADDR	
ADDR	ADDR_MSB	Note 2
NUMBYTES	NUMBYTES	Note 3

CRC CRC LSB CRC (LSB) CRC (MSB) CRC MSB

Reply:-

\$54	Start Character
0	]
0	Network Address
R_RMEMREAD	Control Character
N	Numdata bytes.
N	Ī

Data Section:

		_
PHYSICALMEMID	I2C_ADDR	Note 1
ADDR_LSB	ADDR	]
ADDR	ADDR_MSB	Note 2
NUMBYTES	NUMBYTES	Note 3
Data byte1		-
:	_	
Databyte n		

CRC CRC (LSB) CRC LSB CRC (MSB) CRC MSB

# Notes

- PHYSICALMEMID: Physical memory id.
- 2 Address in device : address limit is device dependant!
- 3 Numbytes to read (limits and boundaries over which read will operate are device dependant!)

Note 1

Note 2 Note 3

#### P\_RMEMWRITE

Provides raw write to specified physical memory device

Message to unit:-

\$54	Start Character
0	]
0	Network Address
P_RMEMWRITE	Control Character
n	Num data bytes
n	]

Data Section:

PHYSICALMEMID	Not used
ADDR_LSB	ADDR
ADDR	ADDR_MSB
NUMBYTES	NUMBYTES
Data byte1	

Data byte2 .

Databyte n

CRC (LSB)	CRC LSB
CRC (MSB)	CRC MSB

Reply:-

\$54
0
0
R_RMEMWRITE
1
0

Start Character

Network Address Control Character Numdata bytes.

Data Section:

Return Code Note 4

 CRC
 CRC (LSB)
 CRC LSB

 CRC (MSB)
 CRC MSB

#### Notes

1 PHYSICALMEMID: Physical memory id.

2 Address in device : address limit is device dependant!

3 Numbytes to read (limits and boundaries over which read will operate are device dependant!)

Return Code Meaning

0 OK : Memory Write OK

F Fail: Hardware Error

# P\_UNLOCKMEM

Protocol to unlock memory after the PC has finished accessing it. Note that if this command is not executed then the REDi is effectively disabled from retrieving any more logger images.

Message to unit:-		
· ·	\$54	Start Character
	0	
	0	Network Address
	P_UNLOCKMEM	Control Character
	1	Num data bytes
	0	
Data Section :	PHYSICALMEMID	The ID of the memory block to release
ı		
	CRC (LSB)	CRC LSB
	CRC (MSB)	CRC MSB
Reply:-		
	\$54	Start Character
	0	
	0	Network Address
	R_UNLOCKMEM	Control Character
	1	Numdata bytes.
	0	
Data Section :		
	Error Code	Note 1
ı		
CRC	CRC (LSB)	CRC LSB

# Notes:

1.	Error	Definition
	0x00	Memory successfully unlocked
	0x01	Memory cannot be unlocked

**CRC MSB** 

CRC (MSB)

#### P\_FWLOAD\_BOOT

This protocol places the processor in the mode required for firmware upload into the processor FLASH ROM.

Message to unit:-

\$54	Start Character
0	
0	Network Address
P_FWLOAD_BOOT	Control Character
0	
0	Num data bytes = 0
CRC (LSB)	
CRC (MSB)	

Reply:-

Start Character
Network Address
Control Character
Numdata bytes.
CRC LSB
CRC MSB

"Rewrite Mode" is a special processor mode in which firmware is copied into RAM and executed. In this mode, the Flash ROM (which contains the firmware) can be reprogrammed just like any flash memory. This feature allows the product firmware to be replaced "in the field". The above command (if executed successfully) places the processor in this mode, and the communications protocols are completely different from those used in the "normal" REDi mode. Please see the ChartReader Technical Manual for a fuller description.

The command table is reproduced here, but may not be updated to follow future developments.

Command	CODE	Description
P_SET_KEYBOARD	\$77	Sets/Clears the keyboard beeper.
P_READ_PAGE	\$88	Reads a page of program memory.
P_WRITE_PAGE	\$99	Writes a page of program memory.
P_ERASE_BLOCK	\$AA	Erases a block of program memory so that it can be reprogrammed.
P_ERASE_ALL	\$BB	Erases the entire program memory so that it can be completely reprogrammed.
P_EXIT_REWRITE	\$CC	Exits Reader from Rewrite mode via a software reset (back into Run mode). Must be done once finished.

Note: The password feature is not used. If the message has a correct CRC and a correct command byte, then it is executed.

#### P\_GETCHARGER

Message to get charger parameters.

Message to unit:-

Header:

	<b>1</b>
\$54	Start Character
0	
0	Network Address
P_GETCHARGER	Control Characte
0	Numdata bytes.
0	]
	_
CRC (LSB)	CRC LSB

CRC (MSB)

Reply:-

CRC

\$54	Start Character
0	]
0	Network Address
R_GETCHARGER	Control Character
12	Num data bytes = 12
0	

Data Section:

_		
Note 1	0	CHARGERSTS
Note 2	MAXCHARGETIME	MAXCHARGETIME (L)
Note 3	CHARGETIMEOUT	CHARGETIMEOUT
Note 4	CHARGEBATTVOLTS	CHARGEBATTVOLTS
Note 5	MAXCHARGEBATTVOLTS	MAXCHARGEBATTVOLTS
	RECHARGEBATTVOLTS	RECHARGEBATTVOLTS

**CRC MSB** 

CRC

CRC (LSB)	CRC LSB
CRC (MSB)	CRC MSB

#### **Notes**

- 1. CHARGERSTS: bit 0 set if charger enabled.
- 2. MAXCHARGETIME: maximum time (in minutes) to fast charger battery (falls to trickle after this)
- 3. CHARGETIMEOUT: Maximum time (in seconds) to charge without battery voltage change (this option negated with implementation of charging voltage curve derivative inflection detection)
- 4. CHARGEBATTVOLTS: Always charge to at least this voltage. (int value x 100)
- 5. MAXCHARGEBATTVOLTS: Never charge above this voltage. (Charge terminated) (int value x 100)
- 6. RECHARGÉBATTVOLTS: Initiate recharge when battery voltage falls to this value. (int value x 100)

#### P\_SETCHARGER

Message to set charger parameters.

Message to unit:-

\$54	Start Character
0	
0	Network Address
P_SETCHARGER	Control Character
12	Num data bytes = 12
0	]

Data Section:

CHARGERSTS	0	Note 1
MAXCHARGETIME (L)	MAXCHARGETIME	Note 2
CHARGETIMEOUT	CHARGETIMEOUT	Note 3
CHARGEBATTVOLTS	CHARGEBATTVOLTS	Note 4
MAXCHARGEBATTVOLTS	MAXCHARGEBATTVOLTS	Note 5
RECHARGEBATTVOLTS	RECHARGEBATTVOLTS	

CRC

CRC (LSB)	CRC LSB
CRC (MSB)	CRC MSB

Reply:-

Header:

\$54	Start Character
0	
0	Network Address
R_SETCHARGER	Control Character
1	Numdata bytes.
0	
Status	0 = this message is greyed so stop asking for this you bozo
CRC (LSB)	CRC LSB
CRC (MSB)	CRC MSB

CRC

#### Notes

- 1 CHARGERSTS: bit 0 set if charger enabled.
- 2 MAXCHARGETIME: maximum time (in minutes) to fast charger battery (falls to trickle after this)
- 3 CHARGETIMEOUT: Maximum time (in sections) to charge without battery voltage change (this option negated with implementation of charging voltage curve derivative inflection detection)
- 4 CHARGEBATTVOLTS: Always charge to at least this voltage. (int value x 100)
- 5 MAXCHARGEBATTVOLTS: Never charge above this voltage. (Charge terminated) (int value x 100)
- 6 RECHARGEBATTVOLTS: Initiate recharge when battery voltage falls to this value. (int value x 100)

### P\_TEST

The PTEST protocol allows specific diagnostic tests to be performed and reported on in the unit.

Message to unit:-\$54 Start Character 0 **Network Address** 0 P\_TEST **Control Character** N Num data bytes depends on test Ν Data Section: TESTTYPE 0 Note 1 **NUMDATABYTES** 0 Note 2 Data byte1 Data byte2 Databyte n **CRC** CRC LSB CRC (LSB) CRC (MSB) **CRC MSB** Reply: Message to unit:-\$54 Start Character 0 **Network Address** 0 R\_TEST **Control Character** Ν Num data bytes depends on test Ν Data Section: TESTTYPE 0 Note 1 **NUMDATABYTES** Note 2 0 Data byte1 Data byte2 Databyte n **CRC** 

CRC (LSB)

CRC (MSB)

### **TESTTYPE Codes**

TESTTYPE	Meaning
1	Data Section Echoed back (i.e a PING)
4	WakeTestLogger - Will request a loggers data size (with serial number defined by the first 5 bytes in the data section). If the logger does not respond then it will broadcast a general WakeUp packet then request the loggers data size again. The REDi will reply to the PC with True or False in the data section of an R_TEST packet depending on whether the logger responded or not. It also creates an array in the first few bytes of the serial Flash which has the form PTL,PTH,R0L,R0H,R1L,R1HR14L,R14H,0xFF
	where PT is the packet type, R0 is the result code of the first attempt to talk

CRC LSB

**CRC MSB** 

	to the logger, R1 is the second etc. up to 15 attempts. The result code is :	
	0x0000 : if no reply at all	
	0x0001 : if everything looks fine	
	0x0002 : if all bytes had correct Manchester encoding but the CS was wrong	
	0x0008 : if we got the preamble but the STX was wrong or never came	
	0xRRNN : where RR = 0x09 (timed out after NN bytes) and NN = the	
	number of bytes	
	0xRRNN : where RR = 0x00 and NN = the number of bytes up until a	
	Manchester error	
5	GetTestLoggerStatus - Reads a status packet from the logger with serial	
	number defined by the first 5 bytes in the data section. It does not attempt	
	to wake the logger up. It first reads the lowest 64 bytes of EEPROM so that	
	the logger is forced to update its Status packet reply. It returns in the data	
	section of the R_TYPE packet:	
	0 : True or False depending on whether the logger replied or not	
	1: F/W version low byte 2: F/W version high byte	
	3: Battery status, 1 = OK, 0 = Low	
6	DumpTestLoggerAndCheck - Reads the lowest 64 bytes of EEPROM from	
	the logger with serial number defined by the first 5 bytes in the data section	
1	and checks for a specific pattern. This pattern is 0x12,0x34,0x56 at address	
	0x0024,0x0025,0x0026. It returns in the first byte of the data section of the	
	R_TYPE packet: 0 if no response from the logger, 1 if the logger responded	
	and the data was correct, 2 if the logger responded but the data was not	
	correct.	
7	ReadTestLoggerCurrent - the same as GetTestLoggerStatus except it is for	
	the RF test jig and instead of measuring the battery status it measures it's	
8	own current consumption (1 = high, 0 = OK)  PerformBackOffTest - Intended only for the REDi that is embedded in the	
	RF test jigs. This command causes the REDi to transmit a	
	HowMuchDataDoYouHave packet and record whether it got a good reply, a	
	corrupt reply or no reply at all. It does this 20 times. It then switches a 3dB	
	attenuator into the line just before the antenna and repeats 20	
	transmissions. It does this for 11 steps of 3dB (30dB total). The results are	
	returned to the PC in the data section of the R_TYPE packet as 11 blocks	
	of 3 bytes where each block of 3 bytes holds the number of replies in each	
	group of 20 transmissions that were OK, Corrupt or No reply.	
	In addition to this, after the REDi has sent and received the 11x20 packets it	
	measures the background noise 3 times with a built in RSSI then sends 5	
	packets and with any luck gets 5 replies from the DUT. During each reply it	
1	reads the RSSI and records a measure of the loggers transmit power.  These results are returned in the R_TYPE packet data section as well.	
1	Following the 11 x 3 bytes are 3 short integers relating to background noise	
	then 5 short integers relating to DUT transmit strength.	
9	EnterTestMode - this puts the REDi into a mode where it pretends to be an	
	RF Mini so that it can be tested on the same RF test jig as a Mini. It will	
	respond to the PC immediately before entering this mode but once in this	
1	mode will not monitor it's RS232 port. The response is 0x01 in the first byte	
	of the R_Type packet.	
10	GetRSSI - Intended only for the REDi that is embedded in the RF test jigs.	
	This command causes the REDi to read the RSSI in the test jig and report	
	the results. It reads it 3 times and replies with 3 short integers in the data	
	section of the R_TYPE packet. The numbers are the actual ADC value that	
11	is read.  ContinuousTransmitLoop - Intended only for the REDi that is embedded in	
''	the RF test jigs. This function will transmit 20 packets then switch in the	
1	next 3dB attenuation step. It is intended for calibrating / diagnosing the RF	
	test jigs. It continues until power is removed and will not react to RS232.	
12	SendGoToSleep - Put the logger with serial number defined by the first 5	

bytes in the data section to sleep.

### P\_GETLOGTABLE

The PGETLOGTABLE protocol enables the PC to see what logger and/or program images (if any) are stored in the REDi. It can be thought of as a memory allocation table.

Message to unit:-		
_	\$54	Start Character
	0	
	0	Network Address
	P_GETLOGTABLE	Control Character
	0	Num data bytes
	0	
CRC	000 (100)	000100
	CRC (LSB)	CRC LSB
	CRC (MSB)	CRC MSB
Reply:		
торгу.		
Message to unit:-		
	\$54	Start Character
	0	
	0	Network Address
	R_GETLOGTABLE	Control Character
	N	Num data bytes (depends on table size)
5 . 0 .:	N	
Data Section :		
	Index (LSB)	Unique identifier for this logger dump
	Index (MSB)	Note 1
	Block type	BLOCKTYPE
	Logger type	LOGGERTYPE
	s/n (low logger addr)	The four byte serial number (format
	s/n	depends on the type of logger)
	s/n	
	s/n (high logger addr)	Lagation in flash recovery
	Address (LSB)	Location in flash memory
	Address (MSR)	
	Address (MSB)	Size of the logger data (in bytes)
	Buffer size (LSB) Buffer size	Size of the logger data (in bytes)
ļ	Buffer size (MSB)	
	( Further loggers )	14 bytes each, as above
		•
CRC		
	CRC (LSB)	CRC LSB
	CRC (MSB)	CRC MSB

#### Notes:

1. This is a zero-based index number, which is needed for reference when using GET/SET/FLUSH LOGGER, GET/SET/FLUSH PROGRAM etc. There may be several images of the same logger in memory so the serial number cannot be used as a reference. Note that there may also be different types of logger with a given serial number.

#### P\_FLUSHLOGGER

The FLUSHLOGGER command enables the PC to free up memory inside the REDi by deleting the memory dump of a certain logger. The logger is referenced by index and the type and serial number are compared before deleting.

The index number (required) is obtained from P GETLOGTABLE.

Message to unit:-

\$54		
0		
0		
P_FLUSHLOGGER		
5		
0		
Index (LSB)		
Index (MSB)		
LOGGERTYPE		
s/n (LSB)		
s/n		
s/n		
s/n (MSB)		
·		

Start Character

Network Address Control Character Num data bytes

**CRC** 

CRC (LSB)	
CRC (MSB)	

CRC LSB CRC MSB

Reply:

\$54		
0		
0		
R_FLUSHLOGGER		
1		
0		
Error code		

Start Character

Network Address Control Character Num data bytes

Note 1

CRC

CRC (LSB)	CRC LSB
CRC (MSB)	CRC MSB

#### Note

1.

Error	Meaning	
0	No error - Logger flushed	
1	Internal problem, contact supplier	

2. Once a logger is flushed, the logger index table is changed, so it should be re-read if required.

#### P\_SETPASSWORD

The SETPASSWORD command enables the PC to set the Flags byte and the 4-byte password itself.

Message to unit:-		
	\$54	Start Character
	0	
	0	Network Address
	P_SETPASSWORD	Control Character
	5	Num data bytes
	0	
Data Section :		0 N
	Flags byte 1 <sup>st</sup> char	See Note 1.
	nd	New password, see Note 2.
	16	
	4 <sup>tri</sup> char	
CRC		
	CRC (LSB)	CRC LSB
	CRC (MSB)	CRC MSB
	one (mes)	
Reply:		
	\$54	Start Character
	0	
	0	Network Address
	R_SETPASSWORD	Control Character
	1	Num data bytes = 1
	0	
Data Section :		_
	Failure code	0 = Success
CDC		
CRC	000 (100)	000100
	CRC (LSB)	CRC LSB
	CRC (MSB)	CRC MSB

1. Password flags

Bit #	Meaning of SET bit	Initial value
0	This REDi can list any logger	1
1	This REDi can program/rearm/restart any logger	1
2	REDi operator password is not required	1
3	User can erase logger data without the PC	0
4	Password entry is not displayed on REDi (masked by asterisks)	0
5-7	Available for use by software	0

2. There is as yet no specification on the allowed characters. Initially, exactly 4 digits are required, because this is generated by the firmware when the user logs in. It is expected that upper- and lower-case letters will also be permissible (i.e. enterable at login time). It should also be easy to allow a variable length string of up to 4 characters, either with a null terminator or with all unused characters set to null. As a consequence, it is easily possible to set a password which cannot be entered, thereby preventing anyone from using the REDi. For maximum future expansion, it is currently implemented as 1 ASCII code per byte. Default value after initialisation is "0000" (0x30303030).

## P\_SETPROGRAM

The PSETPROGRAM command allows the PC to write a program to the REDi memory. Obviously this will only end up in a logger when the user sends it to one.

Message to unit:-

\$54	Start Character
0	
0	Network Addres
P_SETPROGRAM	Control Characte
5	Num data bytes
1	
LOGGERTYPE	The type of logg
s/n (LSB)	The serial numb
s/n	
s/n	
s/n (MSB)	
Program	256 bytes of pro
CRC (LSB)	CRC LSB

ss ter

**CRC MSB** 

**CRC MSB** 

ger the program is for ber of the logger

CRC

CRC (LSB)	
CRC (MSB)	

CRC (MSB)

ogram information

Reply:

Message to unit:-

\$54	Start Character
0	
0	Network Address
R_SETPROGRAM	Control Character
1	Num data bytes
0	
Error code	Note 1
	-
CRC (LSB)	CRC LSB

**CRC** 

1.

Error	Meaning
0	Success - Program stored
1	Fail - internal problem, contact supplier
2	Fail - A program already exists for this type and s/n

## P\_FLUSHPROGRAM

The PFLUSHPROGRAM command allows the PC to delete a program at random from the REDi memory.

Message to unit:-

\$54	Start Character
0	
0	Network Address
P_FLUSHPROGRAM	Control Character
7	Num data bytes
0	
Index(LSB)	
Index(MSB)	
LOGGERTYPE	The type of logger the program is for
s/n (LSB)	The serial number of the logger
s/n	
s/n	
s/n (MSB)	
CRC (LSB)	CRC LSB
CRC (MSB)	CRC MSB

Reply:

CRC

Start Character
Network Address
Control Character
Num data bytes
Note 1
CRC LSB
CRC MSB

**CRC** 

Note

1.

Error	Meaning
0	Program successfully flushed
1	Internal problem, contact supplier

2. Once a logger is flushed, the logger index table is changed, so it should be re-read if required.

## **5.3 Communications Message Control Character Values.**


Poll control command	Value	Reply control acknowledge	Value
	(\$)		(\$)
P_STATUS	A0	R_STATUS with Status Info	A1
P_RCONFIG	A2	R_RCONFIG	А3
P_SCONFIG	A4	R_SCONFIG	A5
P_GETRTC	B4	R_GETRTC	B5
P_SETRTC	B6	R_SETRTC	B7
P_COMMSPROPS	B8	R_COMMSPROPS	B9
P_COMMSBAUDSET	BA	R_COMMSBAUDSET	BB
P_COMMSPROPSET	ВС	R_COMMSPROPSET	BD
P_LOCKMEM	D0	R_LOCKMEM	D1
P_RMEMREAD	E2	R_RMEMREAD	E3
P_RMEMWRITE	E4	R_RMEMWRITE	E5
P_UNLOCKMEM	D6	R_UNLOCKMEM	D7
P_FWLOAD_BOOT	F0	R_FWLOAD_BOOT	F1
P_GETCHARGER	A6	R_GETCHARGER	A7
P_SETCHARGER	A8	R_SETCHARGER	A9
P_TEST	AA	R_TEST	AB
P_GETLOGTABLE	BE	R_GETLOGTABLE	BF
P_SETLOGGER	B2	R_SETLOGGER	В3
P_FLUSHLOGGER	C8	R_FLUSHLOGGER	C9
P_SETPASSWORD	CA	R_SETPASSWORD	CB
P_SETPROGRAM	CC	R_SETPROGRAM	CD
P_FLUSHPROGAM	CE	R_FLUSHPROGAM	CF

Greyed out means messages are not yet implemented.

### 6.0 Radio communications

#### 6.1 Datastream

The transmission of data uses Manchester encoding so every bit is transmitted as two bits, first the bit itself then second the inversion of the bit. This keeps the signal DC balanced and allows for 100% error checking. The data is clocked LSB first. The diagram below shows a command packet ..

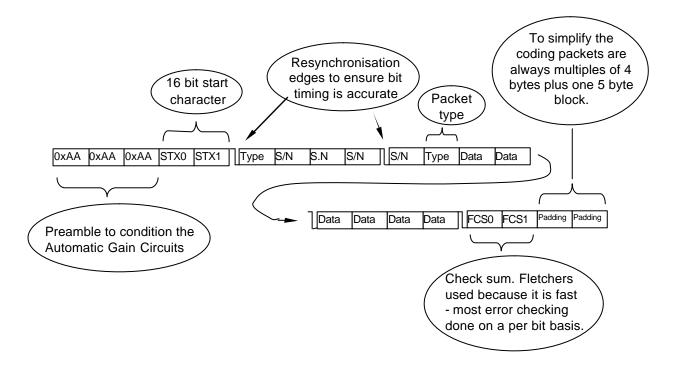

## 6.2 Packet format

# Wake Up packet:

Field name	# bytes	Field content
Preamble	3	0xAA,0xAA,0xAA
Start character	2	0x72, 0x65
Packet type	1	0x00 - Wake up
Check Sum	2	0x06, 0x22 - Fletcher

## Command packet:

Field name	# bytes	Field content
Preamble	3	0xAA,0xAA,0xAA
Start character	2	
Recipient	5	TSSSS (Logger Type, Serial Number)
Packet type	1	Variable
Data	6	Always 6 bytes in length
Check Sum	2	Fletcher

## Very Short Data Packet:

Field name	# bytes	Field content
Preamble	3	0xAA,0xAA,0xAA
Start character	2	
Logger / Recipient	5	TSSSS (Logger Type, Serial Number)
Packet type	1	0xF0
Data	6	Always 6 bytes in length
Check Sum	2	Fletcher

## Short Data Packet:

Field name	# bytes	Field content
Preamble	3	0xAA,0xAA,0xAA
Start character	2	
Logger / Recipient	5	TSSSS (Logger Type, Serial Number)
Packet type	1	0xF1
Data	32	Always 32 bytes in length
Check Sum	2	Fletcher

## Long Data Packet:

Field name	# bytes	Field content
Preamble	3	0xAA,0xAA,0xAA
Start character	2	
Logger / Recipient	5	TSSSS (Logger Type, Serial Number)
Packet type	1	0xF2
Data	48	Always 48 bytes in length
Sequence	4	Packet number (LSB first)
Check Sum	2	Fletcher

# Very Long Data Packet :

Field name	# bytes	Field content
Preamble	3	0xAA,0xAA,0xAA
Start character	2	
Logger	5	TSSSS (Logger Type, Serial Number)
Packet type	1	0xF3
Data	64	Always 64 bytes in length
Sequence	4	Address where this data has come from (LSB first)
Check Sum	2	Fletcher

# Single Byte Reply:

Field name	# bytes	Field content
Preamble	3	0xAA,0xAA,0xAA
Start character	2	
Logger	5	TSSSS (Logger Type, Serial Number)
Packet type	1	Variable (Ack, Nack etc.)
Check Sum	2	Fletcher

## 6.3 Specific packet types

## REDi to Logger

Name	Packet ID (PType)	Packet Type	Recipient	Data	Description
Wake Up	0x00	Wake up	Non specific	none	Broadcast over and over for 1 second to wake up all loggers.
Ack	0x01	Single Byte Reply	TT,SN,SN,SN,SN	none	Acknowledgement of correct reception of a packet.
Resend	0x02	Single Byte Reply	TT,SN,SN,SN,SN	none	Request for a retransmission of the last packet.
Who's There ?	0x11	Command	0xFF,0xFF,0xFF, 0xFF,0xFF	all blank	Request for loggers to identify themselves.
Don't reply to "Who's There ?"	0x11	Command	TT,SN,SN,SN,SN	all blank	Tells the specified logger not to reply to the general "Who's There?" packet.
Read Data	0x12	Command	TT,SN,SN,SN,SN	D[0:2] : address to read from D[3:5] : length required	Request for the logger to begin sending a series of data packets.
Status Request	0x14	Command	TT,SN,SN,SN,SN	all blank	Request for the loggers status packet.
How much data do you have ?	0x15	Command	TT,SN,SN,SN,SN	all blank	Request for the size of data that the logger holds.
Program Logger	0x16	Command	TT,SN,SN,SN,SN	D0 : # of packets that follow D1 : flags D[2:5] : security code	The command to initiate reprogramming or restarting a logger. "Logger Program" packets may follow this.
Check Lease Count	0x17	Command	TT,SN,SN,SN,SN	all blank	Request for the logger to check the lease count now.
Logger Program	0xF2	Long Data	TT,SN,SN,SN,SN	See section 3.5 on programming a logger.	Data packets containing the data and locations of a loggers program.

## Logger to REDi

Name	Packet ID (PType)	Packet Type	Data	Description
Ack	0x01	Single Byte Reply	none	Acknowledgement of a correctly received packet.
Nack	0x03	Single Byte Reply	none	The packet was received but was not or cannot be processed. [no longer used]
Bad Password	0x04	Single Byte Reply	none	Reply when a "Program Logger" packet was received and the logger required a password and the password was incorrect.
Lease Expired	0x05	Single Byte Reply	none	Reply when a "Program Logger" packet was received but the logger's lease had expired.
Data Request Reply	0xF3	Very Long Data Packet	64 bytes of logger data	A block of data read out of the logger's EEPROM.
Data Size	0xF0	Very Short	D[0:2] : data length	Reply to the "How much data do you have ?"
Reply		Data Packet	D[3:5]: start address	packet.
Status Reply	0x14	Short Data Packet	D[0:1]: Implant f/w D[2:3]: Logger f/w D4: Case type D[5:22]: Status packet from host logger D[23:end]: padding	Reply to a Status Request packet.

All multi byte quantities have MSB at the highest address.

For a more detailed description of each process please refer to the "Wireless Mini Technical Manual Implant".

7.0 Hardware

#### **Power supply**

The device is powered from 2 AA batteries. In series these will combine to around 2.8V when fresh and drop to less than 2V when nearly flat. This voltage is boosted with a switching regulator based around U2 (Microchip TC115) to 3.0V for powering most of the electronics. The converter has a guaranteed start up voltage of 0.9V.

The boost converter operates from the batteries but in the case when the batteries are either not present or completely flat U1, an LM317 step down linear regulator, provides the main supply. This operates from external power and its purpose is essentially to get the unit up and running and able to charge completely flat batteries.

Z2, a 5V zener diode across the battery, is in place so that if someone runs the REDi off external power of 6V+ with the batteries removed then the main supply for the electronics is limited to 5V.

The battery voltage is sensed with R12 & R13. This measurement is used to determine if the battery is getting low as well as to monitor charging progress.

R2 and Z1 are used to monitor the external voltage and provide a digital signal showing if external power is applied. This line is also used as an interrupt to wake the device if sleeping. External power is nominally 6.0V but can be as low as 4.5V. More than 6.0V will still charge the batteries but will create a lot of heat which should be avoided.

The batteries are charged with a linear current regulator. The current through and hence the voltage drop across R3,4 & 5 keeps Q3 in it's linear range. R3 is not installed so  $0.6V/1.65\Omega = 360$ mA. More current will start turning Q3 off and less current will turn it on harder. With CHG\_CTRL high this will govern the drive to Q1, the power FET regulating the charge current.

The display has another boost converter which provides 18V for the LCD drivers. This is located on the LCD board itself.

Note that the display on the REDi draws a significant in-rush current. There is a 1000uF capacitor across the supply on the RF sub-board which provides this current. If the device is operated with the RF sub-board removed (as may happen during servicing) then the in-rush current can collapse the supply rails and put the M16 into a locked up state. The operator must remove and replace the batteries to recover from this condition.

When powering up U3 (TCM809) holds everything in a reset state until the supply has stabilised.

### Memory

There are two memory systems on the REDi. There is one megabyte of serial Flash memory and two kilobytes of EEPROM memory.

The EEPROM is accessed via an  $I^2C$  bus and is located at address 0x00. There is also an RTC chip on the board that operates via  $I^2C$  but this uses a separate bus. The EEPROM is used to contain system variables and the index table for log records. It has a life expectancy of greater than one million write cycles so is suitable for frequent rewriting.

One of the limitations on the number of log records that can be stored (160 max) is the size of index table that will fit into 2k. The EEPROM must be increased in size (with a slight firmware mod) to extend this number if ever required.

When clocking in data via RF this gets accessed at fairly high speed so the pull up resistors are 10k.

The Flash memory is accessed via it's proprietary serial bus. This proprietary bus has three lines, Clock, Data in and Data out. It has a life expectancy of 100,000 write cycles per page so is used to contain each instance of a log record.

When clocking in data via RF this gets accessed at fairly high speed so the pull up resistors are 10k.

There are also 240 bytes of RAM in the RTC chip (U8, PCF8583) but this is not currently used.

No variables are stored in the M16 RAM during power down.

#### **Analogue measurement**

The REDi uses the internal ADC of the M16 for analogue to digital conversion. For accuracy an external reference is used. This is U6, REF1004 and acts like a zener diode with a nominal 1.20V  $\pm 4$ mV. To save power this can have it's supply removed using Q6.

Note that this is installed on the REDi main board but if a ThermoCheck is made using the same main board then these parts should be on the 'personality' board.

The only analogue value that the REDi measures is battery voltage. The M16 has 8 channels however and there are tracks on the board connecting another ADC channel (AN2) to connector CON2. This can be used for a receive signal strength indicator (RSSI) if installed at some stage in the future on the RF board.

#### **Keypad**

The key pad is scanned as a matrix. KEY1-4 (PORT0,1-4) are each taken high in turn and for each iteration KEYINT1-3 (PORT1,5-7) have their levels checked. This is done on a polling basis and is not interrupt driven. If two keys are pressed then the first in the sequence will be the only one recognised.

The KEYINT lines can also be set up as interrupts and this mode is used to wake the device from sleep.

#### RTC

Time is kept using a real time clock chip (U8, PCF8583). This is communicated with over an  $^{2}$ C bus. It is the only device on this bus. D6, a schottkey diode, isolates the power supply to this part so that when the batteries are replaced C20, a 1000uF cap, will keep supplying voltage to this chip for several minutes.

This chip also has 240 bytes of RAM which is not currently used.

The chip has the ability to trigger an interrupt after a certain period has elapsed or at a certain time in the future. This connection is wired up to the M16 but is not used in REDi.

#### **Buzzer**

The buzzer is based around a module (BZ1, MBE12C-5) that incorporates it's own oscillator. The M16 simply applies power to this, using Q5, for the length of the required beep.

#### **RS232**

The REDi uses U9, a MAX3320, to handle it's RS232 level conversion. This chip has internal charge pumps which generate  $\pm 12$  from the  $\pm 3V$  supply. It is wired into the UART of the M16 and serial transfers are handled by the hardware of the M16.

This chip also generates a interrupt (RS\_WAKE\_UP) which is used to wake the REDi up, if asleep, as soon as the comms cable is plugged in.

#### Display

The display is 160x160 bitmap LCD. All circuitry for driving the display itself is on a separate PCB to the main board and this is mounted behind the LCD glass. On this there is are two NT7701 driver chips, one for driving the rows and one for driving the columns. These are controlled by an RA8820 LCD drive controller.

The REDi has an 8 bit wide parallel bus which connects via CON4 to the LCD board. There are also the associated read-not-write, enable, reset and address/data control signals. The 8 data

lines are pulled either high or low through weak resistors and during power up the state of these lines govern which mode the controller will power up in.

The RA8820 is switched into graphics mode and all characters are produced by the REDi sending 10x16 bit maps to the controller. Note that the controller is byte orientated so to work with 10 bit wide characters the bitmaps must be rotated left or right depending on which column they are to be placed.

The LCD requires 19V to operate and this is generated from the system 3.0V by a switching boost converter (NCP1403) on the LCD board. The NT7701 driver chips require 4 voltage references and these are produced using a voltage divider chain and emitter follower buffers. The highest voltage in this chain is 18.5V and is adjusted by changing the values of R6 and R7 (the feedback around the NCP1403). The contrast is very sensitive to this level. Also any ripple on the reference voltages shows up as patchy contrast on the display. This is not an ideal way of generating reference voltages but has been done in order to keep current consumption to a minimum.

There is one further control signal to the LCD board and this controls a FET that will disconnect the entire board from the main 3V supply rail. The RA8820 controller can be placed into a sleep mode but it still draws the best part of 2mA when sleeping. Complete isolation seems the only way to conserve battery life when the display is not required.

The display has an electroluminescent back-light which requires 120V AC to glow. The inverter for this is, based around U10, an IMP560, and is mounted on the main board. The intensity of the back light is directly related to the voltage of this drive. The frequency is not critical as long as it's high enough not to flicker. The voltage can be adjusted by R41 and has been set as a compromise between back-light intensity and current consumption.

#### Code overview

#### CHARGEN.C

Contains the bitmaps of the characters that get displayed on the REDi display.

The characters are 10 x 16 pixels. This amounts to 160 pixels which get packed into 20 bytes. The data is packed with the first byte being the 8 right most pixels on the bottom row of the character, the next byte contains the 2 left most pixels on the bottom row and the 6 right most pixels of the second to bottom row. This continues so that after 5 bytes the 4 bottom most rows of the character are completely defined. The pattern then repeats for the rest of the pixels.

#### To create or modify the font set for REDi

Use the Excel files; "Alphabet Capitol.xls", "Alphabet lowercase.xls", "Syntax up to capitol A.xls", and "Other syntax.xls".

Edit the field of 1s and blanks to create the desired pattern. Note that the blanks must be truly blank for the calculations to work - a space character will upset things so use BackSpace or Del to clear the fields.

When finished export the file as a comma delimited file.

Load this into your favorite editor and cut and paste the relevant rows of comma separated numbers to the REDi code CHARGEN.C. You'll have to adjust some of the commas but the bulk of the work is done.

#### CMDUTILS.C

Command utilities. The functions in this module process the commands that can be sent by the PC (as defined in section 5 of this manual). This module differs from *COMMAND.C* in that it does the actual work for each command and moves the relevant information to or from the RS232 buffers from or to the system memory. At the bottom of this function can be found all the test routines for production testing.

#### COMMAND.C

The functions in this module interpret and reply to the commands sent by the PC. Generally for each command (as defined in section 5 of this manual) a function exists which checks the incoming packet then calls a corresponding function in *CMDUTILS.C* and then reports the result back to the PC.

#### DRIVERS.C

Contains low level driver functions for: ADC system, Timers, Battery charging, I2C timing, MCU clock management, beeper.

The system clock is derived from a 10MHz crystal and can be divided down. In the REDi system it is divided by two for most of the code as this uses less current but runs at full speed when clocking RF data in or out.

The battery charging algorithm is detailed in the code so won't be duplicated here in the manual.

### FLASH.C

These functions handle reading and writing to the one meg serial flash chip. The chip itself is set up as a banked system of 4096 pages of 264 bytes. For simplicity the last 8 bytes of each page are not used and pages are treated as 256 bytes long. Originally these functions were set up to mimic a randomly accessible linear address space. This means that the functions set up a buffer in M16 RAM which is filled by the relevant page from Flash when a byte is read from Flash. Any other bytes that are read from or written to Flash residing in that same page are then processed using the RAM buffer. When bytes from a different page are required the RAM image is written in

entirety to Flash (if there have been writes) then the new page is read from Flash. As with all flash devices time must be allowed for the memory to sink in after a write before other pages can be accessed.

In the interest of high speed data transfer, however, the RF code as well as much of the other code reads and writes pages directly as blocks of 256 bytes. The start of the RS232 Tx buffer is used for this. To avoid getting out of sync with the 'linear address space' system BringFlashUpToDate() must be called before directly reading and writing pages from/to the serial flash. This will ensure that anything that was written to the RAM buffer actually does get updated to the memory chip and anything that system doesn't believe that old data sitting in the RAM buffer is current.

This is all a bit messy but works well and was required to get quick and reliable timing for the RF code while not rewriting lots of the existing code that REDi was built on.

#### GLCD.C

This module contains the code to draw text and graphics on the LCD. The display has an effective 'cursor position' which defines where characters are to be put. This will increment as expected as characters are drawn much like printf(""). The cursor position can be read or changed with glgetXY() and glgoto(). The home position (0,0) for text or graphics is the top left hand corner of the display.

Generally the code only needs to call the relevant text or graphic function, which updates an image of the display stored in M16 RAM, and the changes will be 'blitted' to the display controller chip when the blitting interrupt next occurs (every 50ms). If, however, the interrupts are disabled, such as during RF transfers, then the code must call the relevant text or graphic function then explicitly call a function called glcd\_send\_bitmap() to get the changes to appear on the LCD. If time is an issue then another function called glcd\_update\_slice() can be used which only blits a specific area of the display. The remaining area remains unchanged.

#### I2C.C

This module contains code to bit-bash either of the two I<sup>2</sup>C busses on the main board (one for 2k EEPROM and one for the RTC). The main functions of interest are I2CRead() and I2CWrite() which linearise the address paging and handle timing considerations for writing.

#### INT.C

This module contains the system interrupts. These include RS232 in, RS232 out, system tick, wake up on key press, wake up from external power application, wake up on RS232 connection, RTC interrupt (not used), and Watch Dog (normally disabled).

The system tick occurs every 50ms and is used for beep termination, keyboard scanning and display blitting. After 20 systems ticks (one second) the trickle charger, back light timer, and comms-mode symbol are checked. After 1200 systems ticks (one minute) the auto-off timer and battery charge timers are checked.

#### KEYBOARD.C

This module contains routines for reading the keyboard. In the function ScanKeyboard() the keyboard is scanned as a matrix and the global variables gKeymap[n] are set up which contain the state of the keypad. This function also returns a variable denoting the current key that is pressed (or the first one detected if more than one key is pressed). This function is usually called every 50ms by the system interrupt and used to set up the global variable uKey which can be used by other code ie. in the function ProcessKeys() in PROCESS.C.

The keyboard can be used to trigger interrupts but this is only done for waking from sleep.

There is also a function called SetBeeper() which can be used to turn the beeper on. The beeper will then continue beeping until an interrupt turns it off.

#### MAIN.C

This is highest level function. It contains the "main" function which continuously loops until something happens. Note that some of the processing such as servicing RS232 requests or

displaying lists of data can take quite a while and this is time the that main loop is not looping. Interrupts keep running but this is not a real time operating system. Note also that during RF transfers the interrupts are disabled and the code can spend several tens of seconds away from this loop.

It also contains code for setting up registers, ports etc. immediately after power up as well as parking things prior to going to sleep.

#### MEMORY.C

This module contains the functions MemoryWrite() and MemoryRead(). These are high level functions that are used to abstract other code from the physical details of the memory. They are called with the memory Type, Address and run length for either reading or writing. The Type is defined in Section 4.3 Memory Reference of this manual. The code takes care of any bank switching or timing that is required for the specific memory type. These functions are only sometimes used by the REDi code and at other times the memory is directly accessed in order to cut out overhead.

#### PROCESS.C

Process.c contains functions for processing some of the low level system fetaures. These include restarting the Auto-off timer, entering of Safe mode (hold left and down arrow down during power up), update system variables after changes after RS232 communication eg. flushing all log records, action any key presses, handle shutting of the REDi, checks the integrity of the serial number etc. after power up (this has a CRC associated with it) to catch any flash corruption if it happens, the display of the comms icon during RS232 transfers, default configuration (in case of initial set-up or set-up corruption).

Safe mode is used for diagnostics and will get the unit up and running with no display and adjusted IRQ priorities. The unit can then be interrogated via. RS232.

#### RF.C

This code controls all RF transfers. The two functions for actually transmitting and receiving a packet of data are written in assembler. The data is bit bashed and has specific timing. Do not touch these unless absolutely necessary. The function ListenForWakeUpReplies() also has specific timing and if modified should be treated with caution. Other functions include the analysis of what loggers are out there, reading the entire data buffer of each logger in and storing it to flash, and reprogramming loggers. Most of the functions are executed with interrupts turned off so the display will not be updated unless specifically told to and RS232 response, auto off etc. will be momentarily suspended.

When the data is stored there is a structure called LoggerHead and another structure called PreLoggerHead which are used heavily. LoggerHead contains format descriptors and pointers for all the various system variables that are found in Escorts loggers (eg. LogStartTime, SecurityCode etc.) There should be a LoggerHead structure defined for each type of logger that the REDi can recognise and this will tell it how to interpret the data that is extracted from that logger. Note that all logger data is passed to the PC verbatim - interpretation of the data is only for display purposes on the REDi screen. PreLoggerHead is a formatted summary of the most common information from each logger and there is an instance of this structure stored with each log record in Flash memory. Reading this summary avoids the need to process the data each time the user wants to review a specific log record.

#### RS232.C

This module contains the highest level of code for processing RS232 packets. It also includes the low level code for changing the RS232 baud rate however as of Oct. '05 the baud rate is fixed at 9600.

The RS232 interface is handled by hardware. The clocking in of bits is performed by M16 hardware and the clocking in of bytes is performed in INT.C. This module only gets called once complete packets have arrived.

For clocking out of packets the individual bits are clocked by M16 hardware and each byte is loaded by a function RS232Transmit() in conjunction with an interrupt.

#### TIME.C

Contains functions for manipulating time and date.

#### USERIF.C

This is a very big module and, in conjunction with Menus.h, contains the user interface.

It contains all the code for drawing menus. An example of the menu structure and how to add a menu is included at the end of this section.

ui\_ProcessMenu() contains all the code for scrolling the menu bar up and down and selecting a menu item.

SetUpMenuEleven() creates the menu, including a brief summary of the data, for selecting a log record to display (All or Recent). This reads the PreLoggerHead (a formatted summary of the log record) from Flash memory and transfers to a RAM structure to be used in other parts of the code.

ui\_GenerateStatisticsMenu() creates the menu which actually displays the summary information. This uses the PreLoggerHead structure that was filled in by SetUpMenuEleven().

SetUpMenuFourteen() creates and manipulates the menu for viewing out of spec readings.

The module contains utility functions for formatting a serial number for display, formatting a product code for display, decoding the program state of a logger.

There is a function for calculating the time out of spec. This is done by creating a cumulative histogram of the logged readings then counting the number that fall above or below the defined limits. The histogram is retained as a static array and can be used for analyzing the data further if this is ever required. The array is 256 bytes long for 8 bit samples. If 10 bit samples are to be analyzed then this array will need to be increased to 1k in size.

There are functions for displaying the start up 'splash screen'. Switching into test mode upon start up. Displaying the battery icon & RTC. Fetching the RTC from the PCF8583 chip and formatting it for display.

There is a function to allow a security password to be entered immediately after power up and block access to the REDi if incorrect.

The module also contains the "REDi" image as a hard coded array. This was produced using an Excel spread-sheet in that same way as the characters were.

It also contains the LoggerHead definitions which define format descriptors and pointers which tell the REDi how to interpret the data from specific types of loggers.

#### UTILS.C

Contains useful utility functions such as 'BCD to Char' conversion 'Integer to ASCII' etc.

#### The menu structure