


RISEDOR
®





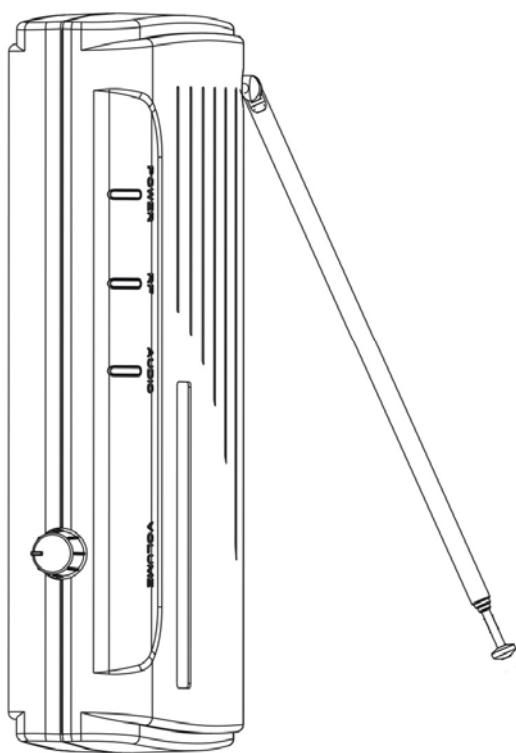


RW-100R
Wireless Microphone Systems
User Guide

RISEDOR
®

Handheld Transmitter:



Functions:

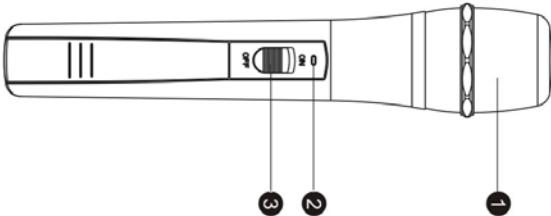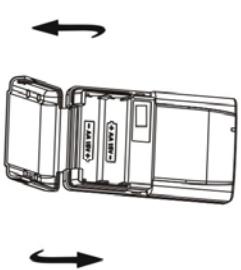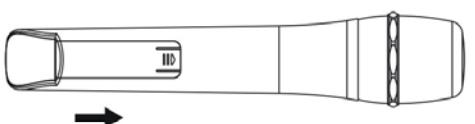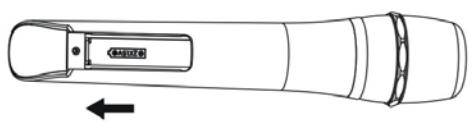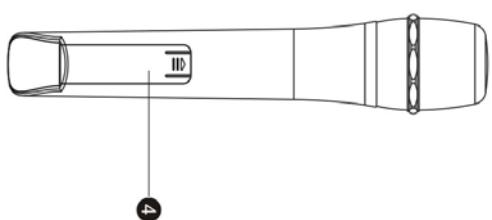

Changing Batteries:

Expected life for two 1.5V AA alkaline batteries is about 8 hours.

As the battery indicator on the screen keeps glowing, the batteries should be changed immediately (as shown below).

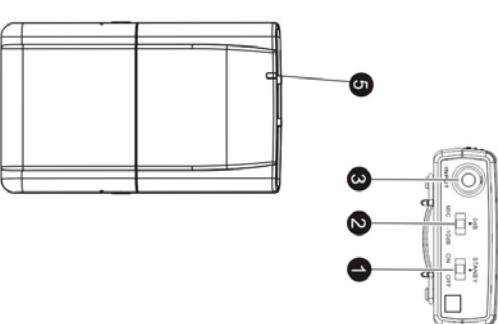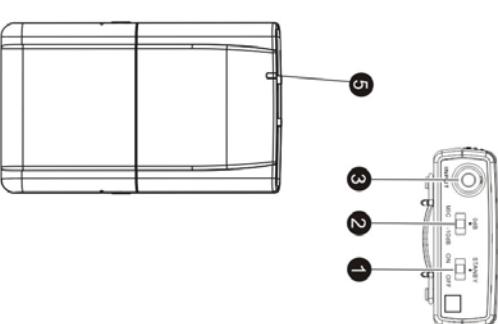

Bodypack Transmitter

Features:

① On/Off switch, when it in middle, keeping mute.

Two gain settings are available on RW-100BT, choose the appropriate setting for your instrument

Mic: microphone

0: Guitar with passive pickups

-10dB: Guitar with active pickups

2 Gain adjustment switch and mute indicator

3 Microphone Input Jack


4 Power/Low indicator light

Turn on switch and Flash red; if the light glows red, the batteries should be changed immediately.

Wearing the Backpack Transmitter:

Clip the transmitter to belt ①, or slide a guitar strap through the transmitter clip ② as shown.


For best results, slide the transmitter until the belt ① is pressed against the base for the clip.

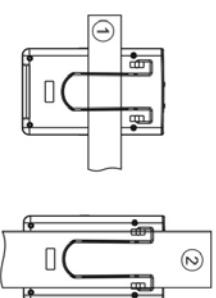

Changing batteries:

Expected life for Two 1.5V AA Alkaline batteries is approximately 8 hours.



When the transmitter light glows red, the batteries should be changed immediately, as shown on the left.

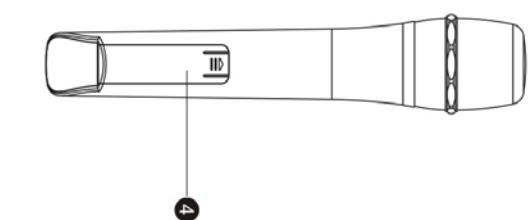

Changing Batteries:

Expected life for two 1.5V AA alkaline batteries is about 8 hours.

As the battery indicator on the screen keeps glowing, the batteries should be changed immediately (as shown below).

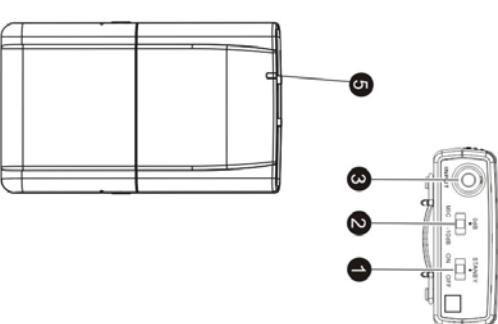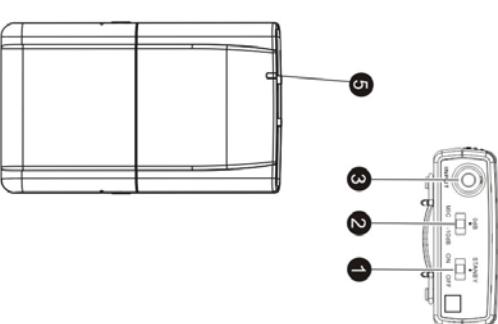

Trips for improving System Performance


- Maintain a line of sight between transmitter and antenna.
- Avoid placing the receiver near metal surfaces or any digital equipment (CD players, computes, etc)
- Keep the receiver away from the wall and over 1m to the ground
- Cellular telephones and two-way radio and so on can interfering the transmitting frequencies, maintain a distance from the interfering equipments or any cause interfering.

Troubles Shooting


Issue	Indicator Status	Solution
No sound or faint sound	Transmitter ON Indicator stop flashing	Turn on transmitter Make sure the +/- indicator on battery match the transmitter terminals
Power indicator off		Make sure AC adapter is securely plugged into electrical outlet and into DC input connector on rear panel of receiver.
Receiver RF indicator glows		Turn the receiver up Turn up the Gain adjustment switch in the transmitter Check the power connection of the receiver and amplifier or mixer
Receiver RF indicator off, transmitter indicator ON		Take the receiver away from the metal objects Check whether there is hamper between receiver and transmitter Move the transmitter near the receiver Check the receiver and transmitter whether use the same frequency
Transmitter low battery indicator ON		Change the batteries in transmitter
Distortion or unwanted noise bursts	Receiver RF indicator ON	Remove nearby sources of RF interference(CD players, computers, digital effects, in-ear monitor systems, etc.)
Distortion level increases gradually	Transmitter low battery indicator ON	Change the batteries in transmitter
Sound level different from cabled guitar or microphone, or when using different guitars		Adjust transmitter again and receiver volume as necessary

RW-100R Receiver Features

Front Panel

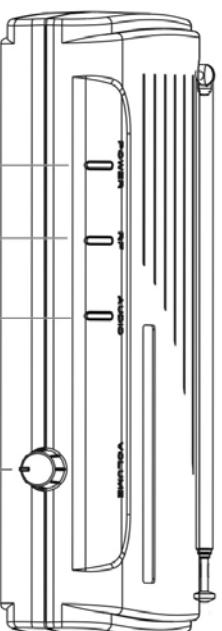

Rear Panel

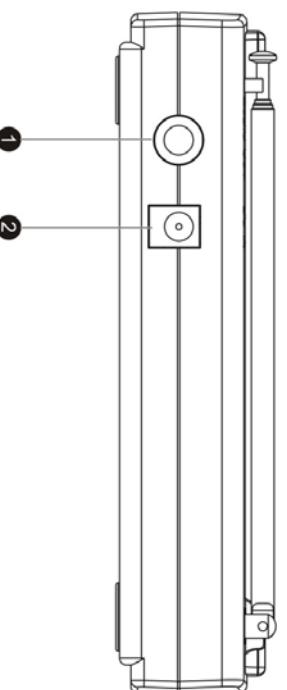

① Audio output Socket

② Power adaptor socket