
Wireless TV — Splash Proof —

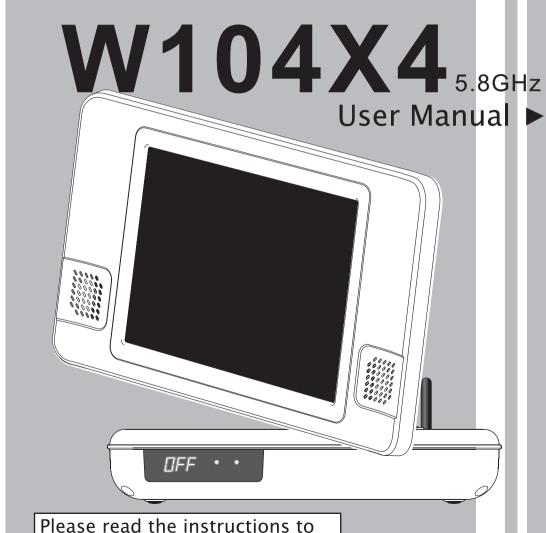

familiarize yourself with product





_ Accessories

- User Manual
- AV Cable x 2
- AC Adaptor +12V-2A
- AC Adaptor +12V-2.5A
- Remote control

FCC

Features

■ FCC Caution:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Notes:

The manufacturer is not responsible for and radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

- Connecting the signal to the transmitter box and you can watch TV by wireless transmission.
- The transmission is used by 5.8 GHz, it can convey and receive images through the transmitter box.
- The transmission of remote control is used by 433 MHz. (please meet the transmitter box hen making use of remote control)
- The transmitter box provide four channels to use and it also can avoid the interference of wireless air waves.
- The wireless display meets IPX6 with the dust and water resistance, it can even be used if the surface of display and remote control have water, airwater and snowflakes. (the transmitter box isn't waterproof)
- The TV with great performance of LCD panel, offer the best picture quality.
- Provide several signals, including A/V input, digital TV and Analog TV.
- Available for VHF-H 174~230MHz, and UHF 470~860MHz.
- Built -in regargeable battery makes it suitable for ourdoor use.
- A/V output is included.

Precaution

Thanks on your purchase of the 10.4" Wireless LCD TV. Please read the directions to familiarize yourself with the product and to ensure that you obtain from your equipment.

- Please don't put the display in airtight vehicles and keep away from the sunlight and heaters.
- Using the unit over 30°C will cause insufficient charging.
- Using the unit under 0°C or higher than 40°C may damage the TV but it will work in normal in operation temperature.
- Please pull out the power plug of display after charing or watching. It is dangerous to keeping plug in and also may cause the TV damage.
- It's not recommended to be long time used in highly humidity environments, for example: bathroom, shower room.
- Please don't put the display in the water or the place easliy dropping into the water.
- It can use around 2hr after charging around 3~4hr. (the operating time relates to the reception, volume and local channel)
- Don't connect to AC adaptor when using the TV in bathroom, shower room.
- Please keep away from water when the connector cover is open.
- Don't connect the antenna and plug of AC adaptor when thundering.

Specifications

ITEM	SPECIFICATION
Screen size	10.4 inch
Display Resolution	680(H) x 480(V) 350(cd/m²)
Brightness Viewing Angle	Top=70° Bottom=40° Left=70° Right=70°
Video source	Analog TV and ATSC Video input (NTSC/PAL/SECAM)
Power input	DC 12V_2A(RX) DC 12V_2.5A(TX)
Weight	1.8kg±40g(RX) 0.5kg±30g(TX)
Dimension(RX)	357(L)x65(D)x217(H) mm
(TX)	303(L)x163(D)x56(H) mm
The charging time	Around 3~4hr
The operating time	Around 2hr
Battery type	4200mah Ni-Mh battery
Antenna type	5.8 Ghz permanent antenna
Receive range	30m (Outdoor no interference)
channel frequency	chA: 5740 MHz chB: 5760 MHz
	chC: 5780 MHz chD: 5820 Mhz
R/C frequency	RF 433 MHz
Certification	CE FCC RoHS IPX6

Other Functions

1. Program List:

Enter channel in the program list Select item in the program list



Set favorite channel in the favorite list Select item in the favorite list


3. Guide:


Switch the current page in program scheduler.


- 4. Information menu
- 1) Audio List: display current audio language.
- Clock: display current time in the program.
- 3) Format: display current screen mode.
- 4) Audio List: display current status of parent control.
- 5. Volume
- Vol+/Vol- key: increase or decrease Volume value.
 Hold down Vol+/Vol- key to increase or decrease Volume value continuously.
- 2) options: 0-40



2-1 2-2
2-2
2-10
NONE
NONE
vorite List menu

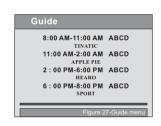


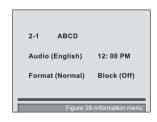


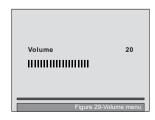

- The distance of transmission in unobstructed place is 30m.
- The signal of ATSC in mountain district, underground passages, airtight building may be interrupted.
- Reinforced concrete building, the inference of electromagnetic wave, airtight building will influence the reception of wireless transmission.
- Connector cover and the cover of remote control are the most important components to keep the TV away from water . Please fix it tightly and make sure there is not any tiny impuruties around the cover.
- Please turn off the TV immediately if smokes and smells something bad, and unplug the AC adaptor, then contact with your retailer.
- Please note the transmitter box isn't waterpoof.
- Don't reconstruct and separate the TV. Any problems, please contact with your retailer for inspection, adjustment and repair.
- Avoid any silts fall into the speaker.
- Don't add pressure to the LCD panel and hit the TV set.
- Please turn the unit off to start charging.
- Please use the cotton cloth for screen to clean the display, in case scrape the screen.

Parts Description-Main Unit

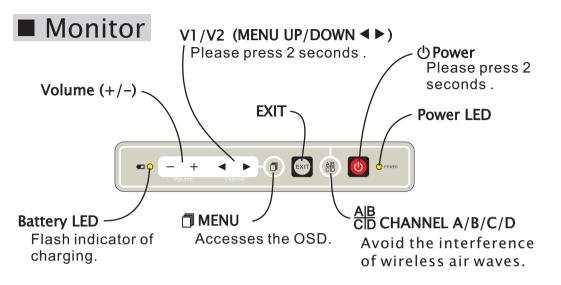

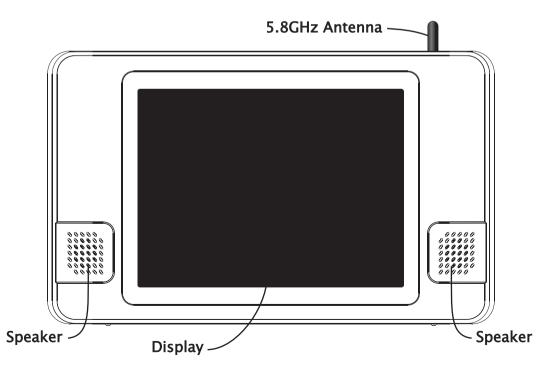

■ System Setting

System Setting

- OSD Langue: Select the OSD Langue options: English, Spanish and French. default: English
- 2. Audio Langue: Select the Audio Langue options: English, Spanish and French. default: English
- System Setting

 OSD Langue English
 Audio Langue English
 Format Normal
 Time Setup
 ANT Power Switch off CH3
 RF Modulator

 Figure 23-System Setting menu

Time Setup

Time Zone

Daylight Sav

1:56 AM

Eastern

Clock

- 3. Format:
 - Select the Format option list options: Normal, Crop, Squeeze
 - and Letter Box. default: Normal
- 4. Time Setup: Enter Time Setup menu
 - 1) Clock:

Notes: the Clock displays the current time from programs

2) Time Zone:

Select the Time Zone options: Eastern, Samoa, Hawaii, Alaska, Pacific, Mountain, Central, Atlantic, Newfoundland. default: Eastern

- 3) Daylight Sav.:
 - Switch the Daylight Sav. between on and off. default: off
- 5. Ant power switch

Switch ANT power Supply between on and off. default: off
Note: select "on" to turn on the 5V power supply for active antenna.

If ANT circuit is short, the ANT power supply will turn off
automatically. Select "off" for NON-active antenna.

6. RF Modulator: Select CH3 or CH4 RF output for the modulator

04

■ Canada Ratings

Note: blocking a rating affects all the higher ratings, so that blocking "13 ans+" in the example above automatically blocks "16 ans+"and "18 ans+", whatever previous state of these ratings was. If a password is defined while a TV program warning is received for the current channel, sound is muted and the following menu is displayed on the center of screen; what's more, the rating information should be consistent with current active program rating.

This Channel is blocked by the French Canada Rating of "G"


RRT Setting


RRT Setting:
 Enter Rating Value setting in current dimension Name.

PRRT Setting Dimension Name 1 Dimension Name 2 Dimension Name 3 Dimension Name 4 Figure 19-RRT Setting menu


Rating value Setting


Rating value Setting:
 Set Block or View in current Rating
 Value.

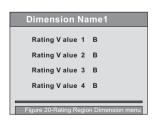

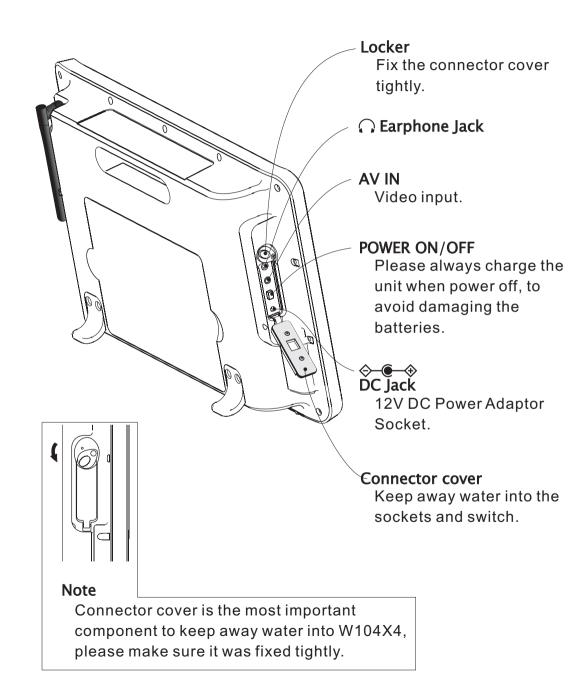

05

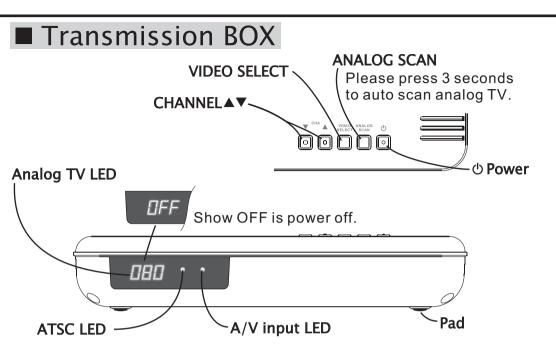

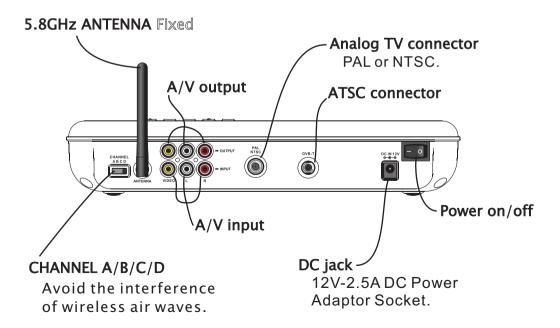

■ Canada Ratings

Canada English Ratings

1. C-18+:

Switch the check box between view and block, default: View

Note: blocking a rating affects all the higher ratings, so that blocking "PG" in the example above auto



matically blocks "14+" and "18+", whatever previous state of these ratings was. If a password is defined while a TV program warning is received for the current channel, sound is muted and the following menu is displayed on the center of screen; what's more, the rating information should be consistent with current active program rating.

This Channel is blocked by the English Canada Rating of "C8+"

Canada French Ratings

1. G-18 ans+:

Switch the check box between view and block, default: View



06