

Description of a simple operation

TO RESET YOUR NETWORK:

1. Press and hold SETUP until the screen displays LGHT SETUP
2. Use either Arrow key to scroll until the display reads NETWORK
3. Press OK and the screen will display RESET
4. Press OK and the screen will display RESETTING
5. When the screen displays SUCCESS, you have successfully reset network information.
6. Reset all individual devices as instructed in the section on deleting devices from the network.

ADDING A DEVICE (NODE / LIGHT) TO THE NETWORK

In order to control the lights, they must be Z-Wave enabled and you must first add them to your home network.

TO ADD A DEVICE TO YOUR HOME NETWORK AND ASSIGN IT TO A SPECIFIC NUMBER KEY:

1. Press and hold SETUP until screen displays LGHT SETUP
2. Press OK and the screen will display ADD
3. Press OK and the screen will display TO NETWORK
4. Use either Arrow key to scroll until the display reads TO A KEY and then press OK
5. Press a digit (1-9) for the device location you wish to add. Press SETUP (SHIFT) and the digit (1-9) if you are adding devices 10 through 18.
6. Press OK and the screen will display SETUP WAITING
7. Press the button on the device so that it communicates with the remote.
8. When the screen displays SUCCESS, you have successfully added the device to the number key and your network.

CONTROLLING INDIVIDUAL LIGHTS (DEVICES / NODES)

You can control a light to turn on or off, or change its brightness level. The operation of a specific device varies by product. Refer to the manual for that device to learn its specific operation.

Turning a Light On or Off:

To turn a light on, press and release the ON key for less than one second. The screen will display the selected LIGHT/NODE and ON.

To turn a light off, press and release the OFF key for less than one second. The screen will display the selected LIGHT/NODE and OFF

Setting a Light's Brightness Level:

To make a light brighter, press and hold the ON key for more than one second. The screen will display selected LIGHT/NODE and BRT. The light will continue to grow brighter until the key is released.

To make a light dim, press and hold the OFF key for more than one second. The screen will display selected LIGHT/NODE and DIM. The light will continue to grow dimmer until the key is released.

DELETING A DEVICE (LIGHT / NODE) FROM YOUR NETWORK

This completely removes the device from your home control network and resets the device to its factory default settings.

1. Press and hold SETUP until screen displays LGHT SETUP
2. Press OK followed by pressing the cursor right key 2 times the screen will display DELETE
3. Press OK
4. Press the button on the device so that it communicates with the remote.

5. When the screen displays SUCCESS, you have successfully deleted the node/light from your network

GROUPS

You can create a collection of devices (lights / nodes) that you can control as a group. You can set up a maximum of 18 groups. A group can contain up to 232 devices.

To create or add a device to a group:

1. Press and hold SETUP until screen displays LGHT SETUP
2. Use either Arrow key to scroll until the display reads GRP SETUP
3. Press the OK key and the screen will display ADD
4. Press OK and the screen will display SEL DIGIT
5. Press a digit (1-9) for the group you wish to add the device to. Press SHIFT and the digit (1-9) if you are adding a device to groups 10 through 18.
6. Press the OK key and the screen will display SETUP WAITING
7. Press the button on the device so that it communicates with the remote.
8. When the screen displays SUCCESS, you have successfully added the device to your group.

To control a Group:

1. Press GROUP once to put the remote into “GROUP Control” mode. The screen will display GROUP. The remote will stay in this mode until the Light, Scene or All mode is activated.
2. Press the digit key for the group you wish to control (1-9). Press SHIFT and the digit (1-9) if you are controlling groups 10 through 18. The screen will display the selected Group.

To turn a GROUP on, press and release the ON key for less than one second. The screen will display the selected GROUP and ON.

To turn a GROUP OFF, press and release the OFF key for less than one second. The screen will display the selected GROUP and OFF

Removing a Device (Light / Node) from a Group:

This only removes the device from a specific group. The device is still part of your home control network and the group still exists (if there were more than one device in it to start).

1. Press and hold SETUP until the screen displays LGHT SETUP
2. Use either Arrow key to scroll until the display reads GRP SETUP
3. Press the OK key followed by the cursor right key once and the screen will display REMOVE
4. Press the OK key and the screen will display SEL DIGIT
5. Press a digit (1-9) for the group you wish to remove the device from. Press SHIFT and the digit (1-9) if you are removing a device from groups 10 through 18.
6. Press the OK key and the screen will display SETUP WAITING
7. Press the button on the device you wish to remove.
8. When the screen displays SUCCESS, you have successfully removed the device.

Deleting a Group:

This only deletes the specific group. All of the devices are still part of your home control network.

1. Press and hold SETUP until the screen displays LGHT SETUP.
2. Use either Arrow key to scroll until the display reads GRP SETUP
3. Press the OK key, followed by the cursor right key 2 times and the screen will display DELETE
4. The screen will display SEL DIGIT
5. Press a digit (1-9) for the group you wish to delete. Press Shift and the digit (1-9) if you are deleting groups 10 through 18.
6. Press the OK and the screen will display SUCCESS.

Operating Frequency: 908.4MHz

Antenna: Integral antenna