

Toilet Tunes™

LG Home Products, LLC
PO Box 4345
Hallandale, Florida, 33008
305 428-2599
www.LGhomeproducts.com
CustomerService@lghomeproducts.com

INSTRUCTIONS

STEP A: Setting wireless channel (A,B or C) and inserting batteries:

1. **Sensor.** Unscrew the battery door and open. On the left hand side you will see a small black channel selection switch. It should be factory preset to channel A.



If it is not, use a small screwdriver or ballpoint pen to move it to channel A.



Insert 3 AAA batteries. Close the lid and screw tightly shut to ensure a waterproof seal.

2. **Digital Sound Machine.** Turn the unit up-side-down and remove the battery cover. In the center of the battery compartment you will see a black channel selection switch. It should be factory pre-set to channel A. If it is not, move it to channel A.

NOTE: The small sensor and the digital sound machine, must always be on matching wireless channels. A+A or B+B or C+C



Channels of the Sound Machine and the Sensor must be the same or the unit will not function in auto mode. Now insert 4 size C batteries, close the lid and place the unit on a flat, dry surface in the bathroom.

BE SURE TO KEEP THE UNIT OFF. You can test this by moving the round volume wheel unit the unit "clicks" OFF.

STEP B: Install the Sensor under your Toilet's lid.

NOTE: PAY ATTENTION! The sensor must be installed correctly for the unit to function properly. The sensor must be installed UNDER the toilet lid, in a level position, with the screw at the top when the lid is raised. LOOK at these pictures carefully.



1. Raise the SEAT and the LID of your toilet. (The TT sensor should be installed on the lid with both the seat and lid up to be sure it will not hit the seat when they are both down)

2. Locate where you want to install the TT sensor. It should be in the middle, a bit below center on the underside of the toilet lid.

Mark lightly with a pencil. Remember the screw goes UP and the unit should be level!

3. Peel the backing off the mounting tape on the back of the unit and gently press into the marked place under the toilet lid. Keep the sensor level, with the screw at top.



4. Step back and be sure it is level and centered. If you are satisfied with its location, now press very firmly for 10 seconds to fully bond the adhesive to your toilet lid.



5. Let the unit rest in this position for 20 minutes before use. During this time the adhesion will become stronger.

6. After 20 minutes place the toilet lid down.

STEP C – Set-up your digital sound machine for automatic use.

1. On the rear of the unit, you will see a switch for **Manual** or **Auto** function. Set this switch to **Auto**.



2. Now, turn the unit **ON**, using the volume wheel on the front right side. You will hear a **CLICK** as it turns on.



STEP D – Using your Toilet Tunes unit in Automatic Mode.

1. Raise the lid of your toilet. You will notice that music PLAYS on the Toilet Tunes digital sound machine.
2. Choose your Sound! Press the different selection buttons until you find the sound or music that pleases you.
3. Adjust the volume. Turn the wheel counter-clockwise to make the volume LOUDER and clockwise to make it SOFTER.
4. Close your toilet lid. The sound goes OFF.

STEP E – Troubleshooting Automatic Mode

NO SOUND. If when you performed step D you did not get any sound try the following steps in order:

1. be sure the unit is on, by turning the volume wheel counter-clockwise. Raise and lower the toilet lid several times.
2. change the mode switch in the back to manual and adjust the volume wheel. If you still have no sound, check that the batteries are new and installed correctly. If there is still no sound, please contact customer service at 305 428-2599. Perhaps you received a defective unit or your unit was damaged in transit.
3. If there is sound in manual mode, change back to auto mode and try the toilet lid again. The digital sound machine must be in AUTO mode to work with the toilet sensor.

4. If this does not solve the problem, open the battery compartments of both units and be sure they are both on the SAME WIRELESS CHANNEL. A to A, B to B, or C to C.

5. Check that the transmitter batteries are new and installed correctly and that the lid is screwed tightly shut securing their connection. Now raise and lower the lid several times. IF this does not solve the problem, we apologize for the inconvenience and ask you to contact customer service at 305 395 3734.

STEP F – Multi-Toilet Automatic Operation

In Bathroom 1: Set one pair of digital music box and sensor both to channel A.

In Bathroom 2: Set the other pair both to channel B or both to C.

STEP G – Manual Operation.

1. Set to Manual. On the back of the unit, turn the mode button away from Auto to Manual. The wireless sensor is now disabled and your toilet will no longer control the digital sound machine.

2. Turn unit ON and adjust volume to desired level.

3. Select desired sound.


4. Press the Manual ON/OFF button (center top of unit) to mute the sound. Press again when you desire sound. The unit will now work manually at the touch of this button.

5. To Change Sounds. Press the Manual ON/OFF button until the unit PLAYS. Select the new sound. Press the Manual ON/OFF button until the unit is mute. The unit will now remain playing this sound whenever you press the Manual ON/OFF button.

STEP H – Making the sensor attachment permanent.

We advise sealing the edges with 100% silicone adhesive after you have tried out your Toilet Tune unit and are happy with its function and the sensors location on your toilet. You can use any silicone based bathroom caulk or adhesive commonly

sold at Home Depot, Lowe's or Ace Hardware. We highly recommend 100% silicone sealant such as **GE Silicone II Household Glue**.

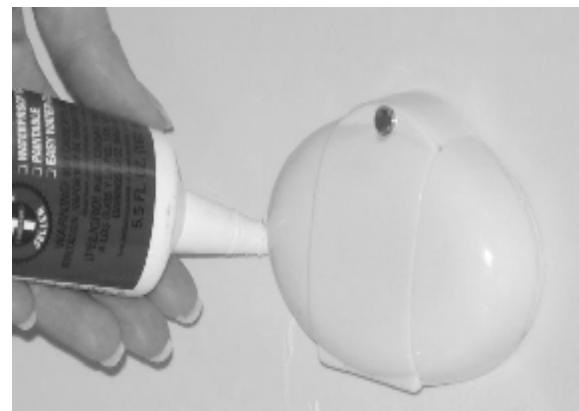

1. Turn the digital sound machine OFF.
2. Cut the adhesive tube open.
3. Raise the lid.

4. Squeeze sealant all around the edges of the sensor, top, sides and bottom.

5. You can leave as is, or if too "goopy" gently wipe the edges down with your finger or a caulking tool. For best results, try to leave the lid in the up position overnight while it dries. The silicone will dry clear and you will barely see it.

Appendix I: GOVERNMENT REGULATION:

Toilet Tunes is a wireless device regulated by the Federal Communications Commission. Customers should be advised:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Appendix II: BATTERY LIFE

The sensor takes 3 AAA size batteries and if you use a high quality alkaline type they should last for up to 1 year.

The digital music box takes 4 C batteries, and high quality alkaline batteries may last 4 to 6 months depending on your households amount of toilet use and the volume level selected. As the batteries get old, you will notice the volume decrease. When this becomes very low, or the unit begins to miss automatic transmissions, replace the batteries.

Appendix III: GENERAL TROUBLE SHOOTING

If your unit misses automatic ON signals.

1. Jiggle the toilet lid.
2. Raise it up and wait 3 seconds.
3. Lower it and wait 3 seconds. Try again.

If your unit does not turn OFF from automatic use

1. Jiggle the toilet lid.
2. Raise it back up and wait 3 seconds.
3. Lower it.

If unit still does not pick up signals.

1. Check that transmitter batteries are fitting tightly inside. Check that screw is tightly closed to hold them in place.
2. Check if music box plays in manual mode.
3. Check if wireless channel settings are matching on both transmitter and music box.

Any problems: Call Customer Service at 305 395 3734

LG Home Products appreciates your business and we promise to work hard to keep our customers satisfied.