

BLUECOM

BLUECOM

Bluecom Bluetooth Headset
BCM-130

User manual

ENGLISH

GERMAN

FRENCH

ITALIAN

SPANISH



2007 © BLUECOM Co.,Ltd. All Rights reserved.
WWW.INOBLU.CO.KR

BLUETECOM

Bluecom Bluetooth Headset

BCM-130

User manual

ENGLISH

GERMAN

 
 
FRENCH

ITALIAN

SPANISH




Features	3
How to use	4
• Charging	4
• Low battery	4
• Power on	4
• Power off	4
• Pairing	4
• Auto Reconnection	5
• Out of range	5
• Volume control	5
• Calling	5
- Answering a call	5
- Making a call	5
- Voice dialing*	6
- Last number redial*	6
- Ending a call	6
- Transferring a call*	6
- Call waiting*	6
- Call reject*	6
- Mute or Unmute the microphone.	6
Summary of button functions	7
LED indication	8
Troubleshooting	9
Specification	10

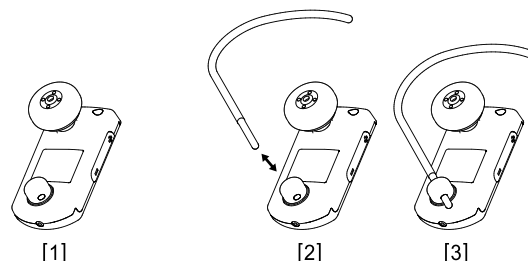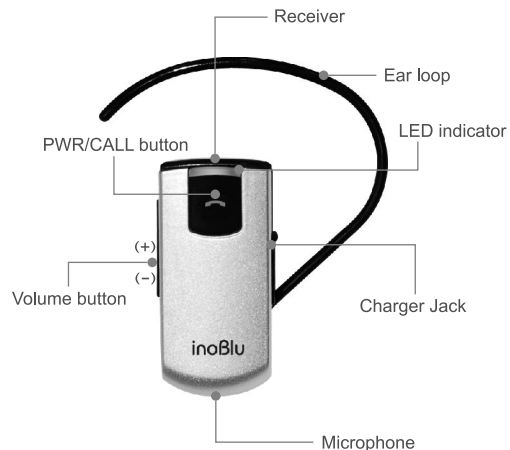

[1] The headset can also be worn in ear without the ear loop.

[2] [3] Ear loop can be adjusted for the comfortable wear on either ear.

 Charging

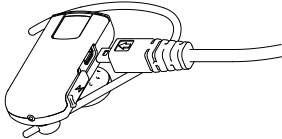

- Remove the cover on the charging port and connect the charger.
- When the charger is connected, with power on or off, the Headset will turn off.
- While charging, the LED indicator will show a solid blue light.
- The buttons does not function when the device is being charged.
- It takes 2 hours to fully charge the Headset.
- When charging is completed, the LED indicator turns off.
- * Never use any otherthing than charger provided.

Low battery

- A low battery tone will play once every 30 seconds.
- When the battery is not charged, the Headset will turn off.

Power on

- Press and hold the PWR/CALL button for 3 seconds.
- (When powered on, the LED indicator flickers every 5 seconds)
- * The power will turn on and a booting tone will be played.

Power off

- Press and hold the PWR/CALL button for 6 seconds.
- * When the power is turned off, a shutdown tone will be heard and the Bluetooth link will be disconnected.

Pairing

- You need to pair the BCM-130 with your handset for wireless link.
- There are 2 Pairing Mode Methods.

1)Auto-Pairing Mode

- * With the BCM-130 off, press and hold PWR/CALL button to power on the Headset.

- * If your handset has not been paired to the BCM-130, the Headset automatically enters Pairing Mode.
- It takes about 10 seconds to enter Pairing Mode after the Headset is powered on.

2) Manual Pairing Mode

- * With the BCM-130 off, press and hold PWR/CALL button until the LED indicator show a solid blue light (about 5 seconds).
- When the Headset enters Pairing Mode, the LED indicator will show a solid blue light.
- Using your handset, find the Bluetooth Menu and "search for" or "add" new devices.
- * Select "BCM-130" from the list of devices and pair it with your handset.
- * When asked for the Pass/PIN code during the pairing procedure, please enter "0000" (4 Zeros).
- * Once pairing is completed successfully, you can hear a beep and the LED indicator will flicker twice rapidly every 5 seconds.
- If BCM-130 in Pairing Mode is not paired with the handset in three minutes, the Headset will be Turned off automatically.

Auto Reconnection

- When the BCM-130 turns off accidentally or intentionally during connected condition, the Headset and handset will disconnect.
- When the BCM-130 is turned on again, the Headset connects with the handset automatically without additional pairing process.

Out of range

- When the BCM-130 and your handset are separated by a distance of 33 feet (10meters) or more, the Headset and handset will disconnect. When the handset and BCM-130 are brought back within the required distance, the BCM-130 will automatically reconnect with the handset.
- If the Headset and handset do not automatically reconnect when they are back within the required range, briefly press the PWR/CALL button to reconnect manually.

Volume control

- Press the VOLUME UP or VOLUME DOWN button to adjust the speaker volume
- There are eight levels of speaker volume.

Calling

Answering a call

- When there is an incoming call, the Headset will ring.
- Briefly press the PWR/CALL button to answer an incoming call.

Making a call

- If you make a call from the handset, the call will (subject to phone settings) automatically transfer to the Headset. If the call is not automatically transferred, you can manually transfer the call by briefly pressing the PWR/CALL button on the BCM-130 (handset and Headset must be paired).

Voice dialing*

- Briefly press the PWR/CALL button to activate "Voice Command" You will get the best result if you record the voice dialing tag through your Headset.
(Handset should be set up with voice dialing function)

Last number redial*

- Press and hold the PWR/CALL button for 1 second to activate "Last Number Redial." The Headset will beep, and call the last number dialed.

Ending a call

- Briefly press the PWR/CALL button.

Transferring a call*

- While on a call on your handset, briefly press the PWR/CALL button to transfer the audio to the Headset.
- And to transfer a call from the Headset to Handset, press and hold VOLUME UP button for 5 seconds.
(Headset and handset must be paired).

Call waiting*

- Answer a second call without hanging up the first call by pressing the PWR/CALL button for 1 second. Press the PWR/CALL button for 1 second return to the original call.

Call reject*

- Reject call by pressing the PWR/CALL button for 1 second when the Headset rings.

Mute or Unmute the microphone

- During a call, press the Volume Down button for 1 seconds. To unmute the microphone during a call, briefly press the PWR/CALL button.

* It is possible to use these functions only when your handset supports them. For further information about using these features, please consult your handset's user manual.

Summary of button functions

Function	BCM-130 Status	Action
Power on	Power off	Press the PWR/CALL button for 3 seconds.
Power off	Power on	Press the PWR/CALL button for at least 6 seconds.
Volume up	Talking	Briefly press the Volume Up button.
Volume down	Talking	Briefly press the Volume Down button.
Transferring a call	Talking	<ul style="list-style-type: none"> • Handset to Headset - Briefly press the PWR/CALL button • Headset to Handset - Press and hold the VOLUME UP button for 5 seconds.
Answering a call	Ringng	Briefly press the PWR/CALL button.
Ending a call	Talking	Briefly press the PWR/CALL button.
Call waiting	Talking	Press the PWR/CALL button for 1 second.
Last number redialing	Idle	Press the PWR/CALL button for 1 second.
Voice dialing (handset must support)	Idle	Briefly press the PWR/CALL button.
Pairing mode	Power off	Press the PWR/CALL button for 5 seconds or use Auto-Pairing Mode.
Call reject	Ringng	Press the PWR/CALL button for 1 second.
Mute	Talking	Press the Volume Down button for 1 seconds.

LED indication

Function	BCM-130 Status	Action
Operating	Power on	The blue LED light flickers 4 times.
	Power off	The blue LED light flickers 4 times and then turns off.
	Pairing mode	The blue LED light is lit.
	Pairing completed	The blue LED light flickers 2 times every 5 seconds.
	Call connected	The blue LED light flickers 2 times every 5 seconds.
Charging	Charging	The blue LED is lit.
	Charging complete	LED is turned off.

Troubleshooting

Problem	Check Point	Action
Does not turn on	Check whether the battery of the BCM-130 is fully charged.	Charge the battery.
Unable to communicate with the Bluetooth Headset BCM-130.	Check whether the headset supports the Headset or Handsfree profiles.	Determine whether your headset supports the Headset or Handsfree profiles.
	Check whether the battery of the BCM-130 is low.	Charge the battery.
Unable to pair the BCM-130 with the Bluetooth device.	Check and make sure the Headset is placed in pairing mode.	At the power off state, press and hold the PWR/CALL button for 5 seconds to place the Headset in pairing mode.
Low sound (Speaker)	Check the speaker volume.	Increase the volume level.

Specification

ITEM	Description
Bluetooth specification	V2.0 (Handsfree / Headset profiles)
Battery	3.7V, Li- Polymer
Stand by time	Up to 150Hrs
Talk Time	Up to 4 Hrs
Charging time	< 2Hrs
Operation temperature	-10 C ~ 60 C
Dimension / weight	19.5mm(W) X 41.9mm(L) X 9.7mm(H) / 9.0g

Safety approvals

•FCC compliance Information

This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions:
 1) This device may not cause harmful interference, and
 2) this device must accept any interference received, including interference that may cause undesired operation.

•FCC WARNING

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

•CE USER INFORMATION

Hereby, Bluecom, Inc. declares that this Bluetooth(M/N: BCM-130) is in compliance with the essential requirements and other Relevant provisions of Directive 1999/5/EC.