 


6.5 Setup Photographs:

 
13.56 MHz RFID (NTB-Push Button)

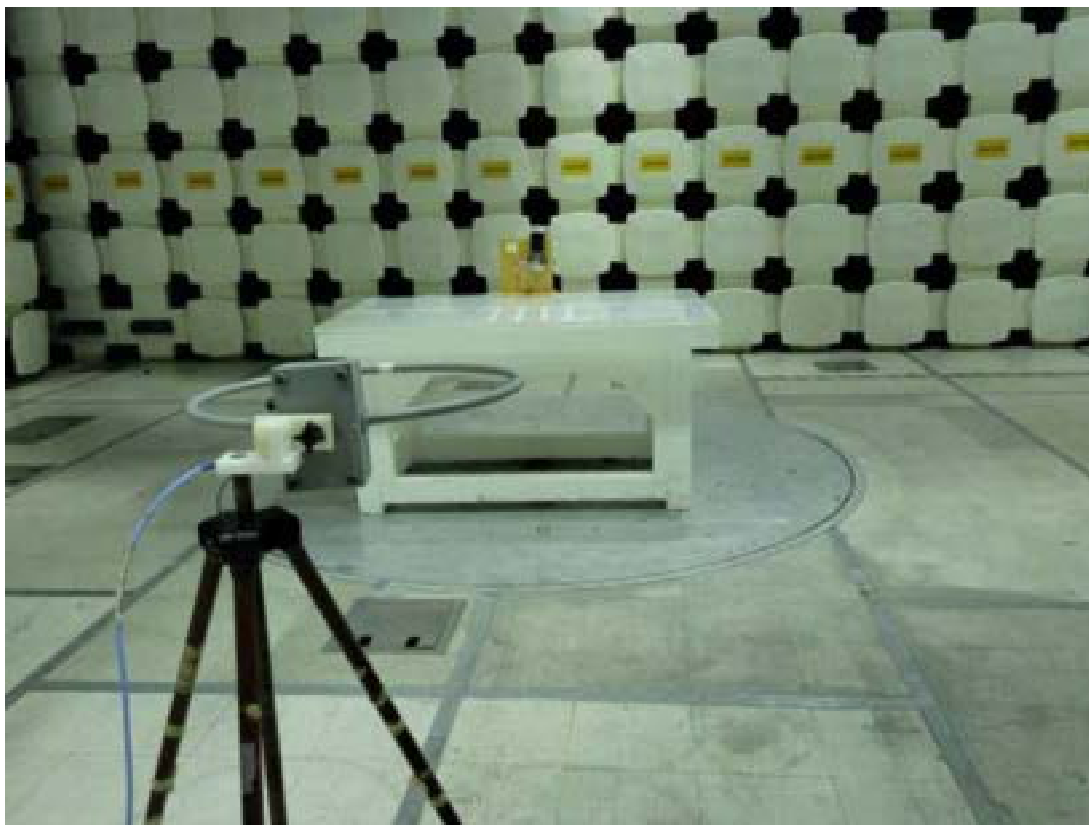





13.56 MHz RFID (NTB-Touchscreen)





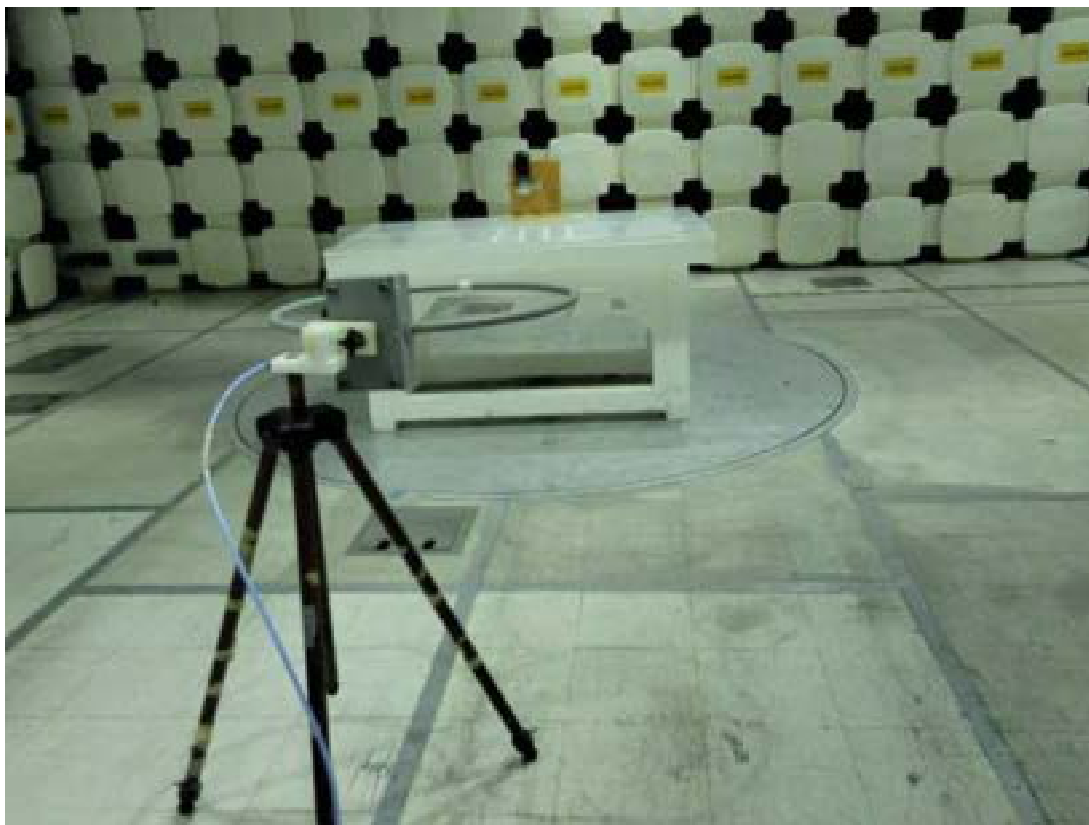

BLE (NTB-Push Button)

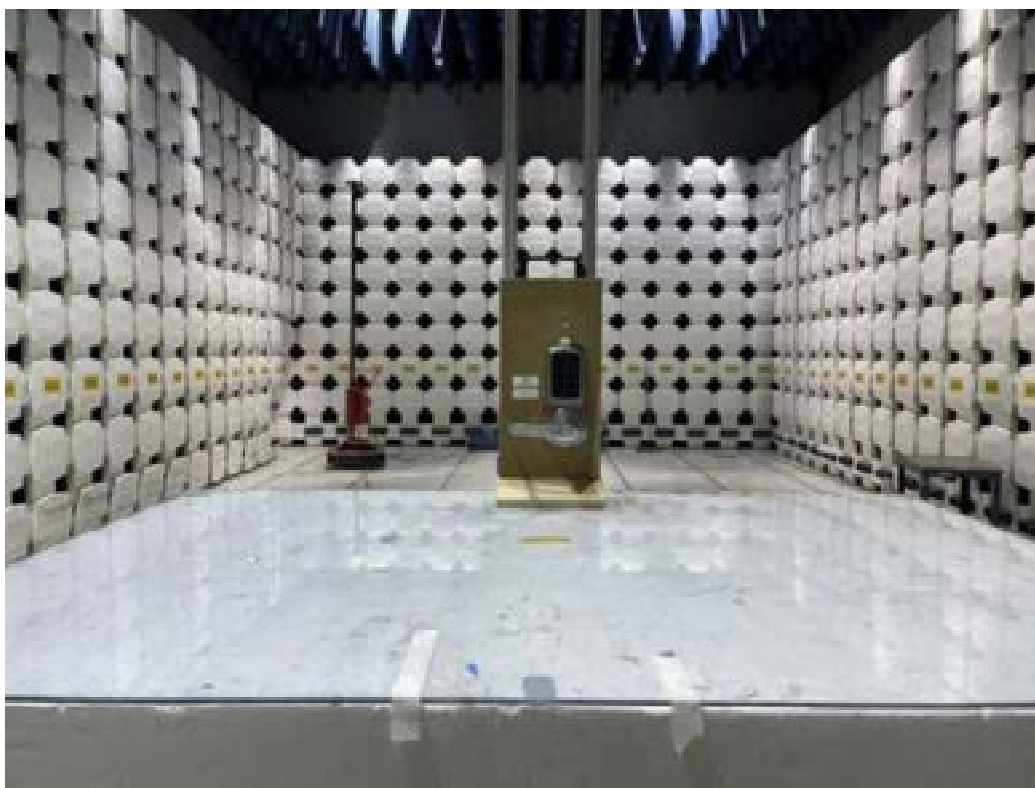 
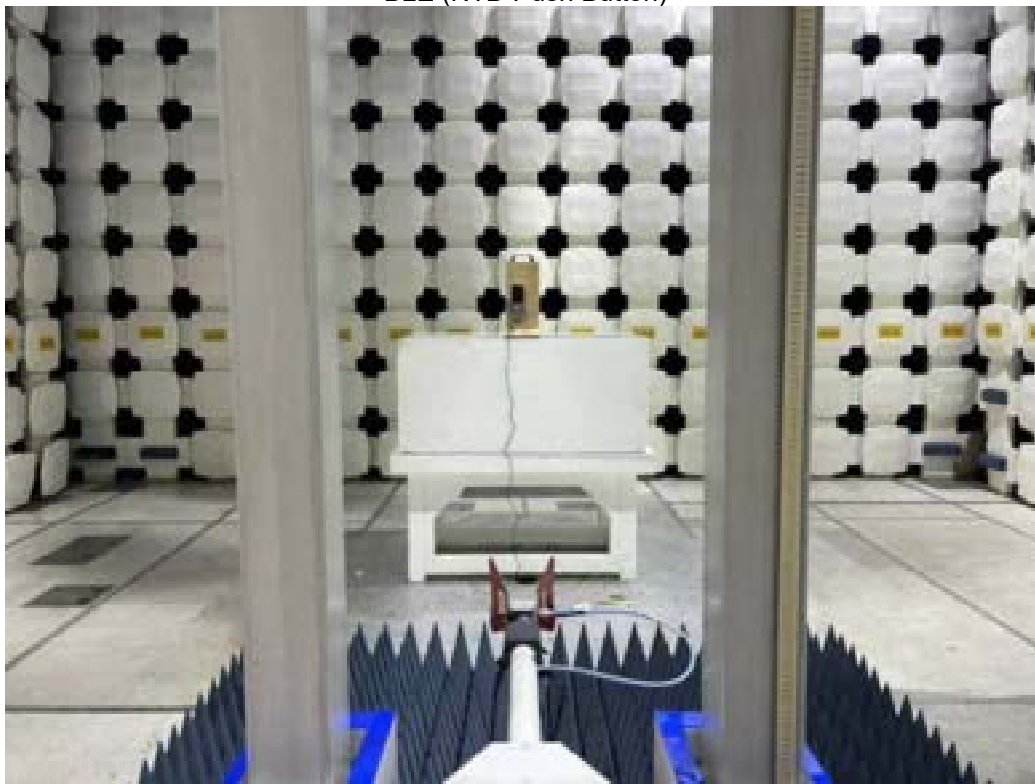 


BLE (NTB-Touchscreen)

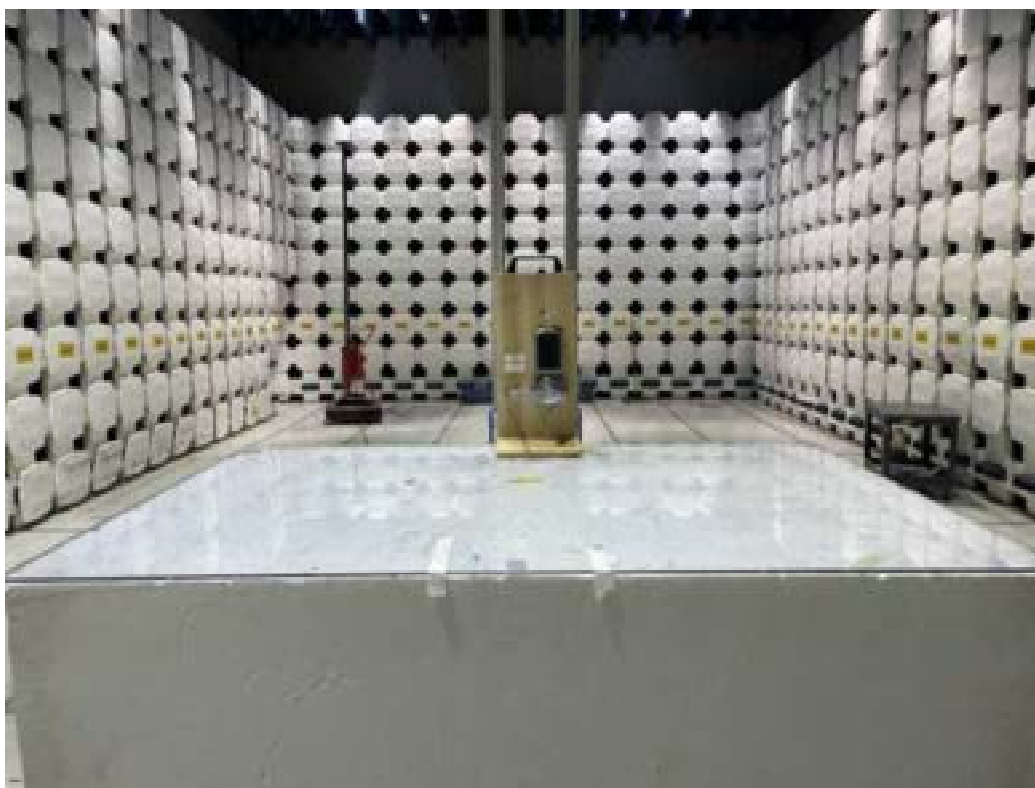 
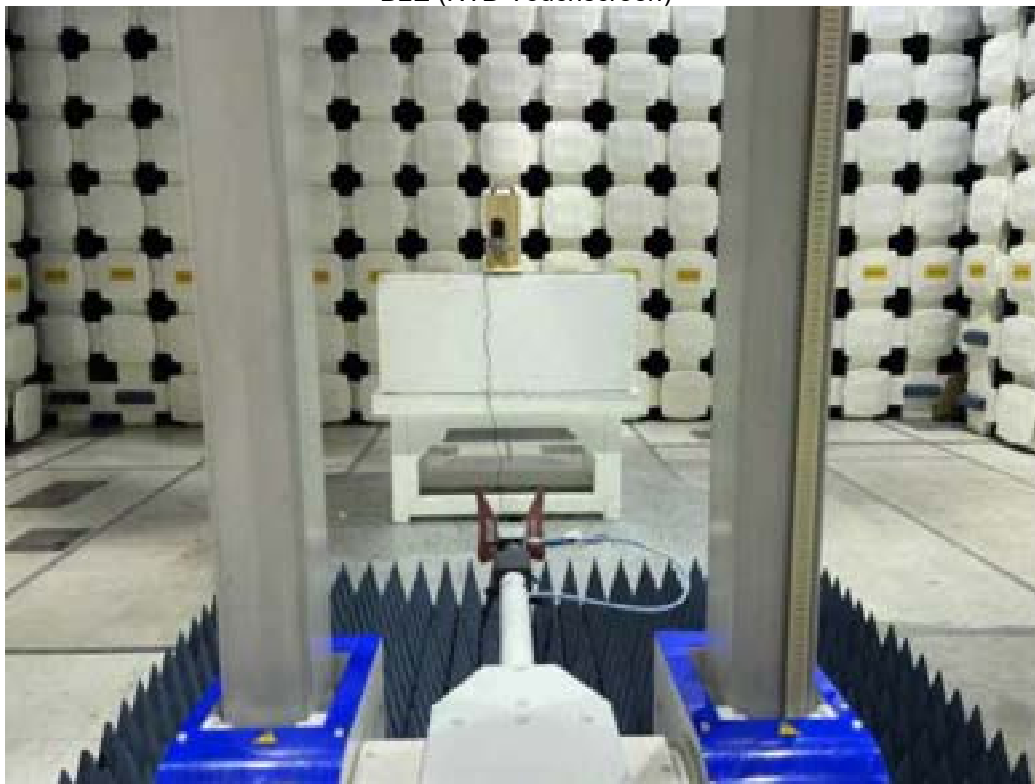 


7.5 Setup Photographs:

  BLE (NTB-Push Button)

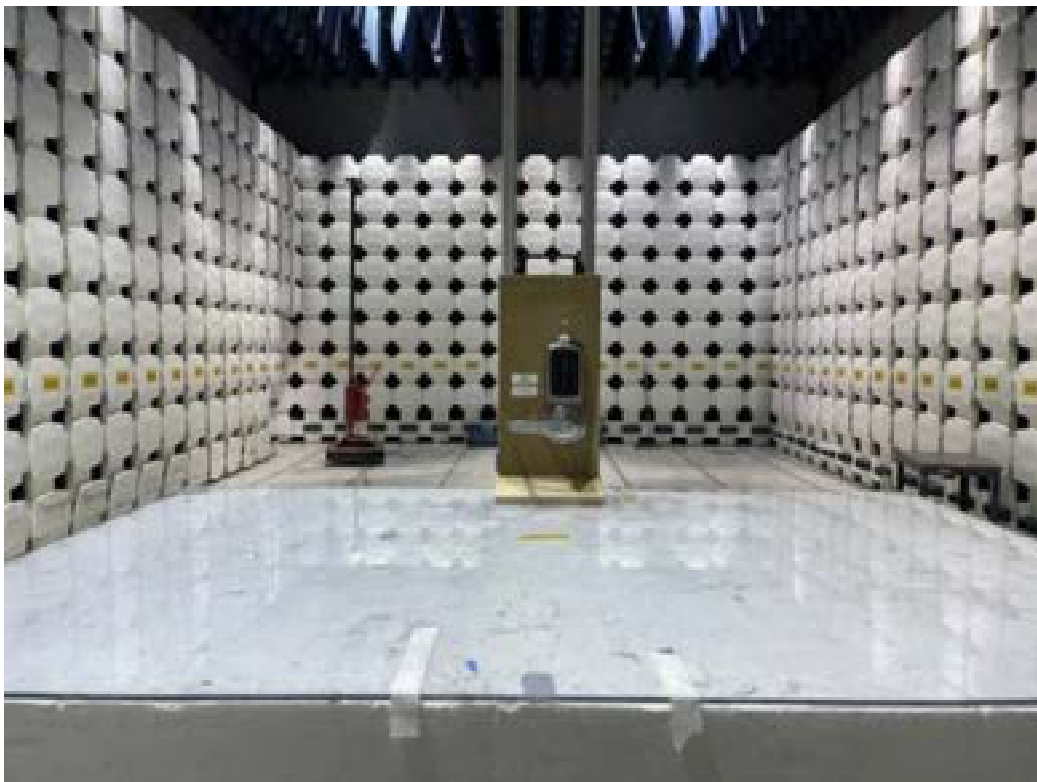
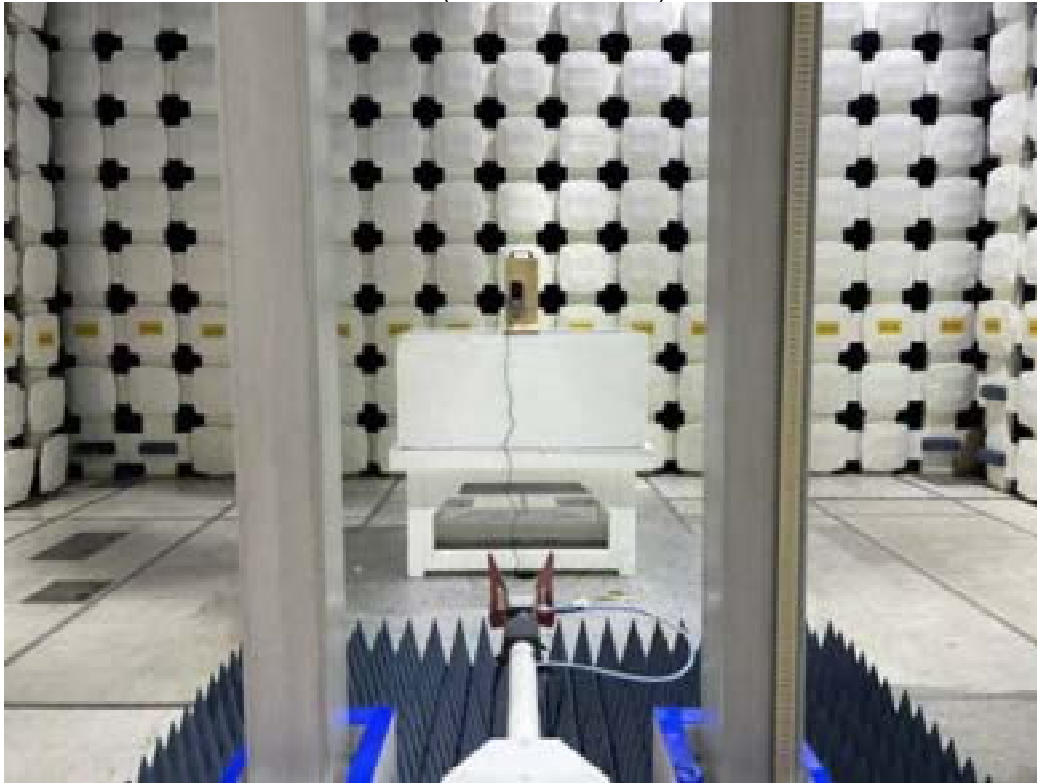


BLE (NTB-Touchscreen)

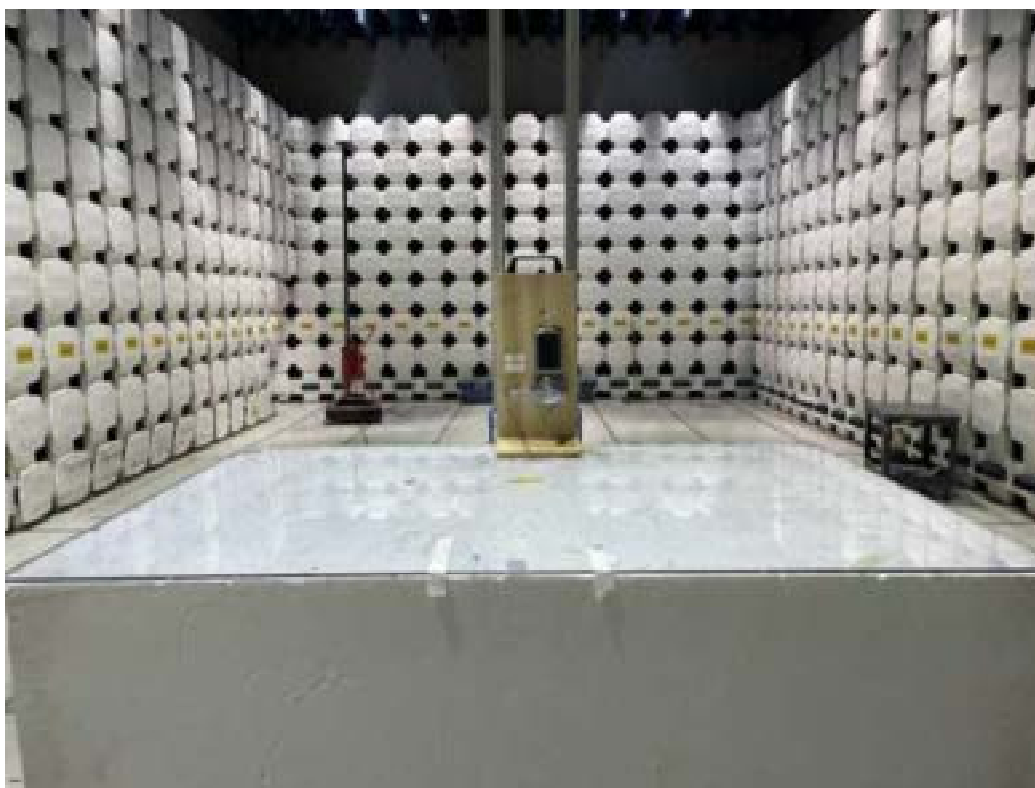 
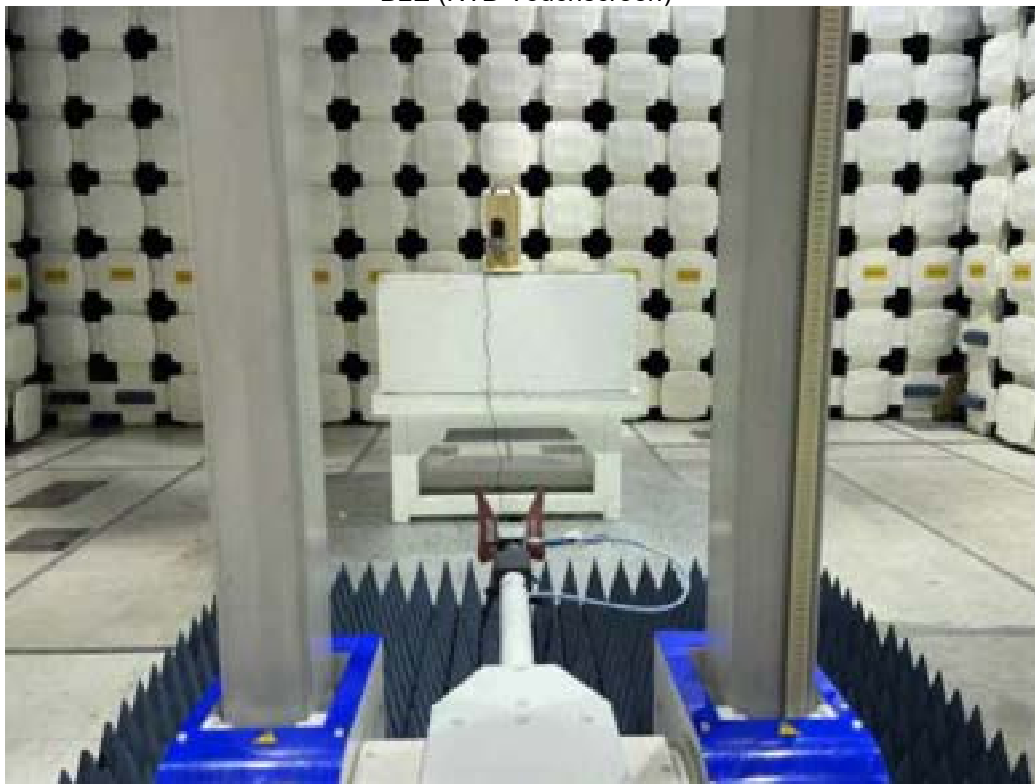 


8.5 Setup Photographs:

  BLE (NTB-Push Button)

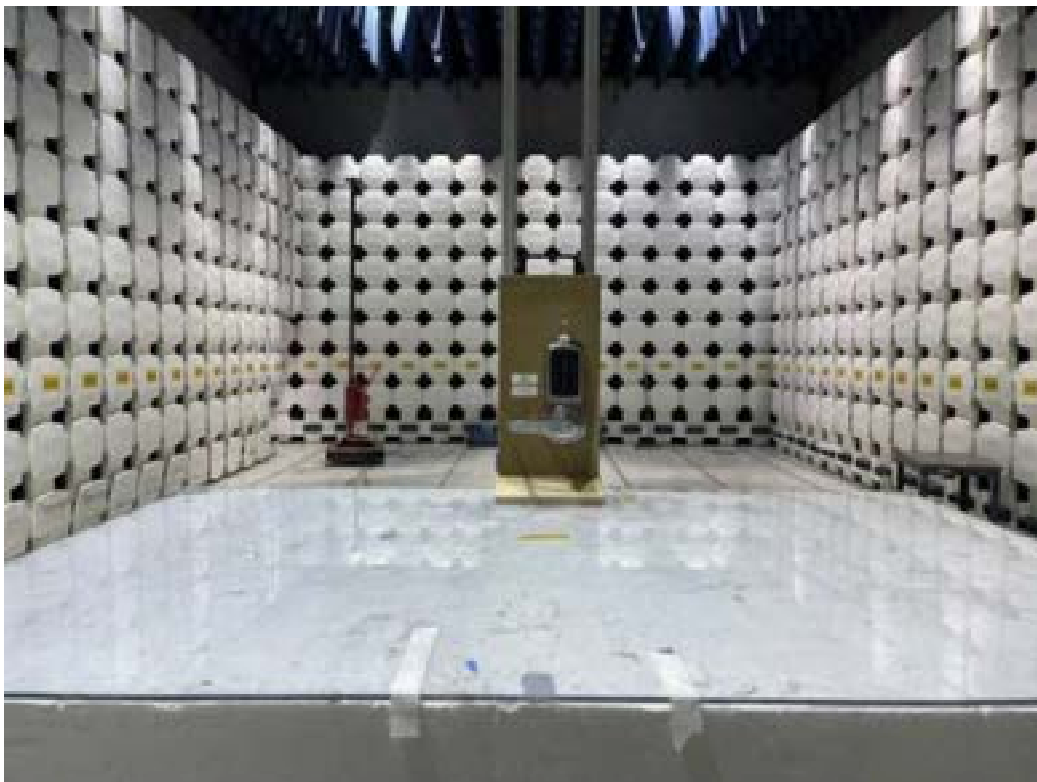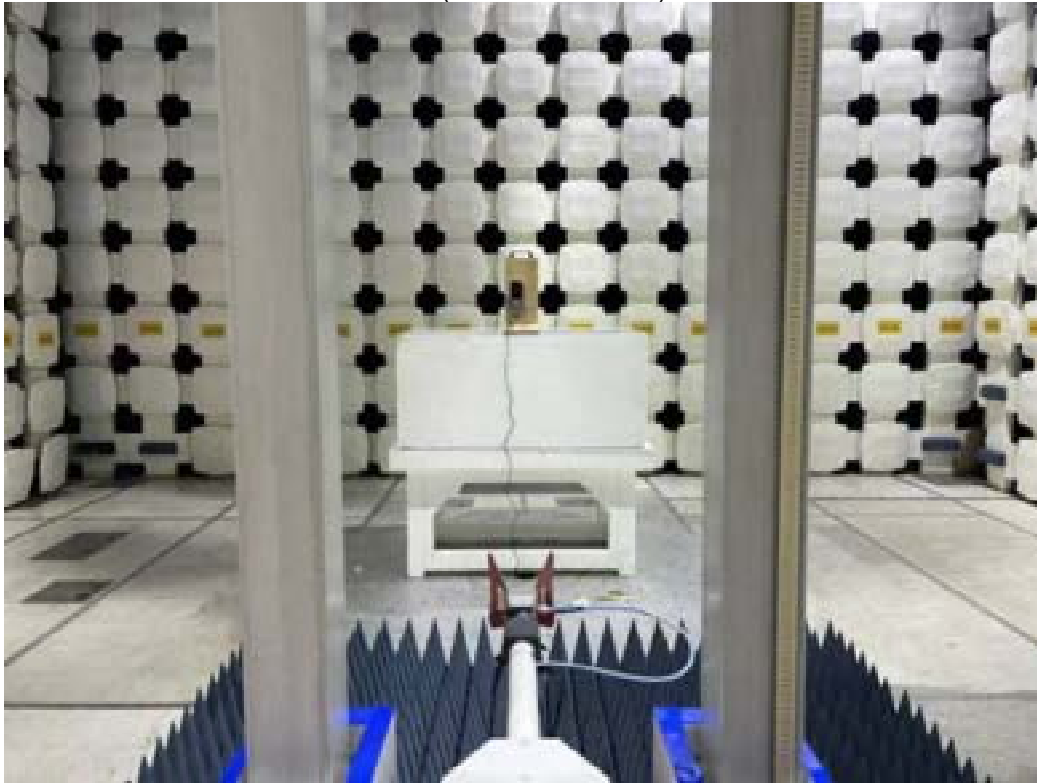


BLE (NTB-Touchscreen)

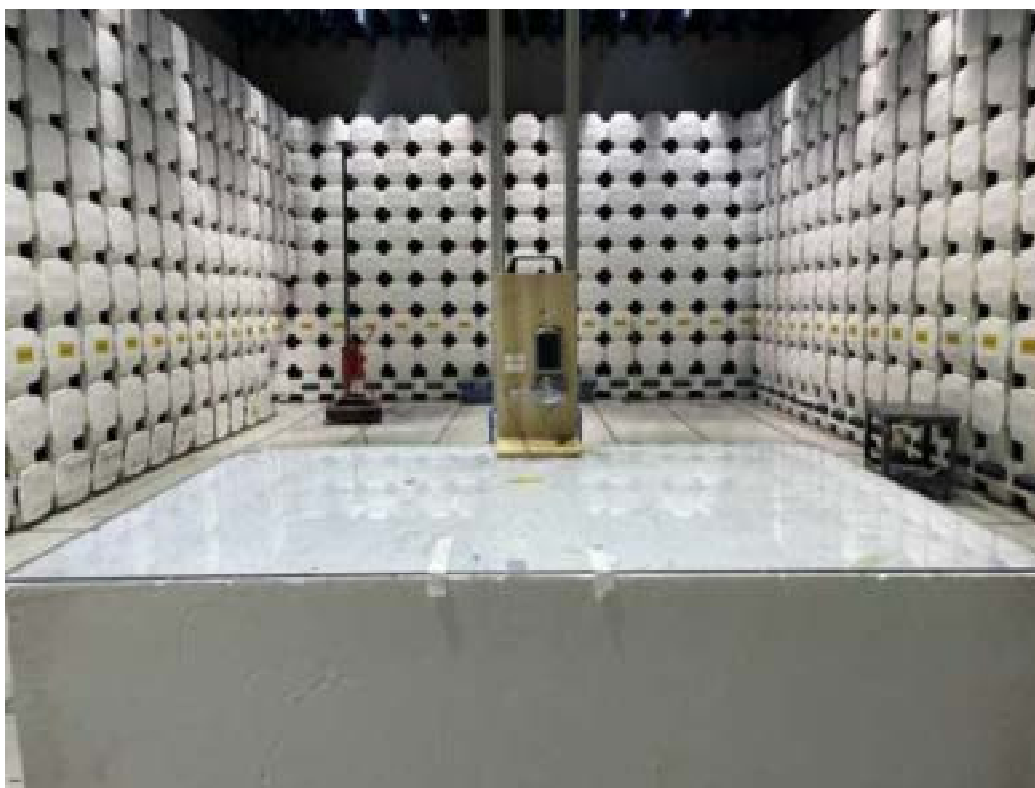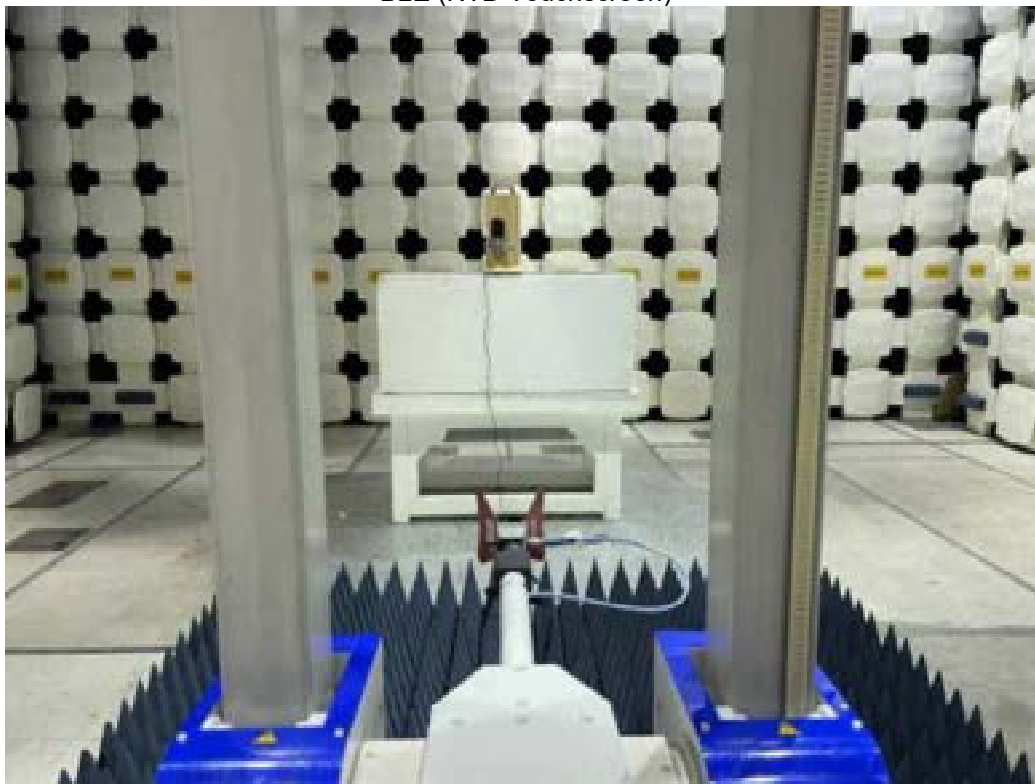  

9.5 Setup Photographs:

 
13.56 MHz RFID (NTB-Push Button)




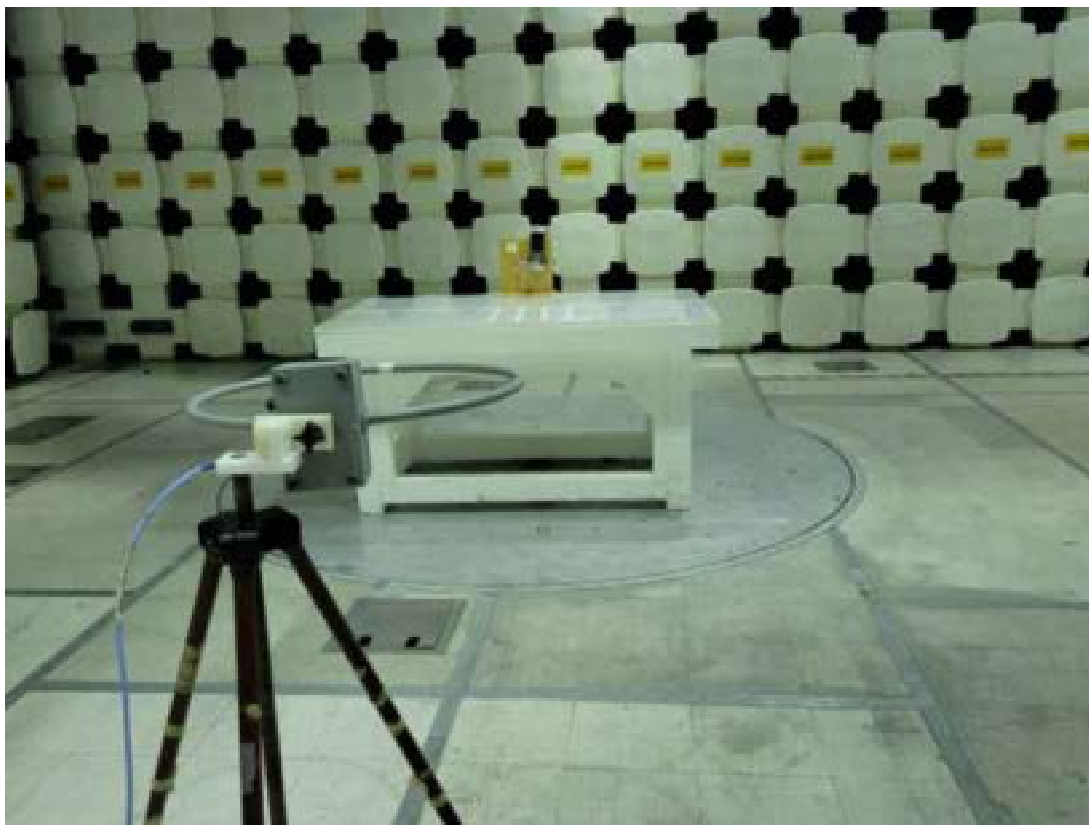


 13.56 MHz RFID (NTB-Touchscreen)





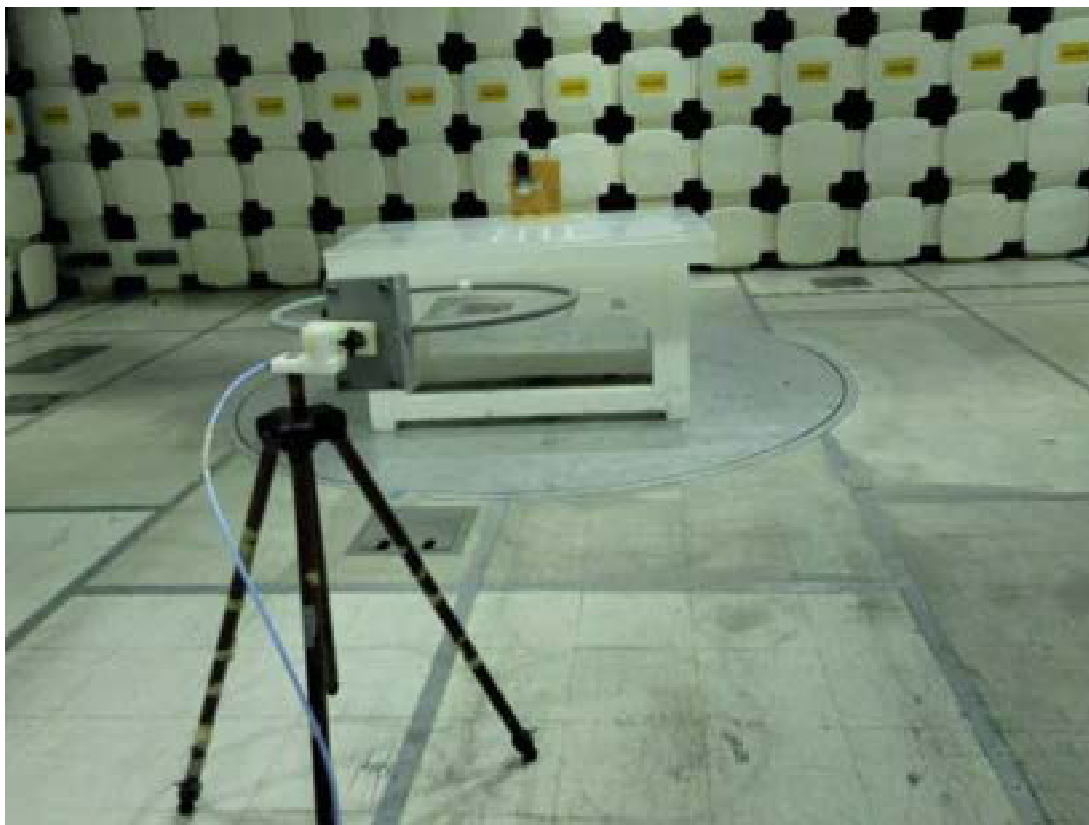

BLE (NTB-Push Button)

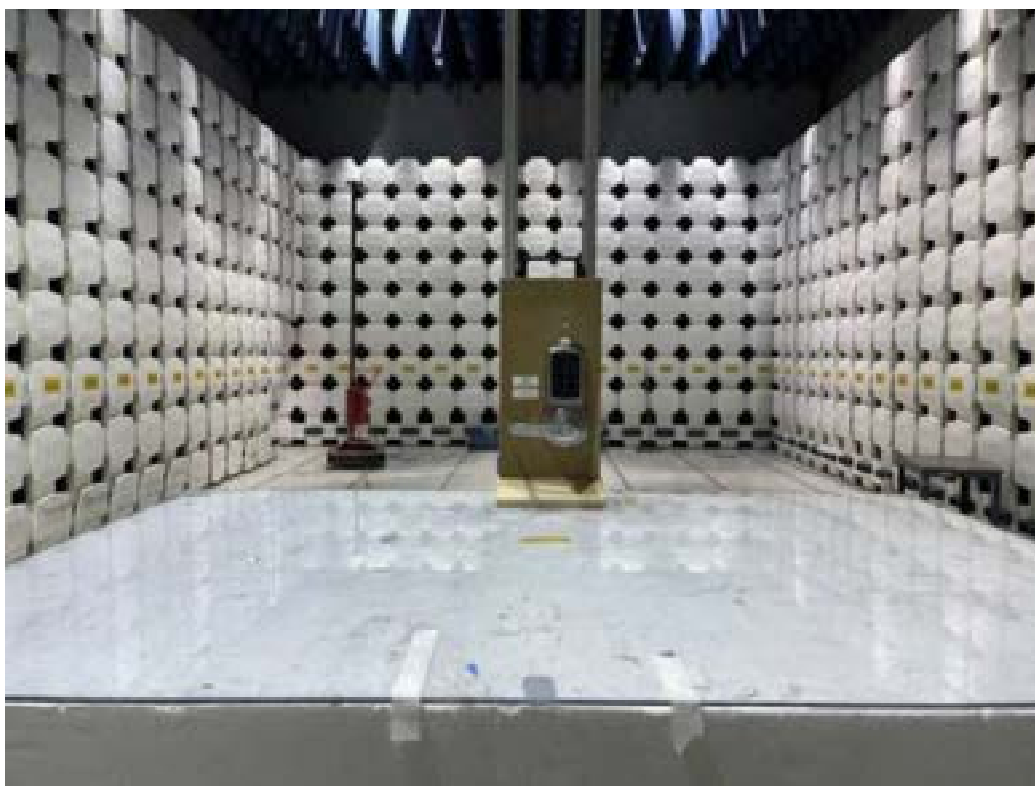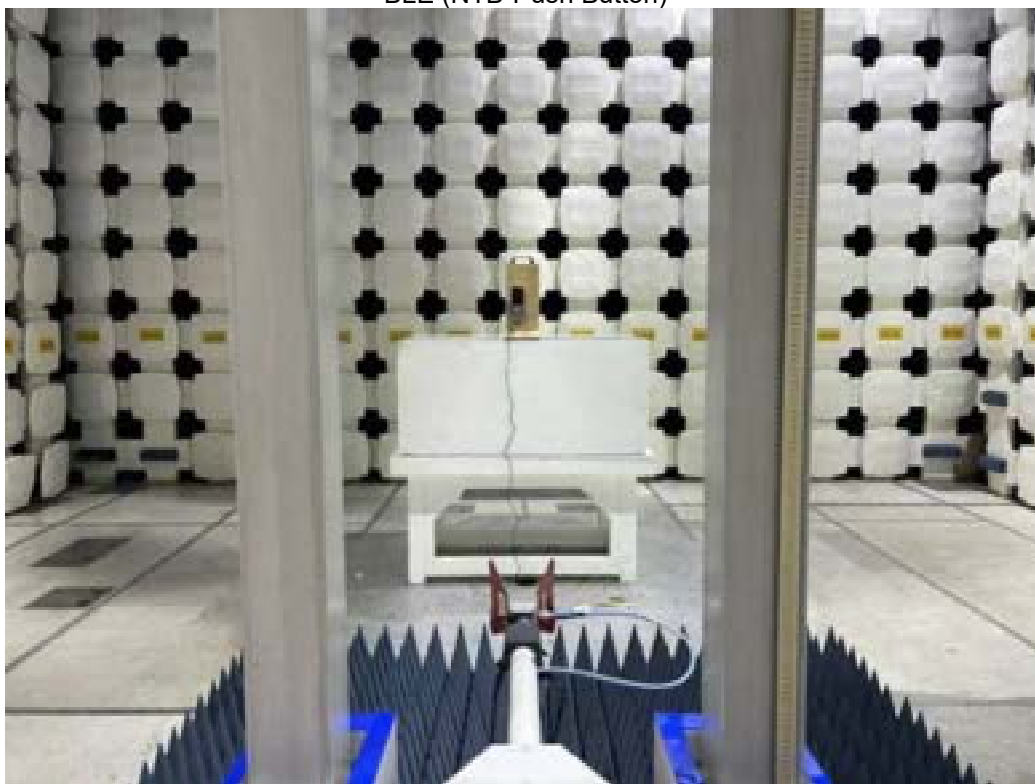  


BLE (NTB-Touchscreen)

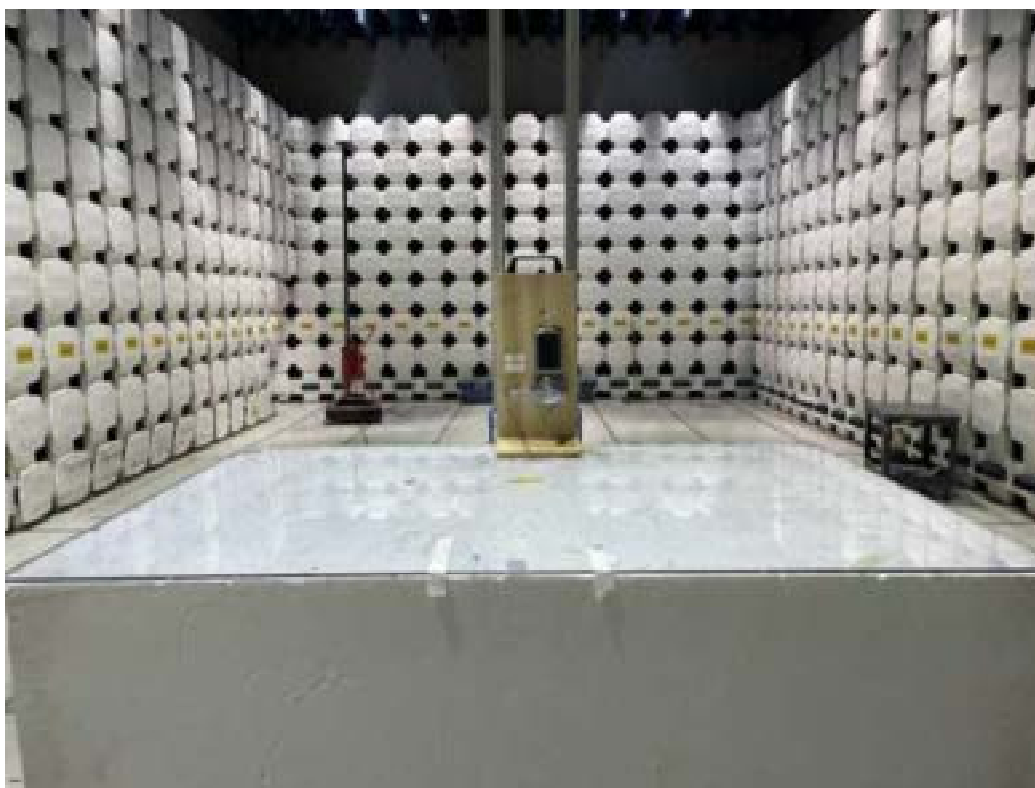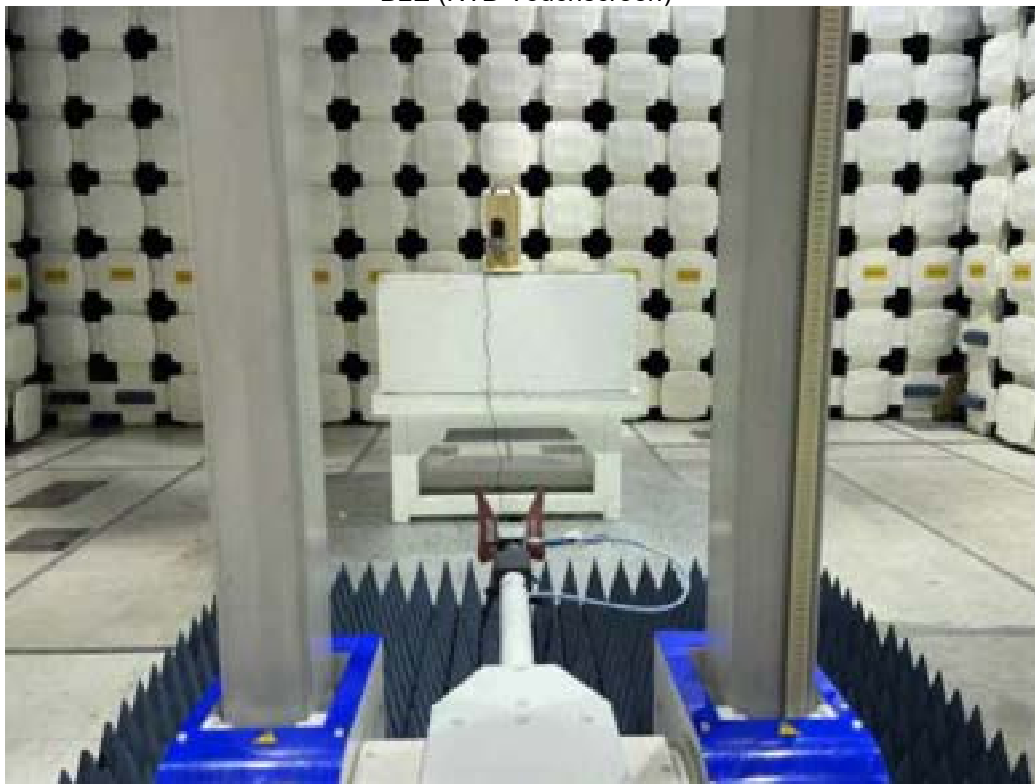  

10.5 Setup Photographs:

 
13.56 MHz RFID (NTB-Push Button)



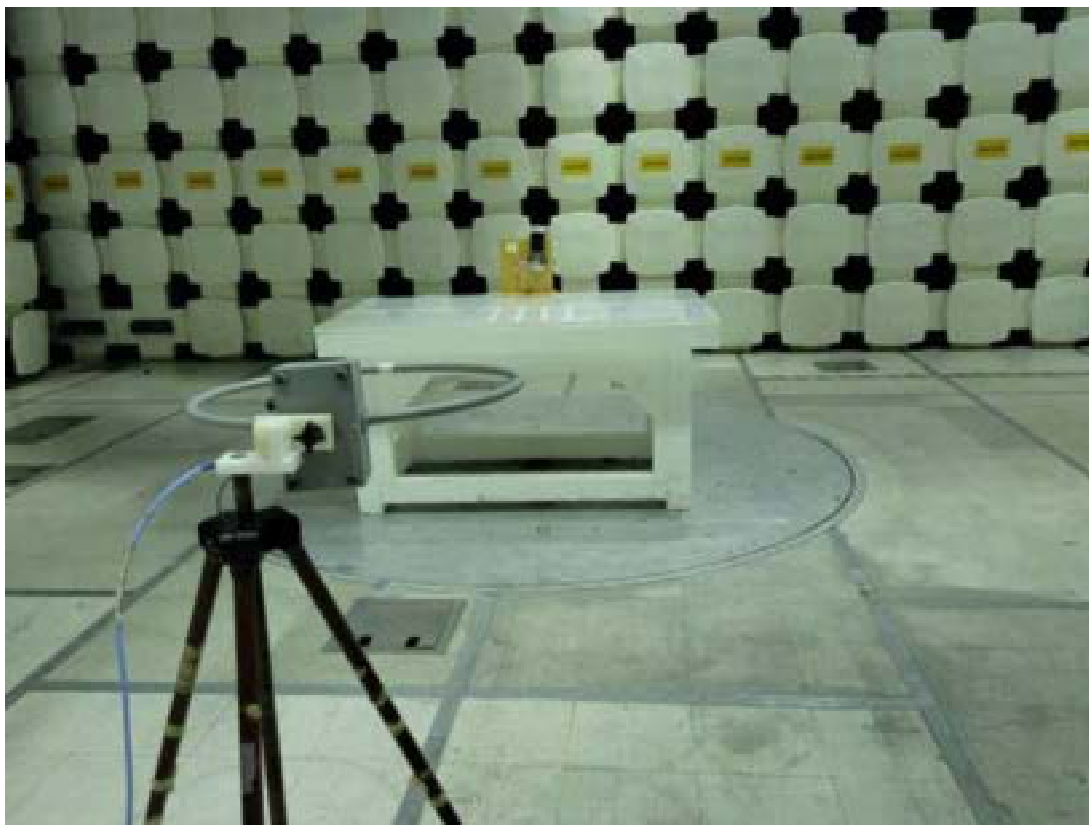

 13.56 MHz RFID (NTB-Touchscreen)




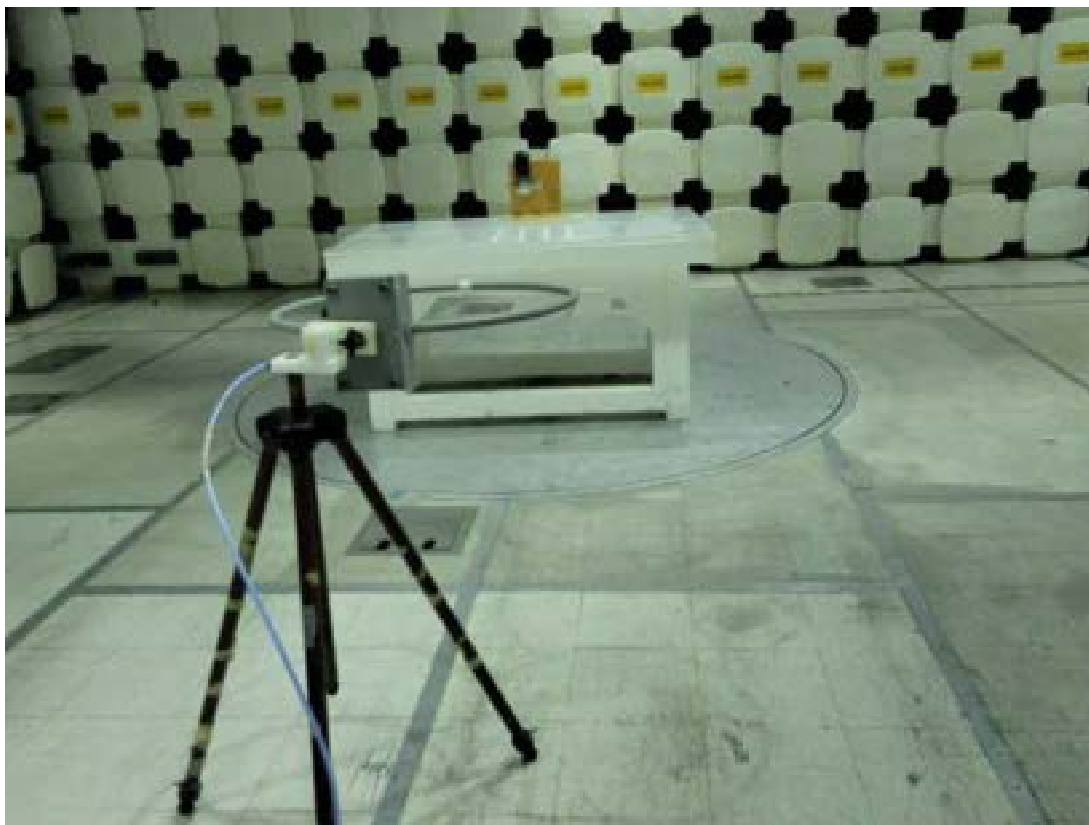


13.56 MHz RFID (NTB-Touchscreen), RE 30-1000 MHz



 BLE (NTB-Push Button), RE 9 kHz-30 MHz [X-axis]

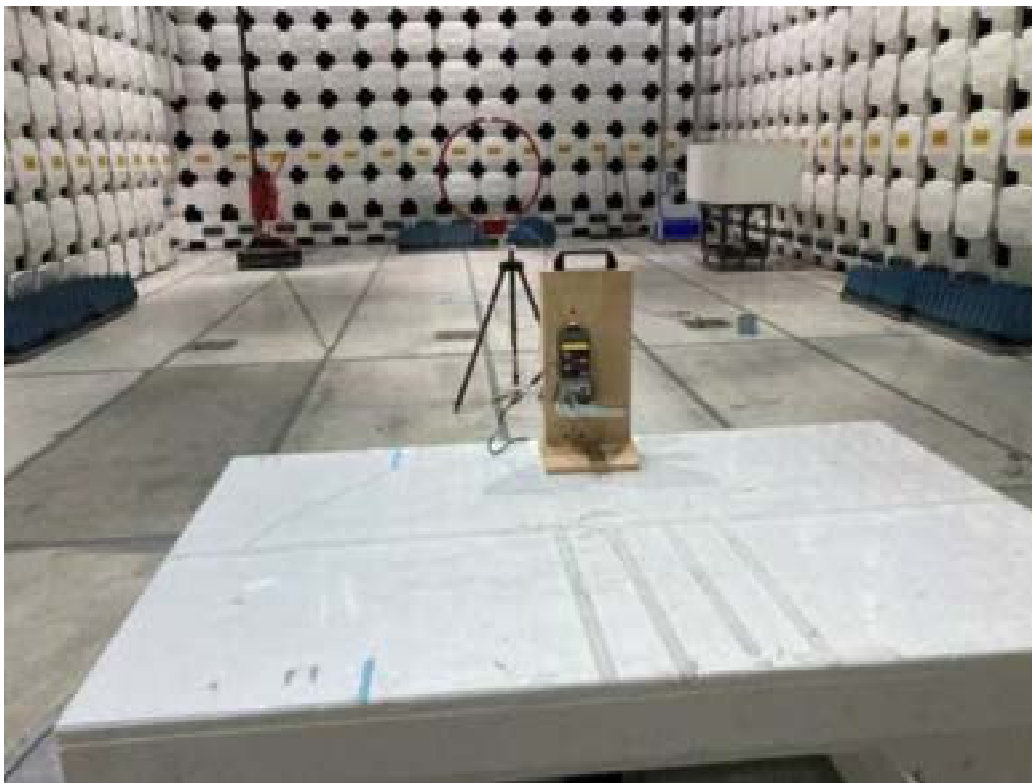

 
BLE (NTB-Push Button), RE 9 kHz-30 MHz [Y-axis]

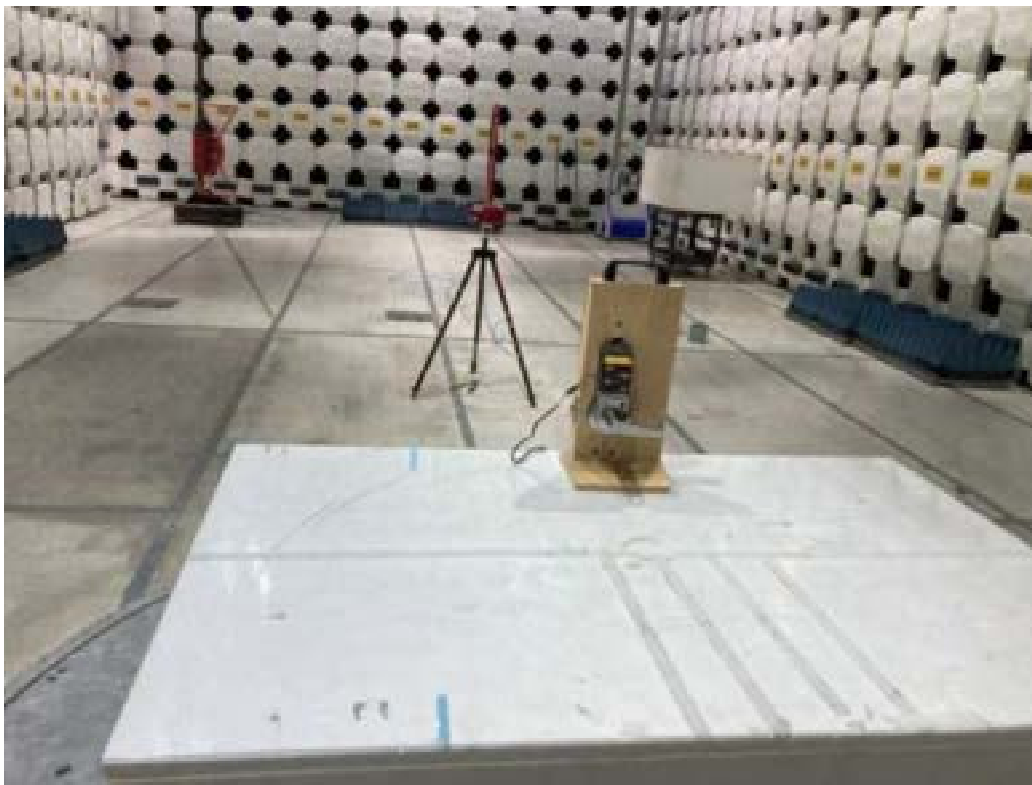

BLE (NTB-Push Button), RE 9 kHz-30 MHz [Z-axis]



 BLE (NTB-Push Button), 30-1000 MHz

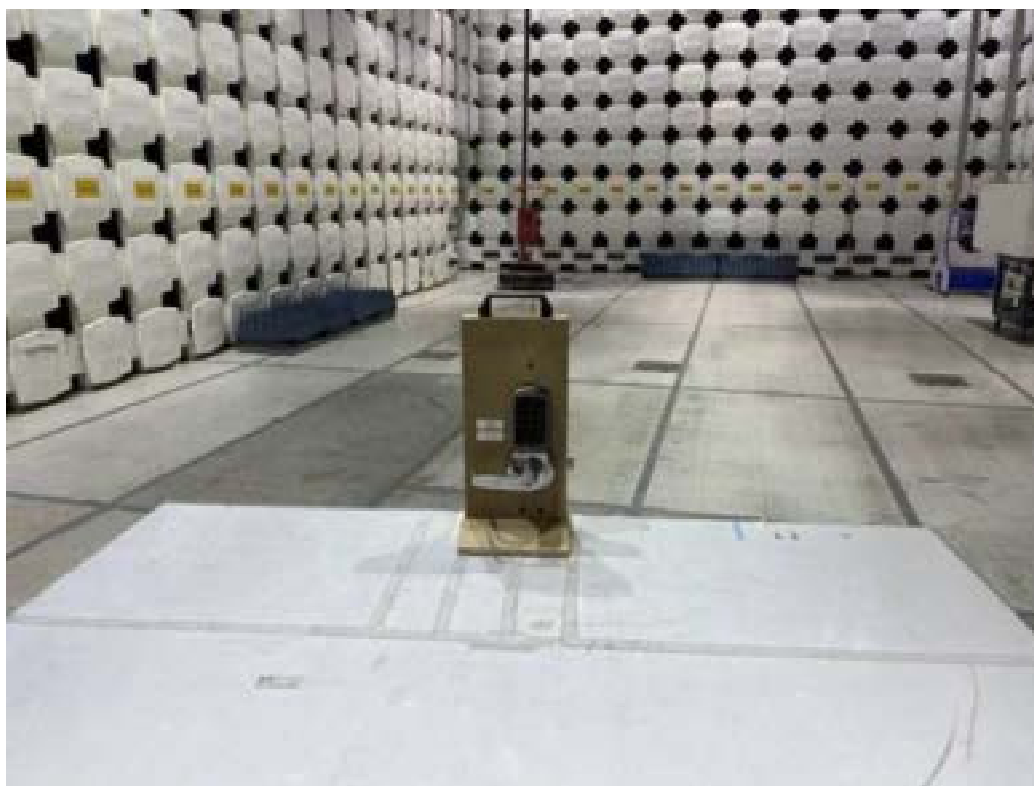


BLE (NTB-Push Button), RE 1-18 GHz



BLE (NTB-Push Button), RE 18-25 GHz



 BLE (NTB-Touchscreen), RE 9 kHz-30 MHz [X-axis]

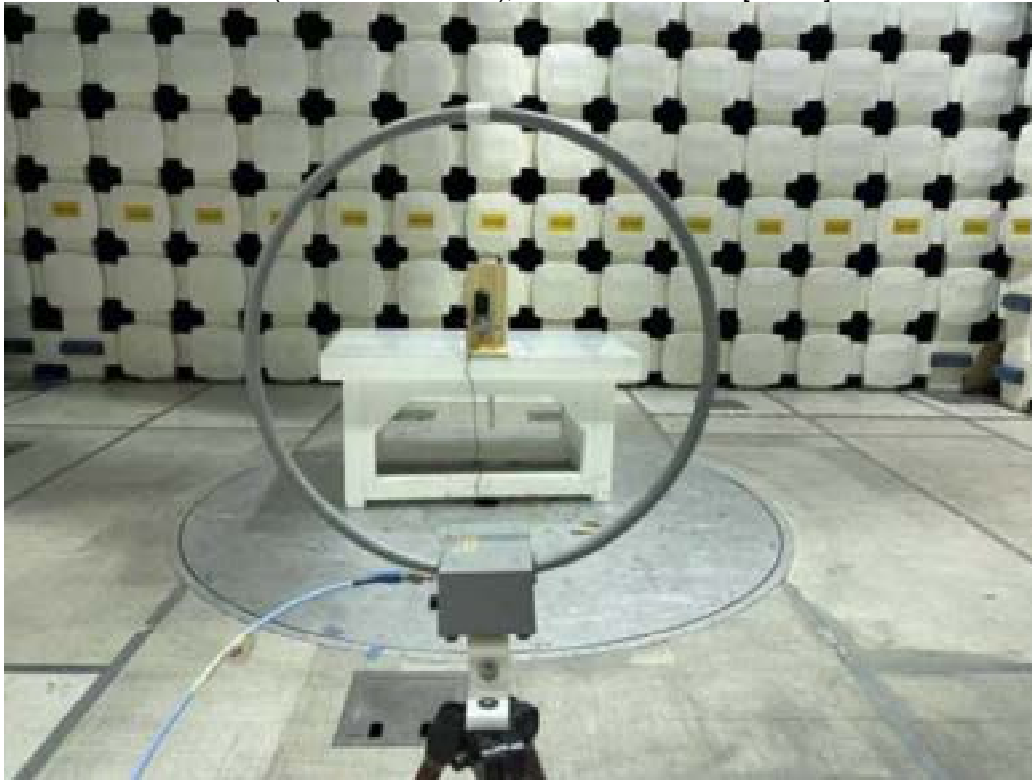

BLE (NTB-Touchscreen), RE 9 kHz-30 MHz [Y-axis]



 
 
BLE (NTB-Touchscreen), RE 9 kHz-30 MHz [Z-axis]



BLE (NTB-Touchscreen), RE 30-1000 MHz



BLE (NTB-Touchscreen), RE 1-18 GHz

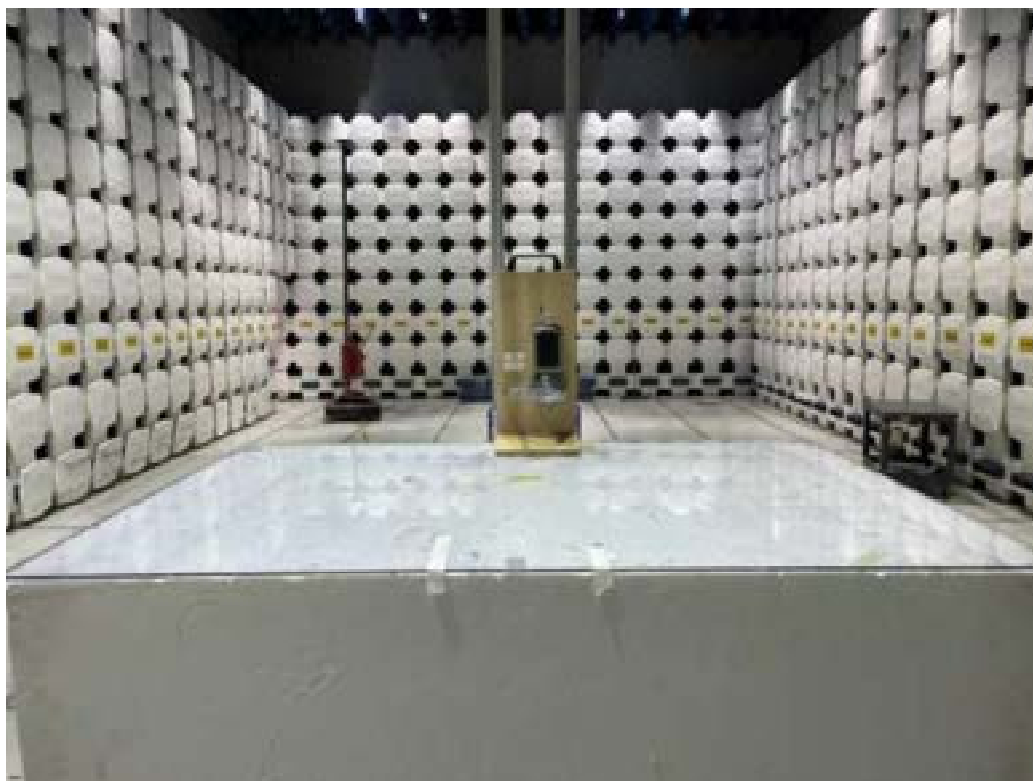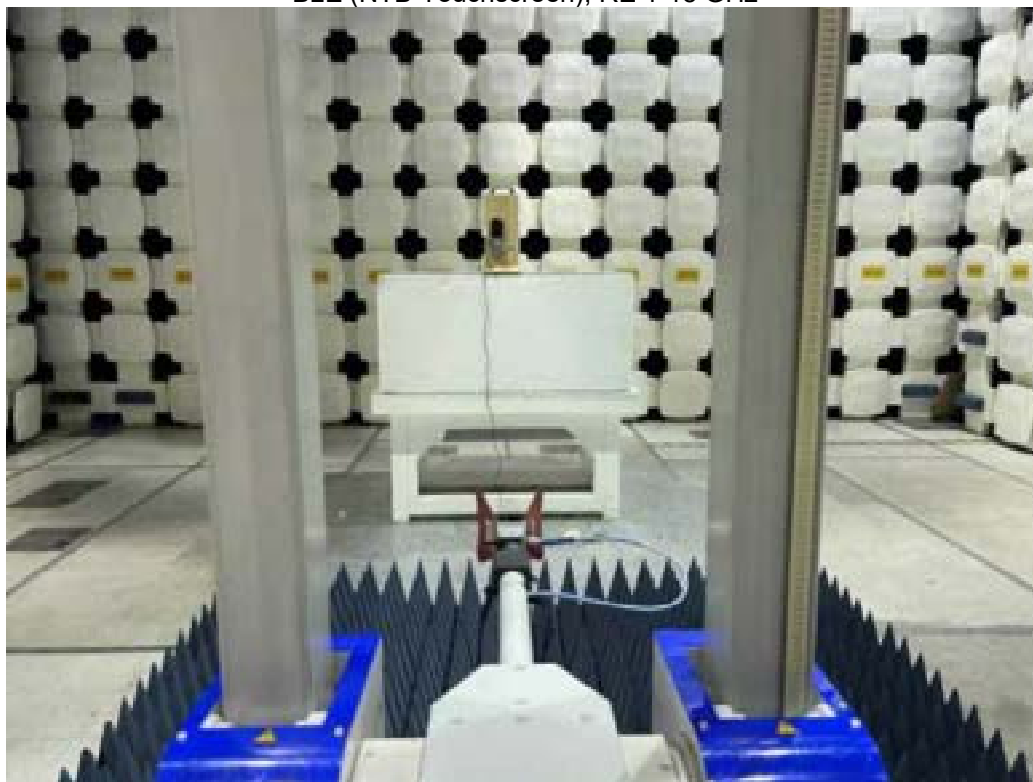


BLE (NTB-Touchscreen), RE 18-25 GHz



11.5 Setup Photographs:

 BLE (NTB-Push Button), 30-1000 MHz

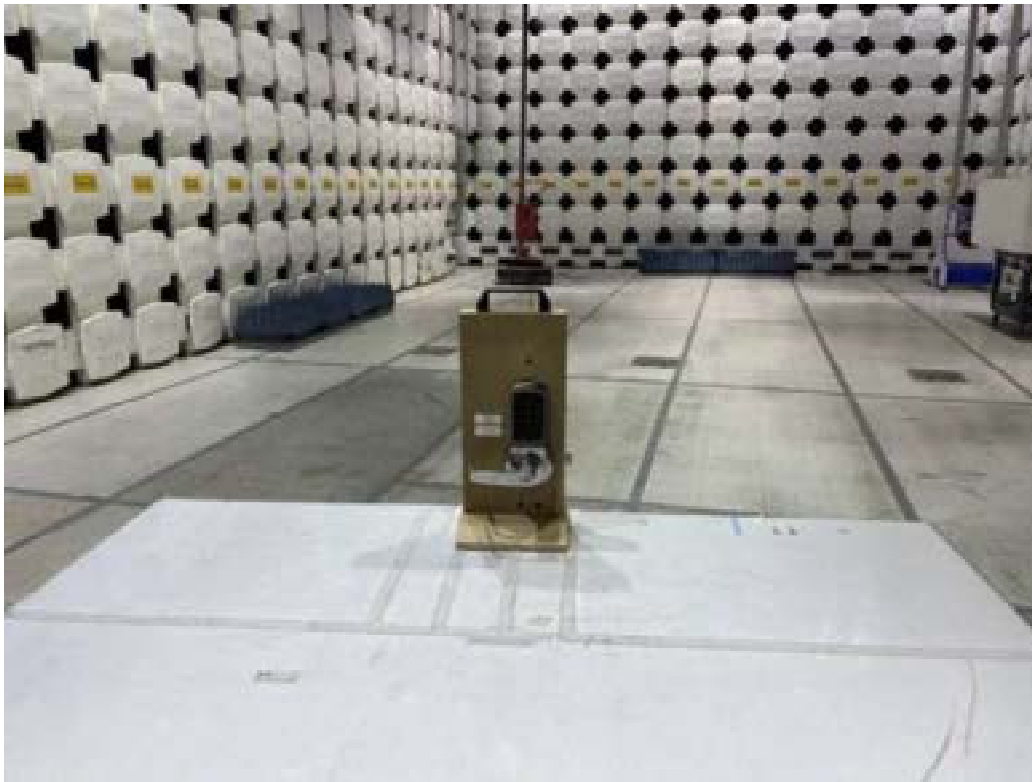

BLE (NTB-Push Button), 1-13 GHz



BLE (NTB-Touchscreen), RE 30-1000 MHz



BLE (NTB-Touchscreen), RE 1-13 GHz

--Photo not available--