

Chapter 1 Quick Start

Congratulations on purchasing your phone. This chapter provides you with information to get you started using your new phone quickly.

Powering the Phone On and Off

(If any background/introduction information is needed, type it here.)

To turn the phone on

1. Press “End” key for a while without release

To turn the phone off

1. Press “End” key for a while without release

Making, Answering, and Ending a Call

(If any background/introduction information is needed, type it here.)

To make a call

1. Enter the phone number you want to call in idle state.
2. Press the “Send” button
3. Press the “End” button

To answer a call

1. Press the “Send” button
2. To end the call, press the “End” button


Locking the Keypad

1. In idle state, press “ * ” for a while, do not release.
2. Enter “ 123 ” to unlock.

Parts of the Phone

The illustration below shows the main components of your phone.

(in the text boxes in the picture below, type in names of the major components)

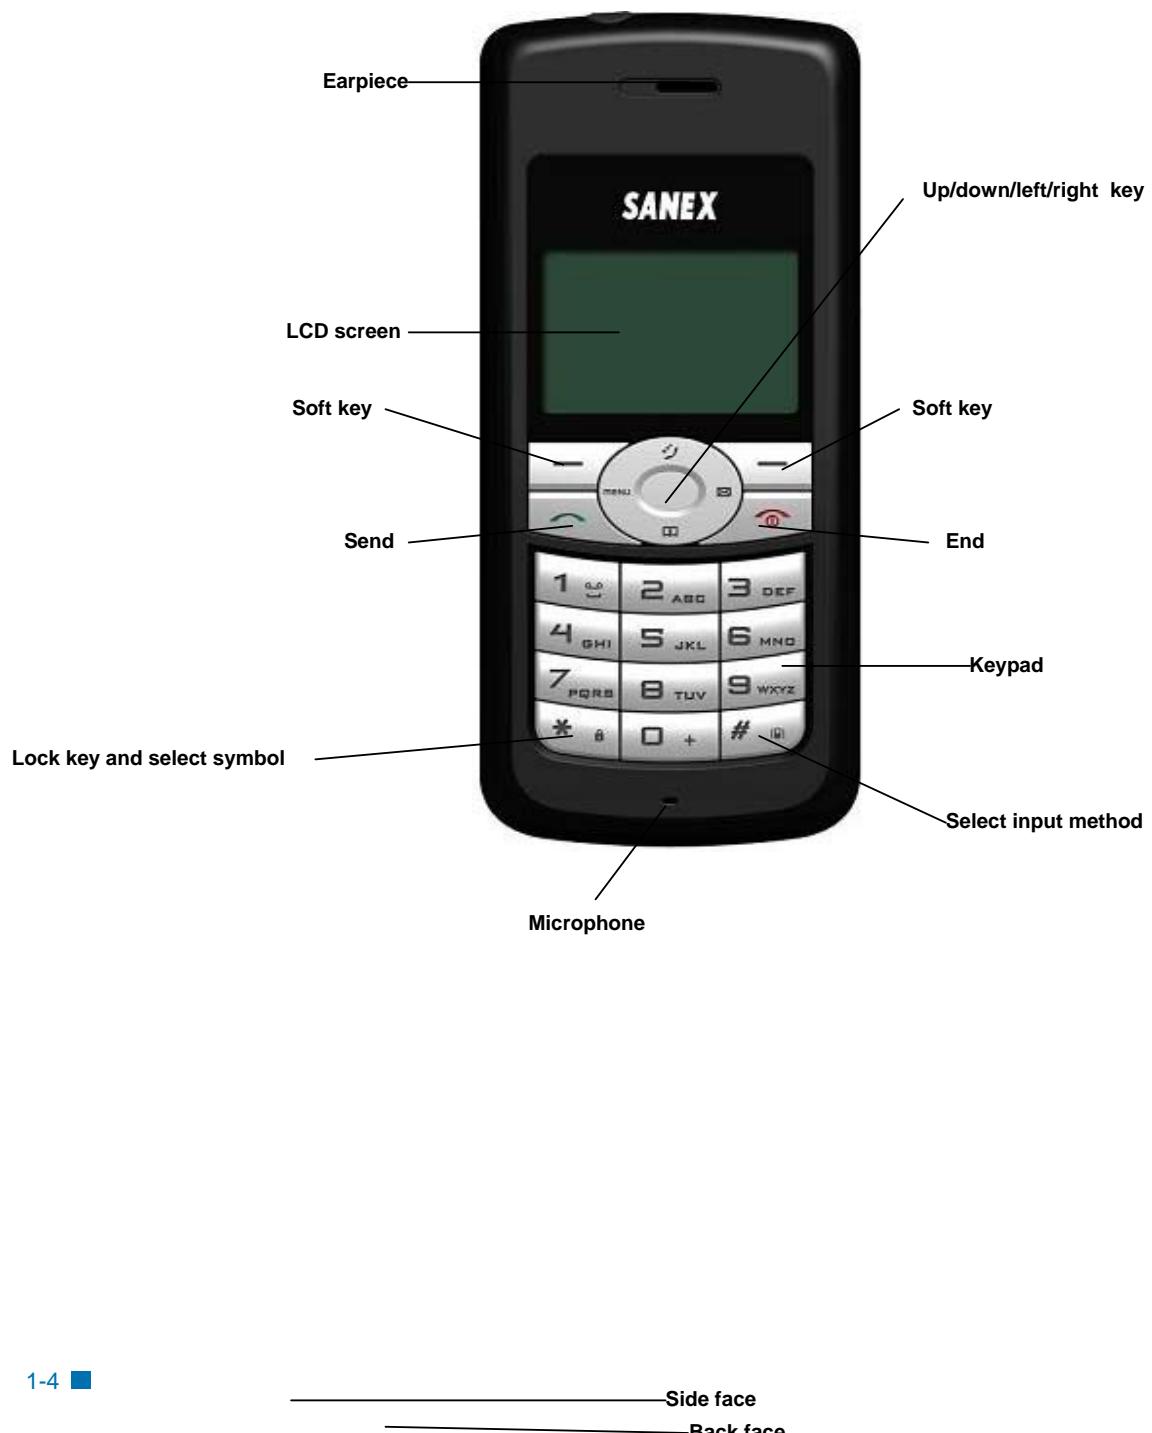

(type in descriptions of the phone's components in the table below)

Key	Description
	Use up/down/left/right key to navigate in menus
Up/down and left/right key	
	Use this key to dial, or answer a call
Send key	
	Use this key to end a call, or turn power on/off
End key	
	Use this key to select or confirm something
Soft key (left)	
	Use this key to cancel something
Soft key (right)	
Alphanumeric keypad	Use these keys to input numbers, or characters

Screen Icons

(Insert all of the screen icons in the table below--or instead of using the table, insert a sample LCD screen with call-outs showing each of the possible screen icons)

When the phone is powered on, the following icons may display:

Icon	Description
	Indicate the strength of rssi
	Indicate the alarm is set
	Indicate the level of battery
	Indicate call forward enabled
	Indicate the phone is in a call
	Indicate new message's arrival
	Indicate new urgent message
	Indicate voice mail
	Indicate phone is in roaming
	Indicate all kinds of phone mode
	Only vibrate
	No ring
	Ring
	Ring and vibrate

Navigating Through the Menus

The top two levels of the phone menus are shown below.

(Insert pictures of the icons in front of each menu item)

1 Contact




- 1 List
- 2 New
- 3 Search
- 4 Multicopy
- 5 Erase All
- 6 Speed Dial
- 7 Memory State
- 8 My Number
- 9 Send all as vCards

2 Messages



- 1 Write Message
- 2 Inbox
- 3 Outbox
- 4 Phone Box
- 5 Templates
- 6 Erase Msgs
- 7 Voice Mail
- 8 Settings
- 9 Multimedia Box
- 10 Memory Status

3 Call Logs

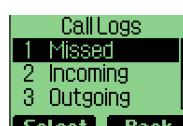

- 1 Missed
- 2 Incoming
- 3 Outgoing
- 4 Erase Lists
- 5 Call Timers

4 Tools



- 1 Schedule
- 2 Alarm Clock
- 3 Calculator
- 4 Tip Calculator
- 5 Stop Watch

5 Settings



- 1 Ringers
- 2 Profiles
- 3 Display
- 4 Security
- 5 Call Setup
- 6 Phone Info
- 7 Keyguard
- 8 Network Service

6 Amusement

- 1 KongMingChess

7 UIM Tools

(Type in instructions below for which buttons to use to navigate through the menus and select menu items)

To navigate through the menus

1. Press up or down to navigate
2. Press left soft key to enter
3. Press right soft key to back


Chapter 2 Contacts

“Contacts” is a list of your contacts. Each contact can contain three phone numbers, address, email, URL, and note.




Using the Keypad to Enter Information

you can use keypad to enter something. There is a cursor, which looks like “|”, at the right side of current character.

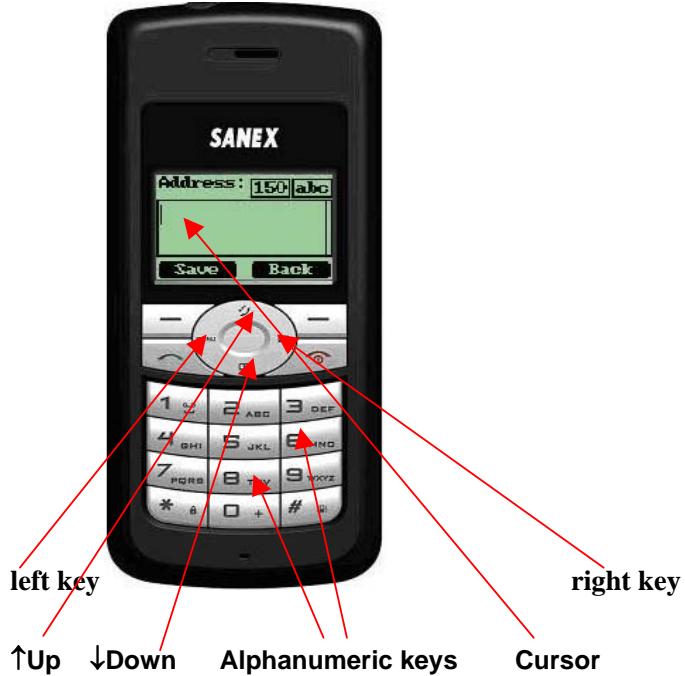

To enter text

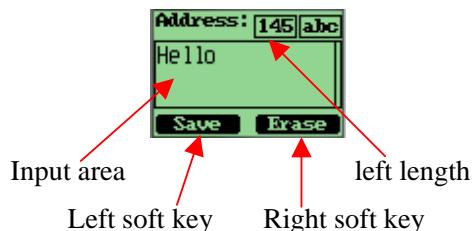

4. Press alphanumeric key to insert text before cursor.
5. If you make a mistake, you can press the right soft key “Erase” to delete current character before cursor.
6. You can use “↑” and “↓” to move the cursor.
7. After editing, select “Save” to save your editing.
8. To cancel editing, long-press “Erase” key until it changes to “Back”, then press it again.

To enter numbers

9. Press “#” several times until “123” is displayed at the top-right corner of the screen.
10. Press numeric keys to input numbers.

To enter uppercase or lowercase letters



11. Press “#” several times until “abc” is displayed at the top-right corner of the

screen, then you can input lowercased letters.

12. Press “#” several times until “ABC” is displayed at the top-right corner of the screen, then you can input lowercased letters.
13. Press alphanumeric key several times (no longer than 0.5 seconds between each two pressing) to enter a letter written in the key.
14. If the cursor is hidden, you can keep on pressing to change current character. current character will be entered when the cursor appears.
15. If you want to enter a letter which in the same key, you must wait for 0.5 seconds until the cursor appears, so you can press the key again. If you want to enter a letter which in a different key, you need not wait for the cursor, and can press the key as you want directly.

To enter symbols or special characters



16. Press “*”.

17. Use “up” and “down” to select the symbol you need.
18. Press the left soft key to confirm.

To change the language

19. Select “Settings” in main menu
20. Select “Display”
21. Select “Language”
22. Select the language you want.
23. If you set your phone to another language which you cannot read, you can press 5,3,3 after entering the main menu, then select the correct language.

Entering and Editing Contacts



To add a new contact

24. At the main menu, select “Contacts”.



25. Select “new”.



26. Input the contact name, press “Save”



27. Choose [mobile], press “change”



5. Press “save” after editing

To list contacts

28. Select “Contacts” in main menu



29. Select “List”



To edit a contact


30. Select a contact in list, press “Options”



31. Select a detail entry you want to change, then press “Change”



32. After editing, press “Save”

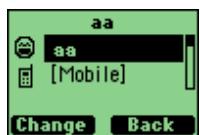

To find a name

33. Select “Contacts” in main menu



34. Select “Search”



35. Enter the full name you want to search, press “Search”




To erase a contact

36. Select one contact in the list



37. Press “Options” soft key

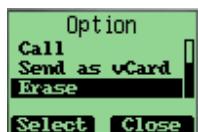

38. Select “Erase” in “Options” menu



39. Press “yes” or “no” soft key to confirm

To erase all contacts

Select “Erase All” in “Contacts” menu to erase all the contacts.



Creating and Using the Speed List

You can assign 05 to 99 to some contacts in “Speed List”. Then you can use such short number as “05#” to dial quickly.



To add/edit a phone number to the speed list


40. Select “Contact” in Main Menu



41. Select “Speed List”



42. Select one short number (the index is the short number) , press “Options” soft key

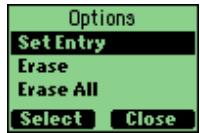

43. Select one contact



44. Select one phone number, save it to speed list

To make a call to a number on the speed list

45. In “idle” state, enter the short number and “#”, then the long number will appear, and instead the short number and “#”.



To delete one or all numbers on the speed list

46. Select “Contact” in the main menu
47. Select “speed List”
48. Choose “Erase” or “Erase All” in “Option”

Using the vCard - VCard exchange

The vCard allow you to exchange phonebook entries via SMS with others whose handsets support Smart Messaging.

Set Reception Mode

The handset support two vCards reception mode, ‘On phonebook’ or ‘Prompt’.

‘On phonebook’ means when you receive a new vCard, the handset will save the contact information directly on your phonebook, and if the entry with the same contact name exists already in your phonebook, it will be overwritten without prompt. After the contact information has been saved to phonebook, the vCard received will be deleted.

‘Prompt’ means the handset will prompt for a new vCard’s incoming. The handset will popup a dialog to ask you whether read the message right now, and your phone sounds, and  is shown on the display. If you have both unread SMSs and vCards,  is shown on the display instead.

Your phone holds up to 120 vCards.

To set reception mode, do the following:

- a. select “Settings” in main menu
- b. select “vcards”



- c. select “Prompt” or “No Prompt”.


Read vCards

If your phone is turned on when it receives a vCard, your phone sounds an alert or vibrates and  is shown on the display (if you have unread SMSs,  is shown on the display instead.). You have a choice of reading the message immediately by pressing “View” key or reading it later by press “Back” key. When you press “View” key, the display will show the content of the vCard message if there is only one unread vCard message. Otherwise, the display will show the vCard message list.




To read a vCard

49. Enter ‘Message’ and select “8: Multimedia Box”.

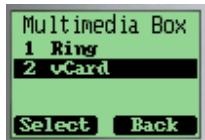


50. Select “2 vCard”

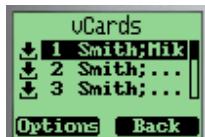

If a vCard message is unread, there is a  flag before the item in the message list. Otherwise, the flag is .


51. You can select a vCard by scrolling “↑ ↓” keys and press “Option” to choose “View”. The vCards shown are sorted by the time they received.

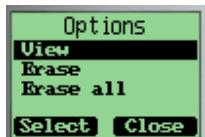

52. You can read the vCard’s content by scrolling “↑ ↓” keys.



53. If you want to save this vCard's contact information, press "Save". If a contact entry with the same name exists, your phone will prompt to ask you whether to overwrite the existed entry.

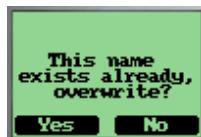

Send a vCard

You can send a vCard through your phone.

To send a vCard;

54. Press "Contact" key at the idle state, and select the contact entry you want to send by scrolling "↑ ↓" keys.

55. Press "Option" key, and select "Send as vCard", then press "Select".



56. All contact details lists on the display, and each with a check box. You can select a detail to send by scrolling "↑ ↓" keys, and then press "Option" key to add/delete it into/from to-be-sent data, or add all details into to-be-send data by selecting "Un>Select", "Select all" menus.



57. When you finish selecting the details to send out, press "Option" key and select "Ok" menu, then press "Select" key, you can input addresses which will receive the vCard. You also can press 'Option' key and select the 'Search' menu to select a contact entry to send this vCard to. The

selected contact's mobile phone number will be displayed.



58. If the contact entry is set to 'private', you must enter the correct lock code before you send the vCard.



59. Send out the vCard via SMS by pressing "Option" key, and selecting the 'Ok' menu, and your phone will send the vCard to the address you have inputted.
60. If the vCard has been sent to an address successfully, your phone will display 'Message Sent!'.



Send all of your phonebook

You can send out all of your phonebook via vCards. To make a batch-send;

61. Press "Menu" key at the idle state, and enter contact menu.
62. Select "Send all as vCards" menu.
63. Input the address you want to send the phonebook to, and then press "send" key. You can only input one address to make the batch-send.
64. Your phone will prompt to ask you whether you are sure to make the batch-send.
65. Press "Ok" key to confirm.



66. The send status will be displayed. Reference:



“Sending” means the current status is sending.

“2/3” means the phone is sending the second contact entry in phonebook.

“Success!” means the previous contact entry in phonebook is sent out successfully. If there are errors in sent, your phone displays



and your phone try to resend the vCard up to 10 times. If the vCard can't be sent successfully in the end, this batch-send will be paused. You can continue this batch-send by press “Continue” key. You can manually pause a batch-send by press “Pause” key too.



You also can break a batch-send by pressing the “Break” key.

Delete vCards

You can delete vCards one by one or delete all vCards at once.

To delete a vCard;

67. When you read vCards, Select the vCard you want to delete by scrolling “↑ ↓” keys. If you want delete all of the vCards, select any one vCard.
68. Press “Option” key, and select “Erase” if you want to delete this vCard, or select “Erase all” if you want to delete all of the vCards, then press “Select”.
69. You phone will prompt to ask you whether sure to delete the vCard or delete all the vCards.



70. Press “Ok” key, the vCard(s) will be deleted.

Chapter 3 Messages

This chapter introduces the usage of Short Message and Ring Tone.

Using Short Message

You can use Short Message function to send and receive message. There is an inbox and an outbox in your phone, inbox and outbox can hold a maximum of 60 messages, each message can contain a maximum of 160 characters, you can send the message now or later, etc.

To check for received text messages

71. when a new message comes, you will be noticed by means what you set at setting->profiles->message prompt, and “You have 1 new messages!” will be displayed on screen.



72. select “View” in the left soft key bar to view.

Note: When you have new message, there is an icon in idle screen to indicate.



If your message memory is full, the icon will change to

To read a text message

73. select “Messages” in main menu
74. select “inbox”
75. select one message

To erase a text message

76. select one message
77. select “Erase” in “Option”

To send a text message

78. select “Messages” from main menu
79. select “New Message” to edit the text message.



80. select “Options->Send” to edit the address



81. select “Options->Ok” to send the message.

To send a text message to several addresses

82. When you at send text message’s step 2 ,you can select “Option->Send to many” to send the message to several addresses.



83. select “Select” to select number from contact list.



84. Select “Options->Select One”to select focused address,or Select “Options->Select All”to select all address.The max number you can send in group one time is 10.
85. Select “Options->Send”to send message to selected address,

Ring Tone module is used to manage the rings downloaded via Short Message. It includes functions of playing ring, deleting ring and renaming ring title.

Using Ring Tone

Browse all rings

Browse all the rings downloaded via SM.

To browse all ring downloaded via Short Message

86. Enter menu “Messages”
87. Enter menu “Multimedia Box”



88. Enter menu “Ringtone”



4. Browsing all the rings by “UP” and ”DOWN” keys

Manage rings

To Play, delete and rename rings downloaded via short message.

To play a ring

- 1 Enter menu “Messages”

- 2 Enter menu “Multimedia Box”
- 3 Enter menu “Ringtone”
89. Select a ring by “UP” and ”DOWN” keys
90. Select “Option” softkey.



91. Select “Play” Menu.

To rename the title of a ring

1. Enter menu “Messages”
2. Enter menu “Multimedia Box”
3. Enter menu “Ringtone”
4. Select a ring by “UP” and ”DOWN” keys
5. Select “Option” softkey.
6. Select “Rename” Menu



7. Input the new title in the renaming dialog.
8. Select “Save” softkey.

To delete a ring


1. Enter menu “Messages”
2. Enter menu “Multimedia Box”
3. Enter menu “Ringtone”
4. Select a ring by “UP” and ”DOWN” keys
5. Select “Option” softkey.
6. Select “Delete” Menu



7. Say “Yes” to the confirming dialog.

Message Settings

1. Select menu “Messages”
2. Select menu “Settings”

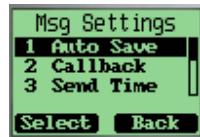

Enable/disable auto save outgoing message

1. Select menu “Auto Save”



2. Select “Auto Save/Do Not Save” to enable/disable atuo save outgoing message.

Set Send Time

If you set Send Time, message will be deferred sent according to the time you set here, but this function need operator’s support.

1. Select menu “Send Time”.




2. Press up and down key to select the defferred time, then press “Select” key.

Set Priority

You can set priority of sent message, and the receiver will know which priority the message is when he read it.

1. Select menu “Priority”.

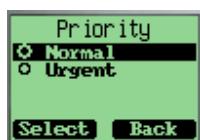

2. Press up and down key to select the Priority, then press “Select” key.

Set Voice Mailbox Number

1. Select menu “Voice Mailbox ”
2. Enter Voice mailbox number, then press “Save” key.



3. When in idle screen, press “1” key for a while, the handset will call the voice mailbox number automatically.

Enable/disable broadcast message service

1. Select menu “Broadcast Service”



2. Select “On/Off” to enable/disable broadcast message service.

Using Voice Mail

Please contact with operator.



Chapter 4 Making Calls

Viewing Incoming Call Details

The detailed information will be displayed on screen, when there is a incoming call.




1. Press **Accept** or  (or 1~9 and #, * if any key in Answer Mode) to accept call.
2. Press **Ignore** to refuse this call.

Making an Emergency Call

To make an emergency call if phone is locked

1. Default emergency call is 911. No more than three emergency numbers can be added in setting menu.
2. When phone is locked, you can input this emergency number and make a call.
(Of course, these emergency numbers begin with '1' or '9').

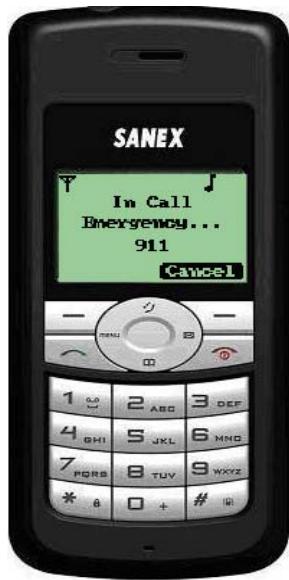

Making Calls

To make a phone call




Call key

92. At idle state, input phone number, then press Call key
93. The Ms enter outing coming call. Now press 'Cancel' to cancel this call, and return Idle state, Or else go to step 3.



3.

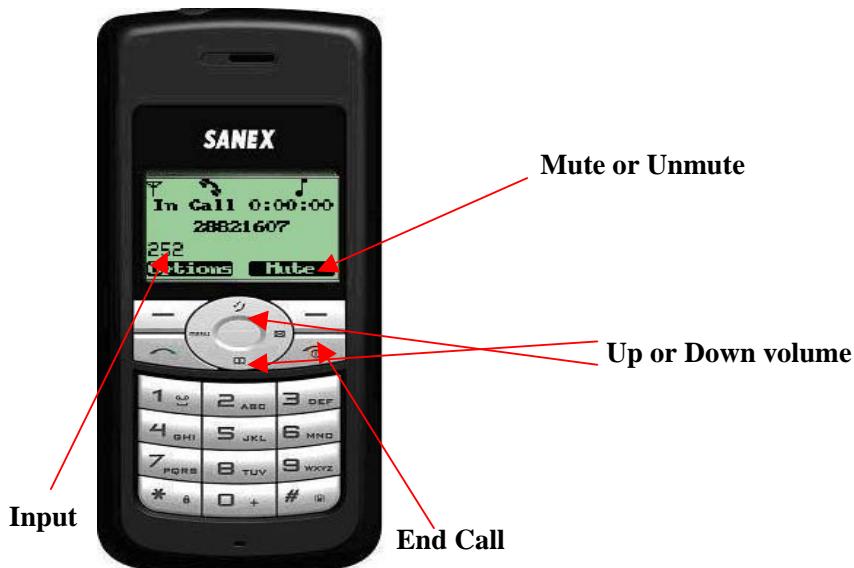

94. Press  to End call.



4. Return Idle state.

To call a number on the contact list

95. At idle state, select “Contact” to enter contact list
96. Choose the person you want to call, press the “Call” key

To call a number on the speed list

1. Two keys dial



97. At idle state, input the short number
98. Press “#”, then the short number will turn into long number
99. Press the “Call” key

2. One key dial

At idle state, press 5~9 key and hold it. If there are relative numbers in speed list, Enter incoming state to make an originated call of this number.

To display and redial the last number called

100. At idle state, press the call key, then the last number called will display
101. Press the call key again to redial.

To use call waiting

102. If a third part call you when you are in a calling process, the phone will alert you, and the new comer's phone number or name will be displayed in screen.

You can press ‘Accept’ to accept incoming call And meanwhile, The picture displays as before.



103. You can use the  key to switch between the 2 persons.

To forward a call (unconditional/no answer/busy)

104. Please contact with your operator

To make a three-way call

105. Please contact with your operator

To make a conference call

106. Please contact with your operator

To mute the phone during a voice call

107. Select "mute" from the soft key bar.

To change the earpiece volume during a call

108. Press "UP" or "DOWN" to change the volume.

Viewing a List of Call Logs

Can view lists that show phone number of the last 30 incoming, outgoing, and missed calls.

To view or edit the incoming, outgoing, or missed calls list



109. Select "Call Log" in main menu



110. Then select one item

111. Select "Detail" in "options" to view detail.

To erase one or all lists of call logs

112. Select "Erase" or "Erase All" in "Options"



113. Press "Yes" or "No" to erase the number you selected.

Chapter 5 Setting Up Your Phone



To personalize your phone, you can select ring tones, volumes, alerts, display, call setup, password, phone information, network service.

Selecting Ring Tones

Can select from more than 9 different ring tones, can set ring tones for calls with or without caller id, restricted calls.

To select a ring tone

114. Select “Settings” in main menu



115. Select “Ringers”



116. Select one, press the “select” soft key to save.



Editing Profile



Changing Call mode

1、Select “Call Prompt Mode” menu item.



2、Select a call mode and select “select” soft key to save.




Changing Message Prompt Mode

1、Select “Message Prompt Mode” menu item.



2、Select a message prompt mode and select “select” soft key to save.

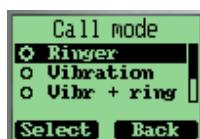


Adjusting the Volume

Change volume of ringer, key beep and speaker.

Changing the Ringer volume

117. Select “Volume” menu item.

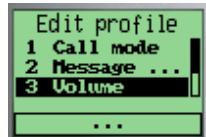

118. Select "Ringer" menu item.




119. Select one level and select "ok" to save.



Changing the Key Beep volume

120. Select "Volume" menu item.

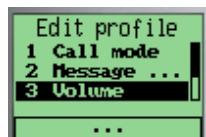

121. Select "Key Beep" menu item.



122. Select one level and select "ok" to save.



Changing the Speaker volume

123. Select "Volume" menu item.



124. Select “Speaker” menu item.



125. Select one level and select “ok” to save.



Changing the Key Tone

126. Select “Key Tone” menu item.



127. Select an option and select “ok” to save.



Setting Up Alerts

You can set alerts for service change, minute beep, call connect on/off.

Minute beep is a beep when your call near to minutes.

Setting alert for Service Change

128. Select “Alerts” menu item.



129. Select “Service Change” menu item.



130. Select "On" to enable service change alert.



Setting alert for Minute Beep

131. Select "Alerts" menu item.



132. Select "Minute Beep" menu item.



133. Select "On" to enable Minute Beep alert.



Setting alert for Call Connect

134. Select "Alerts" menu item.



135. Select "Call Connect" menu item.



136. Select “On” to enable Call Connect alert.




Setting alert for Call End

1 . Select “Alerts” menu item.



2. Select “Call End” menu item.

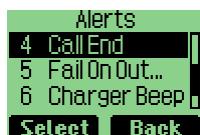


3. Select “On” to enable Call End alert.



Setting alert for Charger Beep


1. Select “Alerts” menu item.

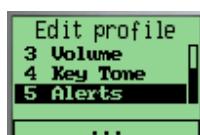

2. Select “Charger Beep” menu item.



2. Select “On” to enable Charger Beep alert.

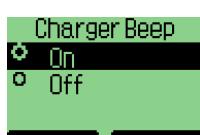

Setting alert for Fail on Outgoing

137. Select “Alerts” menu item.



138. Select “Fail on Outgoing” menu item.



139. Select “On” to enable Fail on Outgoing alert.




Setting alert for Power Tone

140. Select “Alerts” menu item.



141. Select “Power Tone” menu item.

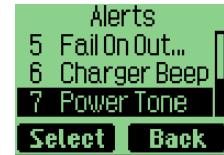

142. Select “On” to enable Power Tone alert.



Setting up the Display

Customizing your display by creating a banner, adjusting the backlight, selecting the language for display text, etc.

Creating a display banner

143. Select “Display” menu item.



144. Select “Banner” menu item.



145. Editing the banner



146. Select “OK” to save banner.

Setting backlight

Setting the timer for the backlight.

147. Select “Display” menu item.



148. Select “Backlight” menu item.



149. Select an option.



150. Select “OK” to save.

Setting the display language

151. Select “Language” menu item.



152. Select a language and select “Select” to save.



Security


Provide password protection for Reset to Default, Call Restriction.

Login Security

153. Select “Security” menu item.



154. Enter the password, and the default password is “0000”.

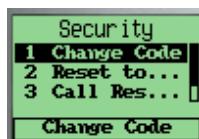

Changing lock code

155. Select “Change code” menu item.



156. Input new password.



157. Confirm password



Reset to default

1. Select “Reset to Default” menu item.
2. Select “Yes” soft key to reset to default.



Security – Call Restriction


Call restriction provide methods for the user to restrict the operations of originating outgoing calls, accepting incoming calls or viewing phone book.



Login call restriction menu


Input call restriction password. The default password is “0000”.The max length of the password is 4.



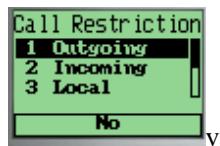

Restricting all outgoing call

1. Select “Outgoing”.

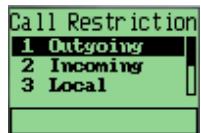

2. Select “Yes” or “No”.




3. If “Yes” is selected, you will need to input the call restriction password when you try to originate a voice call and only when the password is verified to be correct, the call can really be originated.

Restricting all incoming call

1. Select “Incoming”.




2. Select “Yes” or “No”.

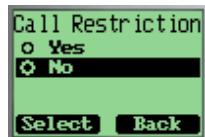


3. If “Yes” is selected, you will be requested to input the call restriction password first when you try to accept an incoming call.

Restricting outgoing local call

1. Select “Local”.

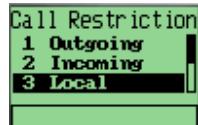


2. Select “Yes” or “No”.

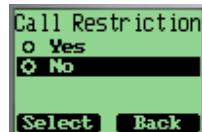


3. If “Yes” is selected, you will be requested to input the call restriction password first when you try to originate an outgoing local call.

Restricting outgoing long distance call

1. Select “Long Distance”.

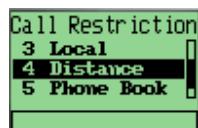


2. Select “Yes” or “No”.

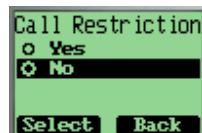


3. If “Yes” is selected, you will be requested to input the call restriction password first when you try to originate an outgoing long distance call.

Restricting phone book

1. Select “Phone Book”.

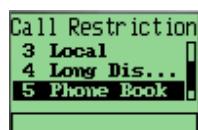

2. Select “Yes” or “No”.

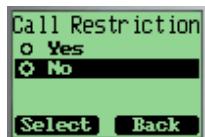

3. If "Yes" is selected, you will be requested to input the call restriction password every time you want to access the "Contact" menu or save a number to phone book from idle ,call log or short message menu options. And you will also be requested to input the password when you originate a call which the calling number exists in the phone book.

Changing call restriction password



1. Input the new password



2. To input the password once more to confirm the new password.



Call Setup


Auto answer enables to inform of caller with default voice when the callee is not nearby. Voice priority is used to encrypt the voice data.

Setting up auto answer

158. Select "Call Setup" menu item



159. Select “Auto Answer” menu item

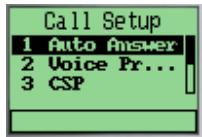

160.

S

elect “Off” or “After 3 seconds”, and then select “OK” to save.



Setting up Voice Privacy

161. Select “Call Setup” menu item



162. Select “Voice Privacy” menu item



163.

S

elect an option , and then select “OK” to save.



Viewing Phone Information

To view the version of hardware installed on your phone

164. Select “Settings” in main menu



165. Select “Phone Info” menu item.



3. Select “HW Version”.



To view the version of software installed on your phone

1. Select “Settings” in main menu



2. Select “Phone info”



3. Select “S/W version”



To view the version of PRL

1. Select “Settings” in main menu



2. Select “Phone info”



3. Select “PRL version”



Enable Key guard

Enable user to lock the keypad during phone's idle status.

166. Select “Keyguard” menu item.



4. Select “Off” to disable key guard. Or select “Customize” to enable key guard.



Network Service

Enable user to set call diverting and call forwarding.

Turning call diverting on/off

167. Select “Network Service” menu item.



5. Select “Diverting Call” menu item.



3. Select an option and then select “ok” to enable the function.



Turning call waiting on/off

168. Select “Network Service” menu item.



169. Select “Call Waiting” menu item.



3. Select an option and then select “ok” to enable/disable the function.



vCard Receiving Prompt

Giving prompt when receiving a vCard.

170. Select “vCard” menu item.



171. “On Phonebook” means not giving the prompt when receiving a vCard, and save it to phonebook directly.



Chapter 6 Using the Phone Tools

Phone tools menu includes schedule, alarm clock, calculator, tip calculator, stop watch.



Using the Schedule

You can use schedule to associate an alert with an event.

To add a schedule


172. select “Tools” from main menu



173. select “Schedule”



174. select “add new”

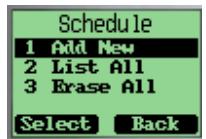

175. edit the date, then press “OK” to save.



176. add the description, then press “Ok”



177. set the time, then press Ok




To delete the schedule

178. select “Tools” in main menu



179. select “Schedule”

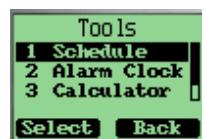

180. select “List All”



181. select the item you want to
delete

182. select “Erase” in options

Using the Alarm Clock

To set the alarm time

183. select “Tools” in main menu



184. select “Alarm Clock”



185. select “set” in Option



186. set alarm time, then press

Done



To turn off the alarm

187. select “Tools” in main menu



188. select “Alarm Clock”



189. select “Disable” in Option



Using the Calculator

Calculate


1. select “Tools” in main menu



2. select “Calculator”.




3. Enter the number.

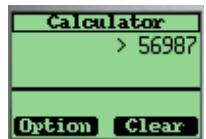

4. Select option to select an operator.



5. Enter another number.

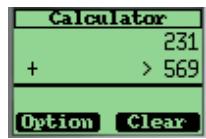

6. select “=” operator to get the result.




Using the Tip Calculator

To calculate a tip


1. select “Tools” in main menu




2. select “Tip Calculator”, and enter bill amount.

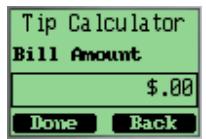

3. select the rate

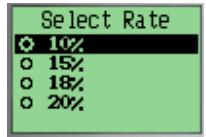

190. press left soft key ,and get the result.

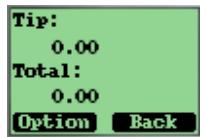

5. select “Option” soft key.



6. select “Split” option to split the payment.

Using the Stop Watch

Stop Watch

1. Select “Tools ” in main menu
2. Select “ Stop Watch ”
3. Press left key to start timing and press left key to stop timing

Warning:

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This mobile device meets guidelines for exposure to radio waves. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF exposure warning:

The equipment complies with FCC RF exposure limits set forth for an uncontrolled environment. The equipment must not be co-located or operating in conjunction with any other antenna or transmitter.

For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of 1.5cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

- SAR Value: 0.189mW/g.