

RF Remote control user manual

FCC NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The label must not be a stick-on paper. The label on these products must be permanently affixed to the product and readily visible at the time of Purchase and must last the expected lifetime of the equipment not be readily detachable.

1. Press the left key on remote control to execute a “on” command meanwhile the LED indicator will light up.
2. Press the right key on remote control to execute a “off ” command meanwhile the LED indicator will light up.

Replace battery:

1. Open the back cover of remote control with screwdriver, take out the used battery.
2. Install the new battery, make sure of “+”, “-” position in battery chamber.
3. Close the cover of remote control, tighten it with screws.