

ATTACHMENT E.

- USER'S MANUAL -

HCT CO., LTD

SAN 136-1, AMI-RI, BUBAL-EUP, ICHEON-SI, KYOUNGKI-DO, 467-701, KOREA
TEL:+82 31 639 8517 FAX:+82 31 639 8525 www.hct.co.kr

Contents

Foreword	
Caution	2
Important Safety Instructions.....	3
Precaution	4
Overview	
Viewing the Control Panel	7
Viewing the Connecting Panel.....	8
Viewing the Remote Control.....	10
Button Description	10
Installation	
Table Stand Installation (optional)	12
Wall Mount Installation (optional)	12
Connections	
Connecting the TV Cable	13
Connecting the VCR.....	14
Connecting the DVD.....	15
Connecting the Set Top Box	17
Connecting the PC [D-Sub & DVI]......	18
Displayable TV Specification	19
Channel Control	
Basic Operation.....	20
OSD Menu Structurenls	21
Tuning Band	22
Auto Ch Search	22
Channel Edit.....	23
Menu Language.....	24
DTV Signal	24
Picture Control	
Contrast/Brightness/Sharpness/Color/Tint	25
Backlight.....	27
Aspect Ratio	27
Screen Aspect Description	28
Others Control	
Audio Language	29
Bass/Treble/Balance	30
Digital Audio Output.....	30
Time Setting	
Time Set	31
Time Set Menu	31
Sleep Timer	31
Advanced Video Menu	32
Password Set	33
Parental Control.....	34
Parental Control Menu US.....	34
Parental Control Menu Canadian	35
Advanced Rating (TBD).	35
Close Caption Options.....	36
PC Set	37
PC Setting Menu	37
Auto Adjust.....	38
Troubleshooting	
Troubleshooting	39
Specification	
Specification-17.1 Inch LCD	40

Caution

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK), NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION

- TO PREVENT DAMAGE WHICH MAY RESULT IN FIRE OR SHOCK HAZARD.
- DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.
- SHOCK HAZARD DO NOT OPEN.

CAUTION

These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

CAUTION

The stand intended for use only with this TV. Use with other apparatus is capable of resulting in instability causing possible injury.

WARNING

- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- This is Class B product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.
- To reduce the risk of fire and electric shock, do not expose this product to rain or moisture.

FCC NOTICE

This device has been tested and found to comply with the limits for a Class B device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a home environment as well as in a commercial, industrial or business environment. This equipment can generate, use and radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Connecting of peripherals requires the use of grounded shielded signal cables.

Always be careful when using your TV. To reduce the risk of fire, electrical shock, and other injuries, keep these safety precautions in mind when installing, using, and maintaining your machine.

- Read all safety and operating instructions before operating your TV.
- Keep the safety and operating instructions for future reference.
- Heed all warnings on the TV and in the operating instructions.

Important Safety Instructions

Always be careful when using your the TV. To reduce the risk of fire, electrical shock, and other injuries, keep these safety precautions in mind when installing, using, and maintaining your machine.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a damp cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that a produce heat.
9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use the attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. When installing the LCD TV, do not block the appliance coupler with any structure.
User can easily have access to the coupler to disconnect it from AC main power.

Precaution

In case of the following cases, unplug the unit from the wall outlet and contact qualified service center.

- When power supply cord or plug is damaged.
- If liquid has been spilled on the unit or if alien objects have fallen into the unit.
- If the TV has been exposed to rain or water.
- If the TV does not operate normally by following the operating instructions.
- If the TV dropped or the cabinet has been damaged.
- When the TV exhibits a distinct change in performance.

Setting

CAUTION

- Follow all operating and use instructions.
- Do not use the TV where contact with or immersion in water is a possibility, such as near bath tubs, sinks, washing machines, swimming pools, etc.
- Avoid overhead power lines. An outside antenna

system should not be placed in the vicinity of overhead power lines or other electric light or power circuits or where it can fall into such power lines or circuits. When installing an outside antenna system, be extremely careful to keep from touching the power lines or circuits. Contact with such lines can be fatal.

Ground outdoor antennas. If an outside antenna or cable system is connected to the TV, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No.70-1984, provides information about proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

- Bend antenna cable between inside and outside building to prevent rain from flowing in.
 - This may cause water damaged inside the TV and could give an electric shock.
- Do not place an outside antenna in the vicinity of overhead power lines, or other electric light or power circuits.

- This may cause an electric shock.
- There should be enough distance between an outside antenna and power lines to keep the former from touching the latter even when the antenna falls.
 - This may cause an electric shock.

Setting

WARNING

- When installing the TV on a table, be careful not to place the edge of its stand.
 - This may cause the TV to fall, causing serious injury to a child or adult, and serious damage to the TV.
- Provide ventilation for the TV. The unit is designed with slots in the cabinet for ventilation to protect it from overheating. Do not block these openings with any object, and do not place the TV on a

- bed, sofa, rug or other similar surface. Do not place it near a radiator or heat register. If you place the TV on a rack or bookcase, ensure that there is adequate ventilation and that you've followed the manufacturer's instructions for mounting.
- This TV is designed to be mounted horizontally (wide viewing). Any inquiry regarding its vertical position should be forwarded to the manufacturer directly.

Precaution

Power

CAUTION

- ▶ Use only the accessory cord designed for this product to prevent shock. The power supply voltage rating of this product is AC100-240V, the power cord attached conforms to the following power supply voltage. Use only the power cord designated by our dealer to ensure Safety and EMC. When it is used by other power supply voltage, power cable must be changed. Consult your product dealer.
- ▶ Unplug the TV from the wall outlet before cleaning. Use a damp cloth; do not use liquid or aerosol cleaners.
- ▶ Unplug the TV from the wall outlet and disconnect the antenna or cable system during a lightning storm or when left unattended and unused for long periods of time. This will prevent damage to the unit due to lightning and power-line surges.
- ▶ Protect the power cord. Power supply cords should be routed so that they won't be walked on or pinched by objects placed on or against them.

Pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the unit.

- ▶ Do not touch the plug with wet hand.
- It can make an electric shock.
- ▶ Use only a grounded or polarized outlet. For your safety, this TV is equipped with a polarized alternating current line plug having one blade wider than the other. This plug will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still does not fit, contact your electrician to replace your outlet.
- ▶ Protect the power cord. Power supply cords should be routed so that they won't be walked on or pinched by objects placed on or against them. Pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the unit.

Operation

CAUTION

- ▶ Upon completion of any service or repairs to this the TV, ask the service technician to perform safety checks to determine that the TV is in a safe operating condition.
- ▶ Do not place anything containing liquid on top of the TV.
- This may cause a fire or could give an electric shock.
- ▶ Never add any attachments and/or equipment without approval of the manufacturer. Such additions can increase the risk of fire, electric

shock, or other personal injury.

- ▶ In case of smoke or strange smell from the TV, switch it off, unplug it from the wall outlet and contact your dealer or service center.
- This may cause a fire or could give an electric shock.
- ▶ Do not insert anything through the openings in the unit, where they can touch dangerous voltage points or damage parts. Never spill liquid of any kind on the TV.

Operation

WARNING

- ▶ When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in additional damage to the unit.

- ▶ If you make adjustments yourself, adjust only those controls that are covered by the operating instructions. Adjusting other controls may result in damage and will often require extensive work by a qualified technician to restore the TV to normal.

- ▶ Do not let children hang on or ride on the TV.



Precaution

Operation


- ▶ Do not use new battery with old one.
 - This can lead a fire or electric shock caused by leakage liquid from abused batteries.
- ▶ Put the batteries in right direction (+/-).
 - Otherwise, it can make a fire, injury and pollution caused by bursting of batteries.
- ▶ Only use the specified batteries.
 - This may cause damage to the TV or could give an electric shock.
- ▶ More than two people are necessary to move or take off the package due to the product's weightiness.
 - Otherwise, it can cause personal injury.

⚠ WARNING

- ▶ Keep the batteries out of reach of children when exchanged.
 - Seek urgent medical advice if child swallows a battery.
- ▶ When moving the TV assembled with speakers do not carry holding the speakers.
 - This may cause the TV to fall, causing serious injury to a child or adult, and serious damage to the TV.
- ▶ The distance between eyes and the screen should be about 5-7 times as long as diagonal length of the screen.
 - If not, eyes will strain.

Viewing the Control Panel

OSD Button Position

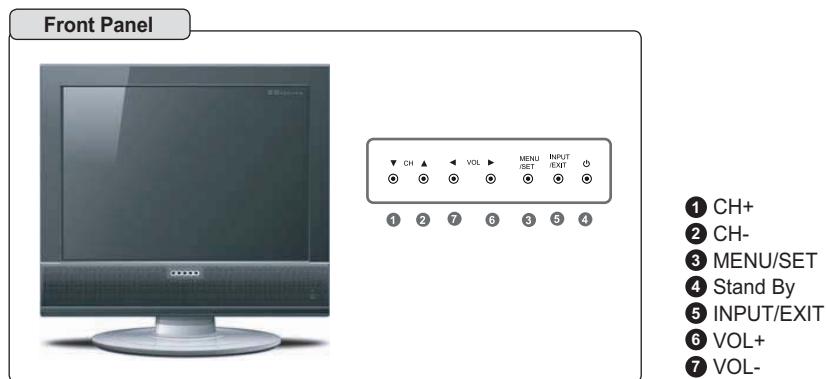

OSD Button Function

① INPUT SELECT/EXIT

Select the signal source from multiple input sources such as TV, AV Input, S-Video, PC and HDMI.

To change the VOLUME, press first and change the volume with buttons.

② VOL/CH

To change the CHANNEL, press first and change the channel with buttons.

③ Stand By ON/OFF

Turn the TV on and off.

④ Menu/SET

Call the OSD Menu.

 
Accessories



Remote Control Handset



Power Cord




Alkaline Batteries



Owner's Manual

Viewing the Connecting Panel

Back Panels and Jacks

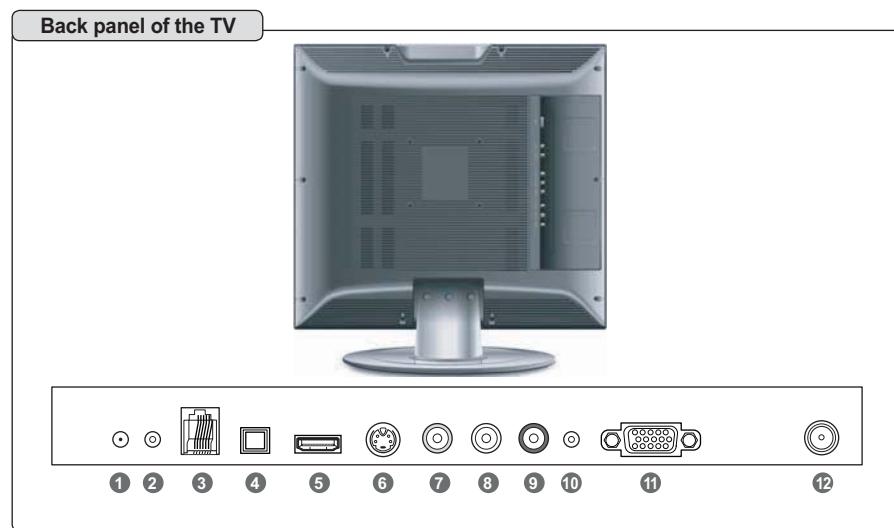


- ① DC IN
- ② RS-232C (Stereo Jack)
- ③ T-PORT (MTI Port)
- ④ SPDIF
- ⑤ HDMI

- ⑥ S-VIDEO
- ⑦ AV-INPUT
- ⑧ PC SOUND
- ⑨ PC INPUT
- ⑩ TV ANT.

Viewing the Remote Control

■ Button Description

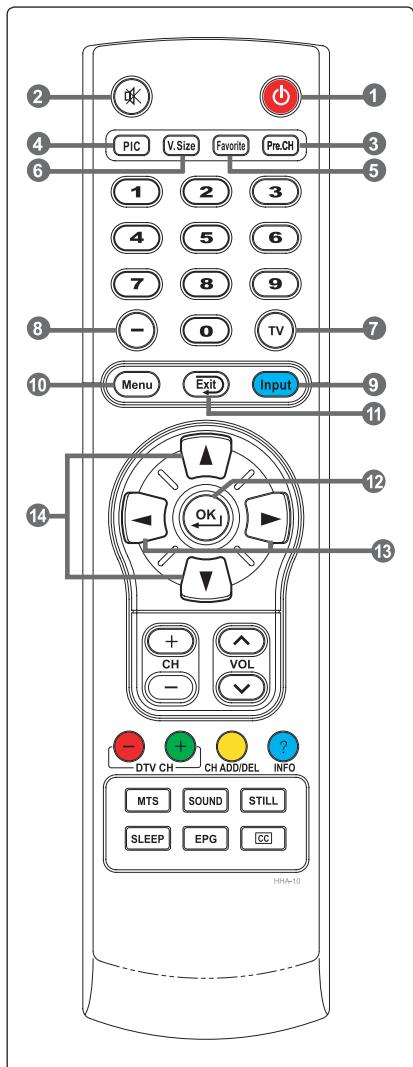

- ① **Stand By**
Turn the TV on and off.
- ② **Mute**
Temporarily cut the sound and restore it.
- ③ **Pre PG**
Turn to the previous programme or exit OSD.
- ④ **PIC**
Color temp mode.
Normal → Warm → Cool
- ⑤ **FAVORITE (FAVOURITE)**
Tune to favorite channel.
- ⑥ **V.Size**
Choose the screen form.
Normal → Zoom → Wide → Cinema
- ⑦ **TV**
Move to Tuner input source.
- ⑧ —
Dash bar for Digital numberic tune.
- ⑨ **INPUT**
Select the input source.
Tuner → Composite → PC → HDMI → S-Video
- ⑩ **Menu**
Display the main OSD menu.
- ⑪ **Exit**
Exit to current OSD menu.
- ⑫ **OK**
Active choice.
- ⑬ ⑭ **Move**
Move to direction Up / Down / Left / Right.

Viewing the Connection Panel



 
DC-IN Cable



RS-232C (Stereo Jack) Cable




T-PORT (MTI Port) Cable



SPDIF Cable



 
HDMI Cable




S-VIDEO Cable



 
AV-INPUT Cable



PC SOUND Cable

 

PC INPUT Cable

 

RF Cable


Connectors	
AUDIO INPUT	RCA Pin Jack
COMPOSITE VIDEO INPUT	RCA Pin Jack
COMPOSITE VIDEO OUTPUT	RCA Pin Jack
S-VIDEO INPUT	Mini Din 4 Pin
COMPONENT VIDEO INPUT	RCA Pin Jack
ANALOG RGB INPUT	Mini D-Sub 15pin
HDMI INPUT	HDMI Connect
DIGITAL VIDEO INPUT	DVI-D 24 pin

• Cables connecting the PC vary according to the type of machine, so consult your product dealer.

RS-232C Configurations 3-Wire (Non-standard)

	PC	TV	
RXD	2	3	TXD
TXD	3	2	RXD
GND	5	5	GND
DTR	4	4	DTR
DSR	6	6	DSR
RTS	7	7	RTS
CTS	8	8	CTS

Viewing the Remote Control

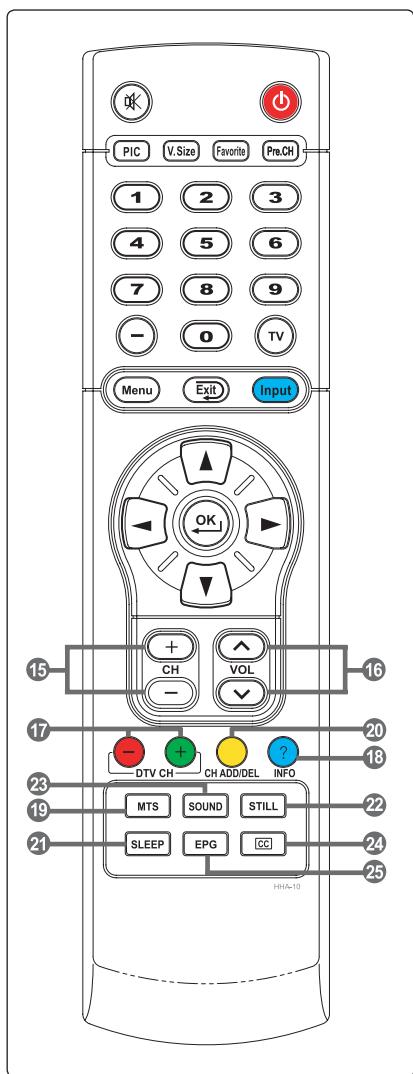

Notice

- EPG Button of remote control is activate on DTV Mode.
- EPG showing the program information table from Current time.




Viewing the Remote Control

Table Stand Installation (optional)

Wall Mount Installation (optional)


Connecting the TV Cable

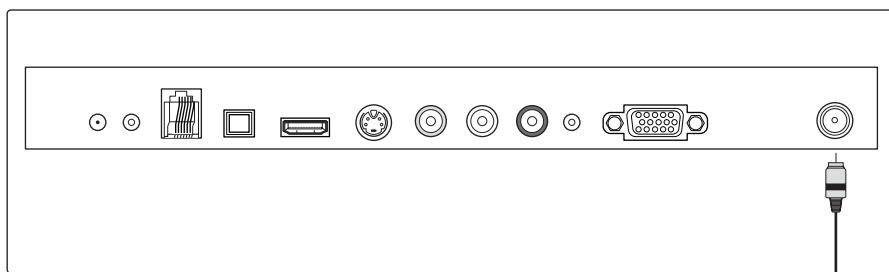

Connection the TV Cable

- 1 Connect the TV Antenna cable to the TV input jack. Press INPUT button on the remote control and select TV or HDTV on OSD.
- 2 Use CH+, CH- button or numeric button to change TV program for your program selection.
- 3 Press Pre.CH button on the remote control to tune the previous program.
- 4 Also, you can tune to cable service provided programs using the cable box.
For further information regarding cable TV service, contact cable TV service provider(s).

Connecting the VCR

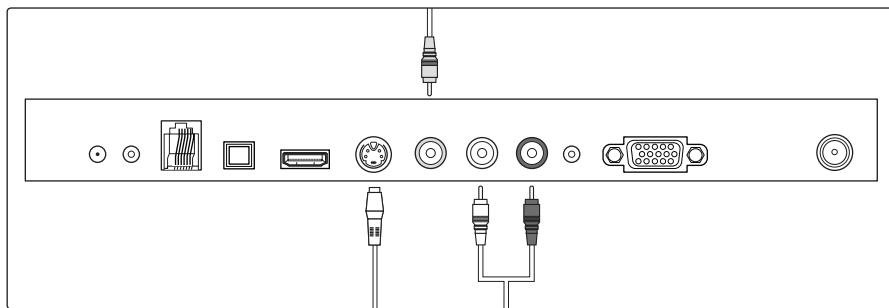

Connecting the VCR

With S-VIDEO

Connect a S-Video cable to the S-Video jacks of the VCR and the TV.
Connect L (White), R (Red) sound cable (Composite) to the sound jacks of the VCR and the TV.

With AV Input

Connect a composite cable to the AV video jacks of the VCR and the TV.
Connect L (White), R (Red) sound cable (Composite) to the sound jacks of the VCR and the TV.


Watching VCR

- 1 Press INPUT button on the remote control and select video sources.
- 2 Insert a video tape into the VCR and press the PLAY button on the VCR.

Notes

- **To avoid picture noise** (interference), leave an adequate distance (over 3m) between the VCR and monitor.
- When connecting the TV with external equipments, match the colour of connecting ports (e.g. Video - yellow, Audio (L) - white, Audio (R) - red).
- If you have a mono VCR, connect the audio cable from the VCR to the AUDIO (L/MONO) input of the TV.
- If you connect an S-VHS VCR to the S-VIDEO input socket, you can get a better picture quality than normal video input (AV).
- **Avoid having a fixed image remain on the screen for a long period of time.**
Typically a frozen still picture from a VCR 4:3 picture format or if a programme information is present.

Connecting the DVD

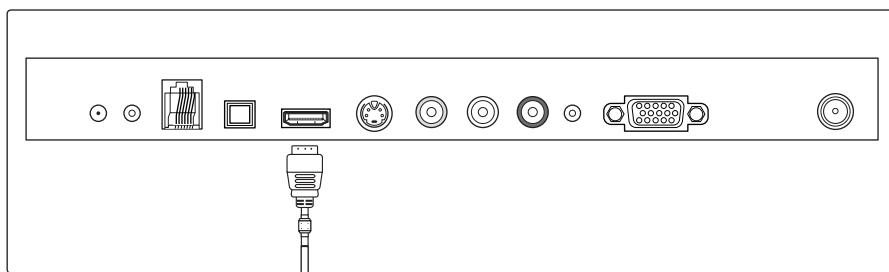

Connecting the DVD

- 1 Connect the three separate component video cables to the DVD player's DVBS jacks and to the component jacks on the TV.
- 2 Connect the audio cable to the DVD player's audio L (White) and R (Red) jacks and to the L and R audio jacks beside the component jacks on the TV.
- 3 Connect the HDMI cables to the DVD player's and to the HDMI cables on the TV.

How to Use

- 1 Turn on the DVD player.
- 2 Press INPUT button on the remote control of the TV and select HDMI, Composite.

	Supported Signals			
	Composite	S-Video	PC	HDMI
480i / 60Hz	○	○	✗	✗
480p / 60Hz	○	○	○	○
576i / 50Hz	○	○	✗	✗
576p / 50Hz	○	○	○	○
720p / 50Hz	○	○	○	○
720p / 60Hz	○	○	○	○
1080i / 50Hz	○	○	○	○
1080i / 60Hz	○	○	○	○

Notice

- Normal DVD source is based on 480i, which should be through normal composite signal.

Connecting the DVD

What is HDMI?




HDMI, or high-definition multimedia interface, is a next-generation interface that enables the transmission of digital audio and video signals using a single cable without compression.

- "Multimedia interface" is a more accurate name for it especially because it allows multiple channels of digital audio (5.1 channels). The difference between HDMI and DVI is that the HDMI device is smaller in size, has the HDCP (High Bandwidth Digital Copy Protection) coding feature installed, and supports multi - channel digital audio.
- Use the HDMI/DVI terminal for DVI connection to an extended device. You should use the DVI-to-HDMI cable or DVI-HDMI Adapter for the connection.
- HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Connecting HDMI/DVI

- Supports connections between HDMI-connection-enabled AV devices (set top boxes, DVD players, AV receivers and digital TVs).
- No sound connection is needed for an HDMI to HDMI connection.

Connecting the Set Top Box

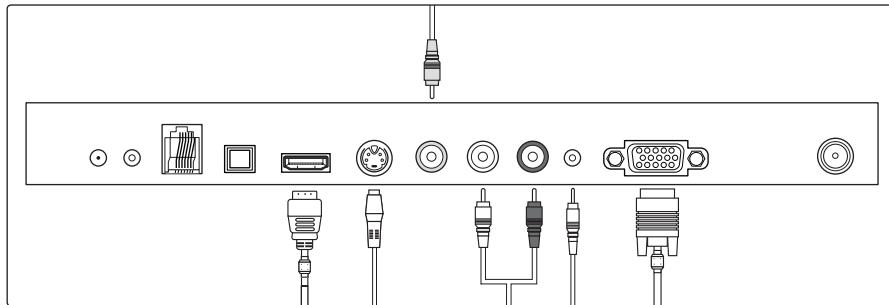

How to connect

Connect set top box video inputs to AV, HDMI, PC or DVI jacks on the TV.

Audio inputs to Audio sockets beside the L (White) and R (Red) audio jacks which you connect video inputs.

With AV

Connect a AV cable to the AV jacks of the STB (set top box) and the TV.

With Composite

Connect a three separate composite cables to the composite jacks of the STB and the TV.

Connect L (White) and R (Red) sound cables (Composite) to the sound jacks of the STB and the TV.

With HDMI

Connect a HDMI cable to the HDMI jacks of the STB and the TV.

With RGB

Connect a D-Sub cable to the AV video jacks of the STB and the TV.


Connect L (White) and R (Red) sound cables (Composite) to the sound jacks of the STB and the TV.

How to Use

- 1 Turn on the set top box.
- 2 Press INPUT button on the remote control of the TV and select Composite, HDMI, PC.

	Supported Signals			
	Composite	S-Video	PC	HDMI
480i / 60Hz	O	O	X	X
480p / 60Hz	O	O	O	O
576i / 50Hz	O	O	X	X
576p / 50Hz	O	O	O	O
720p / 50Hz	O	O	O	O
720p / 60Hz	O	O	O	O
1080i / 50Hz	O	O	O	O
1080i / 60Hz	O	O	O	O

Connecting the PC (D-Sub & DVI)

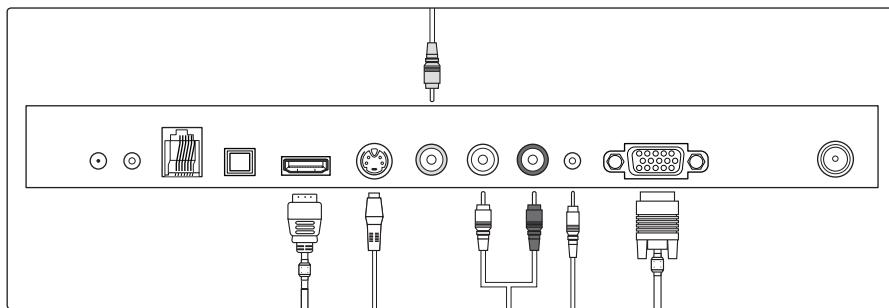


Connecting a PC to the TV

Connect a PC (15pin) video cable between the video output port on the PC and the PC port on the TV.

Pin Configuration

 15pin signal cable (based on protruded pin).



To watch the PC screen

- 1 Turn on the TV and press INPUT button to select the PC mode.
- 2 Turn on the PC and check for the PC requirements.
- 3 Adjust the PC screen in Geometry menu.
(See 38 page.)

Pin No.	Description
1	Red (R)
2	Green (G)
3	Blue (B)
4	Grounding
5	Grounding (DDC)
6	Red (R) Grounding
7	Green (G) Grounding
8	Blue (B) Grounding
9	Reserved
10	Sync Grounding
11	Grounding
12	Data (DDC)
13	Horizontal sync.
14	Vertical sync.
15	Clock (DDC)

Displayable TV Specification

Resolution	Horizontal Frequency (KHz)	Vertical Frequency (Hz)
640 x 350	31.468	70.09
	37.861	85.08
640 x 400	31.469	70.08
	37.927	85.03
640 x 480	31.469	59.94
	35.000	66.66
	37.861	72.80
	37.500	75.00
	43.269	85.00
	45.913	90.03
	53.011	100.04
	64.062	120.00
	35.156	56.25
800 x 600	37.879	60.31
	48.077	72.18
	46.875	75.00
	53.674	85.06
	56.000	90.00
	64.016	100.00
	49.725	74.55
852 x 480	31.468	60.05
1024 x 768	48.363	60.00
	56.476	70.06
	60.023	75.02
1280 x 1024	-	-
1366 x 768	-	-

Notes

- **Synchronization input form : separate**
- The TV recognizes 640 x 480 @ 60Hz signal as 480p DTV signal.
So the signal is expanded, please try other signals like 640 x 480 @ 75Hz
- The TV operates abnormally if a non-standard video format is selected.
- **852 x 480 : 42" Native Resolution** Horizontal Polarity is Positive (+) Vertical Polarity is Negative (-).
- **1366 x 768 : 50/55/63" Native Resolution** Horizontal Polarity is Positive (+) Vertical Polarity is Negative (-).
- **Depending on the manufacturer, your PC screen might** appear differently (and depending on your particular version of Windows).
Check your PC instruction book for information about connecting your PC to a the TV.
- The TV may operate abnormally if a non-standard video signal.
- **“Out of Range”** message box will appear when an over-spec video signal is input.
Change the video settings of PC when the message is displayed.

Basic Operation

Turning the TV On/Off

Press the Power button on the remote control. The TV will turn on and you will be ready to use its features. You can also use the Power button on the front panel.

Select Source

Press INPUT button on the remote control. Then you can see the current source menu shown as below.



TV Program Selection

- 1 Connect the signal source (TV antenna) to TV input. Press INPUT button on the remote control and select TV on the source.
- 2 Use CH+, CH- button or numeric button to change TV programme you want.
- 3 Press Pre.CH button on the remote control to watch the previous programme.
- 4 Also, you can tune the cable service, provided programmes while using the cable box.
For further information regarding cable TV service, contact your TV service provider(s).

Volume Control

Use VOL \wedge /VOL \vee button on the remote control to adjust the volume level.
Press MUTE button on the remote control when you need to cut the sound temporarily.

OSD Menu Structure

- OSD (On Screen Display) allows users to control or adjust various features and settings in accordance with his/her preferences.
- Press the Menu button on the remote control to see the main OSD menu.

Example of OSD Menu



1 Main Menu

Press Menu button on the remote control to enter the main OSD menu.

First, select Main menu item you need with $\left[\begin{smallmatrix} \uparrow \\ \downarrow \end{smallmatrix}\right]$ & $\left[\begin{smallmatrix} \leftarrow \\ \rightarrow \end{smallmatrix}\right]$ button.

To select a main menu items, just press $\left[\begin{smallmatrix} \text{OK} \\ \text{OK} \end{smallmatrix}\right]$ or $\left[\begin{smallmatrix} \text{OK} \\ \text{OK} \end{smallmatrix}\right]$ button on the Remote Control.

2 Sub Menu

Each menu item has its own sub menu items to set.

3 Sub Menu items

A : If there is a empty space part, the item has an sub menu.

You can enter the under menu and adjust an item you need.

Select sub-menu item with $\left[\begin{smallmatrix} \uparrow \\ \downarrow \end{smallmatrix}\right]$ buttons on the remote control and press OK button to enter the submenu.

B : If there is a item part, you can set the item by selecting $\left[\begin{smallmatrix} \leftarrow \\ \rightarrow \end{smallmatrix}\right]$ buttons.

Press OK button to set.

Setup

Tuning Band


Before your television can begin memorizing the available channels, you must specify the type of signal source that is connected to the TV. (i.e., an antenna, a standard cable system)

- 1 Press Menu button on the remote control to display the main OSD menu.
- 2 Select The Setup main menu with **OK** button on the remote control.
- 3 Press **OK** to enter the sub menu.
- 4 Select **Tuning Band** menu.
- 5 Select the **Band** by press OK button and press Exit or Menu button. You can select Air or CABLE.




Auto Ch Search

- 1 Press Menu button to display the main OSD menu.
- 2 Select The Setup menu with **OK** button on the remote control.
- 3 Press **OK** to enter the sub menu.
- 4 Select **Auto Ch Search**. Press OK Button on the remote control. Then the tuning bar will appear and scanning will start.

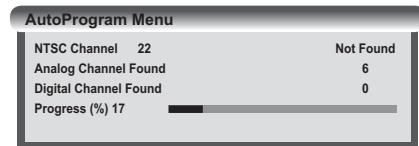

(ATV Scan)

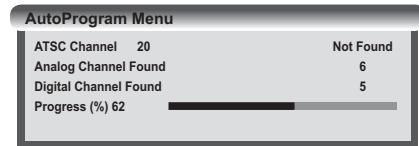

(DTV Scan)

Notes

- Auto Ch Search scan first analog channel after then digital channel.
- Add On Ch Search scan new channel except pre-scan channel.

Setup

Channel Edit

You can add, erase or store of your favorite channels for each available input Band. Then, when you press the Favorite button on the remote control.


- 1 Press Menu button on the remote control to display the main OSD menu.
- 2 Select the Setup main menu with   button on the remote control.
- 3 Press   button to enter the sub menu.
- 4 Select **Channel Edit** menu.
- 5 Select the Viewable/Not Viewable/Favorite with OK button and press Exit button. You Can select Viewable, Not Viewable or Favorite.



You can Viewable, Not viewable or Favorite the current channel by the remote control.

CH ADD/DEL

The current channel into the scanned channel list.

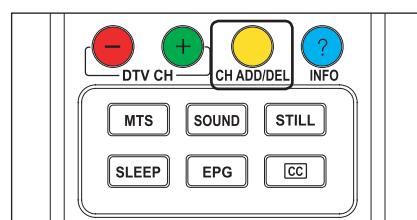

Channel Edit Menu

Ch 6-1	SBS	Viewable
Ch 7-1	KBS D-2	Viewable
Ch 9-1	KBS D-1	Favorite
Ch 10-1	EBS	Viewable
Ch 11-1	MBC	Viewable
Ch 2-0		Not Viewable
Ch 6-0		Viewable
Ch 7-0		Viewable
Ch 9-0		Viewable
Ch 11-0		Viewable
Ch 13-0		Viewable

Notes

- Only scanned channels can be stored as Favorite programmes.

Setup

Menu Language

You can select of your favorite language for display OSD menu.


- 1 Press Menu button on the remote control to display the main OSD menu.
- 2 Select the Setup main menu with **OK** button on the remote control.
- 3 Press **OK** button to enter the sub menu.
- 4 Select **Menu Language** menu.
- 5 Select the English/Spanish/French with **OK** button and press **Exit** button.



DTV Signal

You can see digital signal level of current channel.

- 1 Press Menu button on the remote control to display the main OSD menu.
- 2 Select the Setup main menu with **OK** button on the remote control.
- 3 Press **OK** button to enter the sub menu.
- 4 Select **DTV Signal** menu.
- 5 To see signal level, press **OK** button.

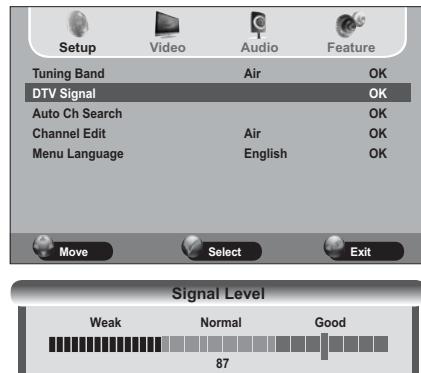

Notes

- DTV Signal level activate on DTV.

 
 
 
 
 
Video

You can change the Contrast, Brightness, Color, Sharpness , and Tint according to personal preference in USER mode.

Contrast / Brightness / Sharpness / Color / Tint

- 1 Press Menu button on the remote control to display the main OSD menu.
- 2 Select the Video main menu with  button on the remote control.
- 3 Press  button to enter the sub menu.
- 4 Select Contrast/Brightness/Sharpness/ Color/Tint menu with  button on the remote control.
- 5 Into the adjust, press OK button and then set wit  button on the remote control.
- 6 To cancel all adjust, select press Preset button.

For a more detailed description of these settings, see the next page.



Notes

- In adjust you can move directly each adjust menu with press  button.

Video

■ Contrast

Adjust brightness difference between bright part of the screen and dark part.



Distinct ◀



▶ Vague

■ Brightness

Adjust brightness of the screen.



Dark ◀



▶ Bright

■ Color

Adjust deep and light color of the screen.



Decrease ◀



▶ Increase

■ Sharpness

Adjust vividness of the screen.



Less sharp ◀



▶ Sharp

■ Tint

Adjusts the balance between green and yellow



Green color is deeper ◀



▶ Red color is deeper

Video

Backlight

You can control the LCD Backlight.

- 1 Press Menu button on the remote control to display the main OSD menu.
- 2 Select the Video main menu with **□ ▶** button on the remote control.
- 3 Press **▲ ▼** button to enter the sub menu.
- 4 Select **Backlight** menu with **▲ ▼** button on the remote control.
- 5 To adjust, press **OK** button.




Aspect Ratio

Your TV has four Screen Formats: **Normal, Zoom, Wide, Cinema**.


(For more detail description for these modes, refer to the next page.)

- 1 Press Menu button on the remote control to display the main OSD menu.
- 2 Select the Video main menu with **□ ▶** button on the remote control.
- 3 Press **▲ ▼** button to enter the sub menu.
- 4 Select **Aspect Ratio** menu with **▲ ▼** button on the remote control.
- 5 To adjust, press **Preset OK** button.

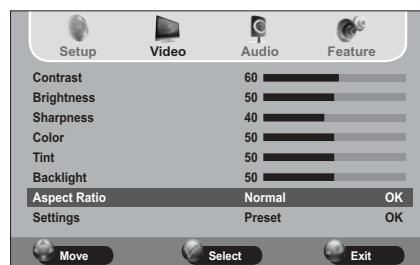

You can change Aspect Ratio by the remote control.

V.Size

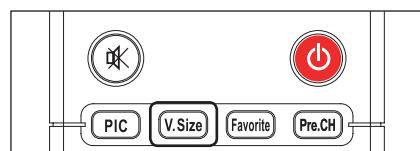


Video

Screen Aspect Description


■ Wide

16:9 video: No change.
4:3 video: Expands 4:3 video signal horizontally to fit the 16 : 9 screen.

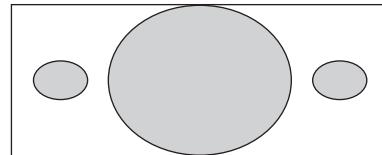


■ Cinema

16:9 video: No change.
4:3 video: Expands 4:3 video horizontally to fit the 16 : 9 screen and to minimize distortion, sides are expanded more than center.

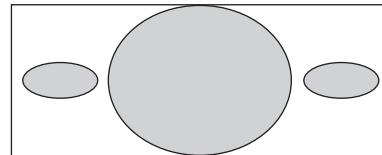


■ Zoom

Expands 16 : 9 mode screen vertically.

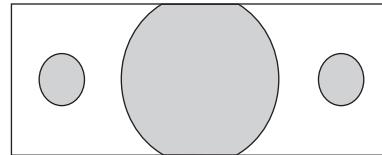

■ Normal

16:9 video: The image is suppressed.
4:3 video: No expansion. There are gray areas besides the image.

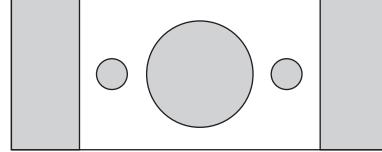

Notes

- Aspect Ratio only active Cinema in DTV.

Audio

In Audio Menu, you can adjust Audio Language, Bass, Contrast, Balance and Digital Audio Output.

Audio Language

Select supported audio language in English/Spanish/Korea/French.


- 1 Press Menu button on the remote control to display the main OSD menu.
- 2 Select the Audio main menu with **◀▶** button on the remote control.
- 3 Press **▲▼** button to enter the sub menu.
- 4 Select **Audio Language** menu with **▲▼** button on the remote control.
- 5 To set English/Spanish/Korea/French, press **OK** button.



You can set MTS by the remote control.

MTS

Showing MTS Language number.

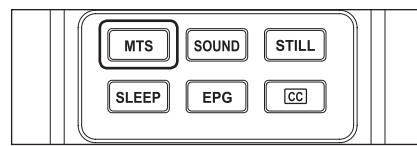

Notes

- Audio Language depend on broadcasting and sometimes can't select on OSD.

Audio


Bass / Treble / Balance

Adjust Audio Bass, Treble and Balance.

- 1 Press Menu button on the remote control to display the main OSD menu.
- 2 Select the Audio main menu with **OK** button on the remote control.
- 3 Press **A** button to enter the sub menu.
- 4 Select **Bass/Treble/Balance** menu with **A** button on the remote control.
- 5 Into adjust Bass/Treble/Balance, press **OK** button and set with **A** on the remote control.
- 6 To cancel all adjust, select settings press **OK** button.

Notes

- In adjust you can move directly each adjust menu with press **A** button.

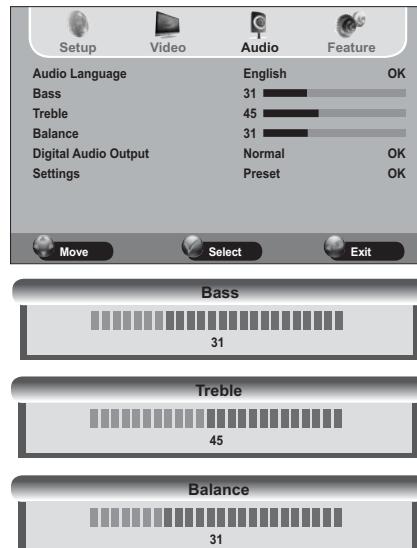

Digital Audio Output

Select Digital Audio Output.

- 1 Press Menu button on the remote control to display the main OSD menu.
- 2 Select the Audio main menu with **OK** button on the remote control.
- 3 Press **A** button to enter the sub menu.
- 4 Select **Digital Audio Output** menu with **A** button on the remote control.
- 5 To Set RAW or AC-3/PCM, press **OK** button on the remote control.

Notes

- PCM (Pulse Coded Modulation) : Digital signal for SPDIF or Coaxial output.
- RAW or AC-3 : Compressed Digital signal for 5.1CH or DOLBY output.



Notes

DOLBY DIGITAL Dolby Trademark Acknowledgement and License Notice :
Manufactures under license from Dolby Laboratories.
"Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

Feature

Time Set


You can Set Time and Time zone in America.

- 1 Press Menu button on the remote control to display the main OSD menu.
- 2 Select the Feature main menu with   button on the remote control.
- 3 Press   button to enter the sub menu.
- 4 Select **Time Set** menu with   button on the remote control.
- 5 To enter Time Set Menu, press **OK** button.



Time Set Menu

- 1 Press   button to enter the sub menu.
- 2 To set Time Set Mode manual or Auto with   or press **OK** button on the remote control.
- 3 To set Time Zone Eastern, Central, Mountain, Pacific, Alaska or Hawaii with   or press **OK** button on the remote control.
- 4 To set Year, Date, Time with   or press **OK** button on the remote control.

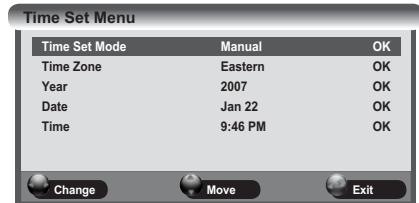

Notes

- To set Year, Date, Time you select in Manual of Time Set Mode.
- In the Auto mode Year, Date, Time set automatically depends on Time Zone.

Sleep Timer

You can set the Sleep timer.


- 1 Press Menu button on the remote control to display the main OSD menu.
- 2 Select the Feature main menu with   button on the remote control.
- 3 Press   button to enter the sub menu.
- 4 Select **Sleep Timer** menu with   button on the remote control.
- 5 To set Sleep Timer Off/30 min./60/90 press **OK** button.



Feature

You can set Sleep Timer by the remote control.


SLEEP
Showing the current set Sleep timer.

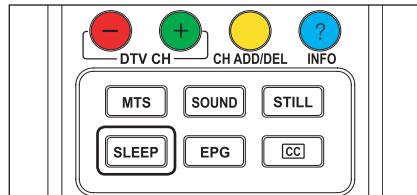

Advanced Video Menu


You can select NR, Color Temperature, Auto Contrast Enhancement, 3D Y/C.

- 1 Press Menu button on the remote control to display the main OSD menu.
- 2 Select the Feature main menu with **□ ▶** button on the remote control.
- 3 Press **▲ ▼** button to enter the sub menu.
- 4 Select Advanced Video Menu with press **OK** button.
- 5 Select **NR/Auto Contrast Enhancement/ Color Temperature/Black Bar Detection/ 3D Y_C/Adaptive Contrast** menu with **▲ ▼** button on the remote control.
- 6 To Set, press **OK** button.
- 7 To cancel all set, select **Settings** and press **Preset** button.

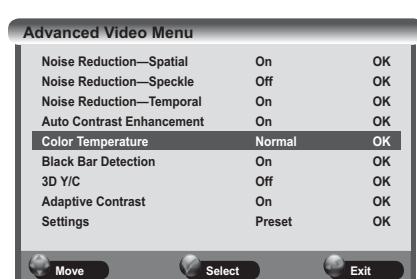

You can change Color Temperature by the remote control.

PIC
Cool : Screen seems warm : Strong Blue
NORMAL : Normal : Factory default.
Warm : Screen seems cool : Strong Red

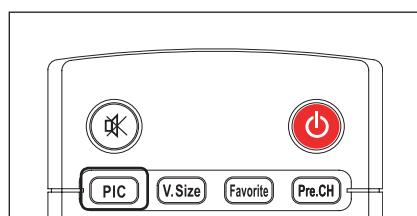


Feature

Password Set

You can change Parental control lock password.

- 1 Press Menu button on the remote control to display the main OSD menu.
- 2 Select the Feature main menu with **OK** button on the remote control.
- 3 Press **A** button to enter the sub menu.
- 4 Select Password Set Menu with press **OK** button.
- 5 Enter Old Password with number button on the remote control.
- 6 Enter New Password with number button on the remote control.
- 7 Enter Confirm New Password with number button on the remote control.

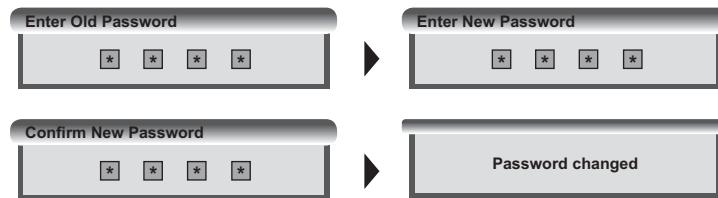

Notes


- The factory default Password is 0000.

Feature

Parental Control


You can Setup restrictions using the "TV Parental Guidelines" of FCC.

- 1 Press Menu button on the remote control to display the main OSD menu.
- 2 Select the Feature main menu with **OK** button on the remote control.
- 3 Press **A/T** button to enter the sub menu.
- 4 Select Parental Control with press **OK** button.
- 5 Enter Password with number button on the remote control.

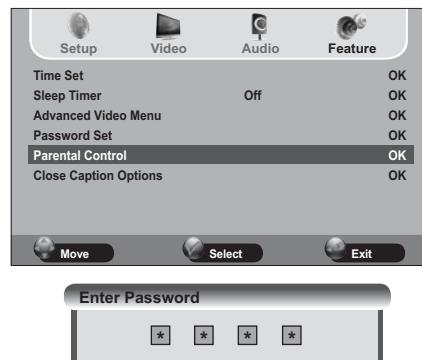

■ Parental Control Menu US


- 1 Press **A/T** button to enter the sub menu.
- 2 Select US Ratings with press **OK** button.
- 3 Select MPAA Ratings with **A/T** button and Lock set press **OK** button on the remote control.
- 4 Move TV Ratings with **OK** button on the remote control.
- 5 Select TV Ratings with **A/T** button and Lock set press **OK** button on the remote control.

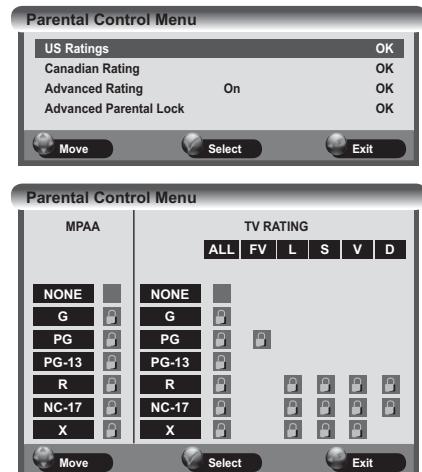

Feature

■ Parental Control Menu Canadian

- 1 Press **OK** button to enter the sub menu.
- 2 Select Canadian Ratings with press **OK** button.
- 3 Select Canadian English with **OK** button and Lock set press **OK** button on the remote control.
- 4 Move Canadian French with **OK** button on the remote control.
- 5 Select Canadian French with **OK** button and Lock set press **OK** button on the remote control.

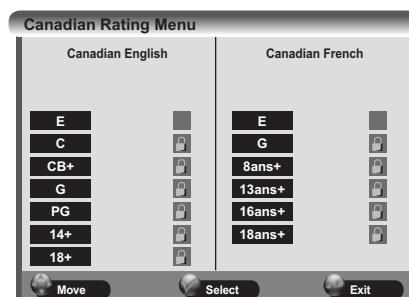

■ Advanced Rating (TBD)

- 1 Press **OK** button to enter the sub menu.
- 2 Select Advanced Ratings On/Off with press **OK** button
- 3 If Advanced Ratings On then appear Advanced Parental Lock but this Menu is not Activate.



Notes

- These categories consist of two separate groups: TV-Y and TV-Y7 (Young children through age 7), and TV-G through TV-MA (everybody else).
- The restrictions for these two groups work independently: If a household includes very young children as well as young adults, the TV guidelines must be Setup separately for each age group.

Feature

Close Caption Options

You can Setup Size, Font, Text Color, Text Opacity, Background Color, Background Opacity, Edge Effect, Edge Color for Digital close caption.

- 1 Press Menu button on the remote control to display the main OSD menu.
- 2 Select the Feature main menu with button on the remote control.
- 3 Press button to enter the sub menu.
- 4 Select Close Caption Options with press **OK** button then appear Digital Closed Caption menu.
- 5 To set Digital Closed Caption Automatic/ Custom with press **OK** button.
- 6 In Custom of Style you can select Digital Closed Caption item with or on the remote control.
- 7 To set Digital Closed Caption item press **OK**

Notes

• DCC Setup

Style : Automatic – Set by Broadcasting
Custom – Set by User DCC Setup

Size : Normal, Small, Large.

Font : Default, Font1 ~ Font7.

Text Color : Black, White, Red, Green, Blue, Yellow, Magenta, Cyan.


Text Opacity : Solid, Flashing, Transparent, Translucent.

Background Color : Black, White, Red, Green, Blue, Yellow, Magenta, Cyan.


Background Opacity : Solid, Flashing, Transparent, Translucent.

Edge Effect : None, Raised, Uniform, Leftshadow, Rightshadow.

Edge Color : Black, White, Red, Green, Blue, Yellow, Magenta, Cyan.

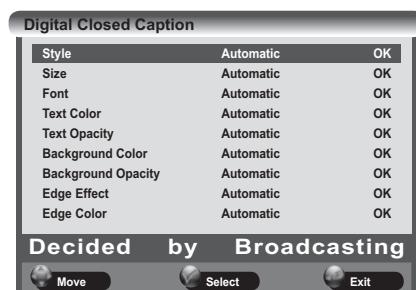

Decided by Broadcasting

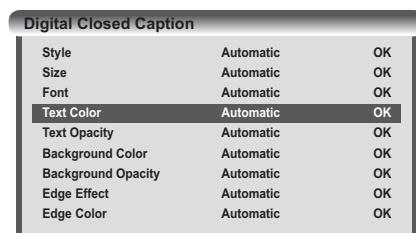

Closed Caption Sample

Feature (PC)

In PC mode, you can adjust the H, V-Position, Divide, Native Mode and Phase. Also you can adjust them automatically. (Auto adjust function.)

PC Set

You can change H, V-Position, Clock and Phase in PC mode like usual PC TV. You can also adjust them automatically. (Auto adjust function.)



- 1 Press Menu button on the remote control to display the main OSD menu.
- 2 Select the Feature main menu with **□ ▶** button on the remote control.
- 3 Press **▲ ▼** button to enter the sub menu.
- 4 Select **PC Set** menu with **▲ ▼** button on the remote control.
- 5 To enter Time Set Menu, press **OK** button.



■ PC Setting Menu


- 1 Press **□ ▶** button to enter the sub menu.
- 2 Select **H-Pos/V-Pos/Clock/Phase** menu with **▲ ▼** button on the remote control.
- 3 Into the adjust, press **OK** and then set with **▲ ▼** button on the remote control.
- 4 To cancel all adjust, select **Preset** button.

For a more detailed description of these settings, see the next page.

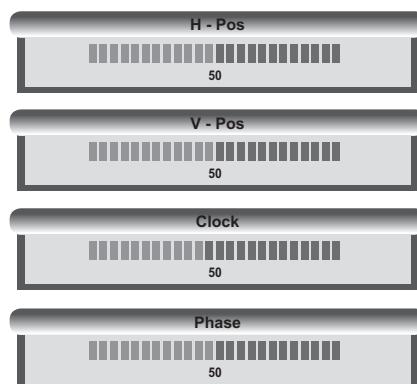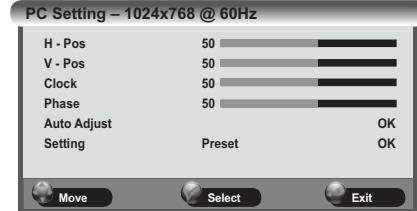


Feature (PC)


■ H-POSITION

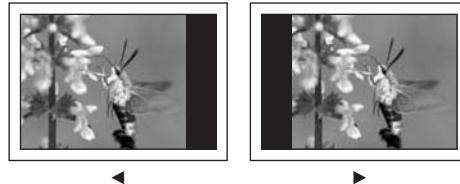

■ V-POSITION

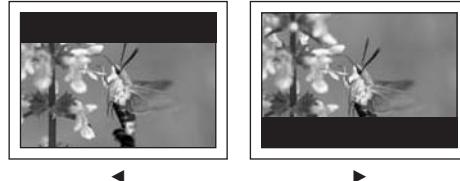

■ PHASE

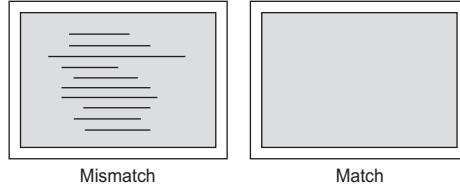


Notes

- In adjust you can move directly each adjust menu with press button.

■ Auto Adjust

- Press button to enter the sub menu.
- Select **Auto Adjust** menu with button on the remote control.
- Set the Auto Adjust, press **OK** and then appear progress message.

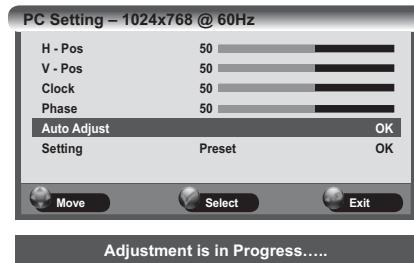

Troubleshooting

Before you call a service technician, please scan this list of problems and possible solutions. It may save you time and money.

Problem	Quick Action for Possible Solution.
No picture & No sound	Check whether the TV is turned on. Power cord inserted into wall outlet? Plug another product's power cord into the wall outlet where the TV's power cord was plugged in.
Picture OK & No sound	Press the VOLUME(►) button. Check the audio input signal.
The remote control doesn't work	Check to see if there is any object between the Plasma Display and the remote control causing obstruction. Check to see if the batteries are installed with the correct polarities.
Digital broadcasting screen problem	Check the digital signal strength and input antenna.
No or Poor color or Poor picture	Select color in the Picture and press VOLUME(►) button. Keep a certain distance between the TV and the VCR. Activate any function to restore the brightness of the picture. Check to see that both the TV and the source are plugged in and turned on.
The image is too light or too dark	Adjust the Brightness or Contrast settings.
The image is too large or too small	Adjust the Size settings.
No output from one of the speakers	Adjust Balance in the Sound Menu.
Strange sound from the TV	Typical sound due to normal TV operation, TV is not faulty.



Specification – 15 Inch LCD

15" LCD TV	
Function and Display Specification	
Display Size	15-Inch 4 : 3 Diagonal Screen
Display Mode	Variable 4 Modes (4:3 Mode/ Zoom)
Pixel Format	1024 x 768 Physical Pixel
Contrast Ratio	500:1
Brightness	450 cd/m ²
Max Input Resolution	1280 x 768 / 60Hz
Input Compatible	Multiple input compatible
Video	Advanced motion digital/Motion-Adaptive De-interlace process, Digital progressive line scaling.
Tuner Module	TV/CATV (ATSC)
Programming	Favorite channel programming, Time Set, Set the Sleep timer
HDTV Input	480i/p (60Hz) , 576ip (50Hz), 720p (60Hz), 1080i (50, 60Hz)
Color Temperature	Selectable 3 Mode (Warm, Normal, Cool)
Dimension / Weight	
Main Only	364 (W) x 333 (H) x 67 (D)
With Stand	395 (W) x 333 (H) x 198 (D)
With Stand and Speaker	395 (W) x 333 (H) x 198 (D)
Miscellaneous	
Audio	Built-in amplifier and two speaker (7 att/Typ.) systems (optional), Selectable fixed/variable audio output (optional)
External Control	Front OSD Button Control, Remote control, RS232C Control
Power Consumption	
Input Power	DC +19 External Power Adapter
Power Consumption	30 Watt(Normal)
Connectivity	
TV1, 2 Input	RF/CATV (ATSC)
Composite Input	RCA x 1Port (AV Input)
S-Video Input	Mini Din 4Pin x 1Port
PC Input	Mini D-Sub 15Pin x 1Port
Audio Input	Phone Jack x 1Port
Speaker Output	Cinch Type x 4Port (Stereo L/R)
External Control Port	Phone Jack x 1Port
HDMI Port	HDMI x 1Port
SPDIF Port	SPDIF (Optical) x 1Port (5.1 Channel)

2- Year Limited Warranty

Warranty Service is only available in the country of original purchase. This is an important document. Attach your bill of sale to this card and keep it in a safe place. Your bill of sale is your warranty.

Our warranty remains in effect for two years from the date of the first consumer purchase.

WHO IS PROTECTED BY THIS WARRANTY

Our warranty protects the original owner and all subsequent owners, provided that our product was purchased from an authorized dealer. A copy of the original dated bill of sale must be presented whenever warranty service is required.

WHAT IS COVERED BY THIS WARRANTY

Except as specified below, the warranty covers all defects in material and workmanship. The following are not covered: damage caused by accident, misuse, abuse, product modification or neglect; damage occurring during shipment; damage from failure to follow instructions contained in the instruction manual; damage resulting from the performance of repairs by someone not authorized by us; damage by natural disaster such as lightening, flood etc.; damage caused by installation of parts that do not conform to the specification; units used for other than home and office use; units not used for their intended purpose; any claims based on misrepresentations by the seller; products sold on an "as-is" or final sales basis; or the cost of installing, removing, or reinstalling the unit. Our liability is limited to the repair or replacement, at our option, if any defective product and shall not include incidental or consequential damages. We reserve the right to replace a discontinued model. Any replacement units or parts may be new or rebuilt.

TO OBTAIN WARRANTY SERVICE

For U.S. and Canada if you require warranty service, please contact Premium Distribution Corp. Authorized Support Provider at 866-734-1200.