



 
# CD - 9 2 0 Cloud Dictionary

## User Manual

英業達集團  
無敵科技股份有限公司  
客戶服務中心

台北市內湖區瑞光路513巷36號10樓  
電話：(02)8797-5111  
傳真：(02)8797-5222  
網址：<http://www.besta.com.tw>

# BESTA CD-920 Cloud Dictionary

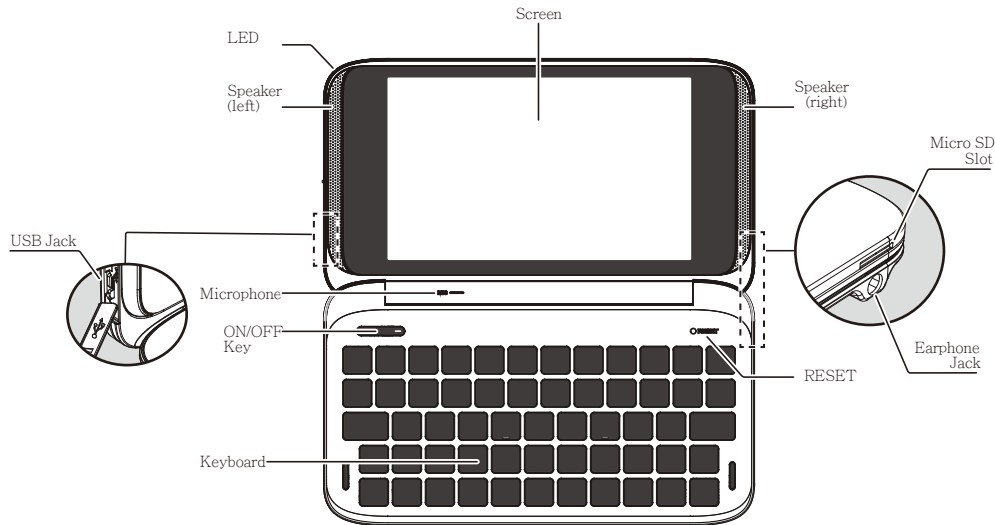


## Power Source & Charger

### 1 Connect device with power source as the picture below.

LED indicator stays orange, indicating that it is charging.

 - You can charge the device by connecting connector A with computer USB port.

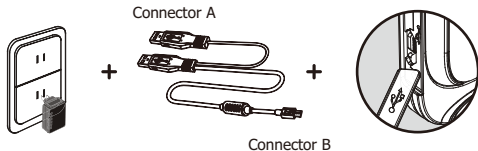

### 2 LED indicator light turns out indicating that Charging is complete.

The full charging time is about 4 hours 30 minutes.

- The charging time will vary with the conditions of use and temperature, if you are using while charging, charging time will be extended.

 
### 3 Unplug the USB cable.

#### Use of the battery

- Main power is a rechargeable Li-batteries Inside.
- Rechargeable battery can be used repeatedly, but it will eventually wear out. When the battery life is shortened, you should buy and replace it with a new one.
- Do not disassemble the machine to replace the battery.
- It is good for the device to use the specified adaptor of the device.
- Please recycle batteries in accordance with local regulations.

## Micro SD Card

You can insert a Micro SD card to expand the memory.

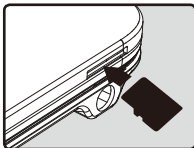

**Insert:** switch off the device first. Gently push the card into the card jack until you hear a sound.

**Remove:** switch off the device first. Gently press the card until you hear a sound.



When transfer or open files on Micro SD, in order to avoid data loss or abnormal of the data . Please make sure the power is off, before inserting and removing card.

## Power On/Off

**Power Off:** Long press ON/OFF key and then choose "Power off"

**Interval:** When the device is unused, please press ON/OFF key gently. The screen enters power-saving mode.

**Awakening:** On power-saving mode, press ON/OFF key to awaken this mode.

**Power On:** Long press ON/OFF key till the start-up picture is shown.















## Stylus

**Stylus plugs in the pen slot.**

Please pull the stylus out by your finger and put it back to the slot to avoid losing.

## Keyboard

There are some function keys in the keyboard, some function keys can be used alone, but other function keys need to be used with [ Alt ] key.

-  The same as Tab key of PC.
-  Switch between small and capital letters.
-  Back to the home page.
-  Open the function menu.
-  Open the search function.
-  Combine with other keys with blue sign.
- 
  - Input a space.
  - Select the symbol method with [ Alt ] key.
  - Select the input method with [ ⇧ ] key.
- 
  - Pronunciation.
  - Read the whole passage with [ Alt ] key.
- 
  - Pronounce syllable by syllable.
  - Open the pronunciation correction with [ Alt ] key.
- 
  - Page down.
  - Turn down the volume with [ Alt ] key.
- 
  - Page up.
  - Turn up the volume with [ Alt ] key.
-  Delete the selected string or letter.

## Home Page

You could customize the wallpaper, widget, shortcut and the number of home pages.



Voice Search

shortcut

Status Bar

**Search**

Open Google search.

**Voice Search**

Open Google voice search.


**Widget**


Touch to open the application.

**Status Bar**

Display status indicator and notice.

**Tool Bar**

 Open browser.


 Open function menu.

 Open BESTA Market.

\* There are five shortcuts in tool bar, you can customize other four shortcuts except .

**Shortcut**

Touch to open the application.

 The Home page will change with the update of the Android OS.

## Sign

- |                         |                      |
|-------------------------|----------------------|
| 🔔 Alarm                 | ⌵ More               |
| 🔋 Battery indicator     | 🔋 Fully charged      |
| 🔋 Run out of power      | 🔋 Charging           |
| 🔄 Data synchronization  | 🔧 Input method       |
| 🔌 USB connection        | ⚠ Mistake/caution    |
| ⬇ Uploading             | ⬇ Downloading        |
| 🔇 Mute                  | ✖ Airplane mode      |
| 📶 You can connect Wi-Fi | 📶 Status of Wi-Fi    |
| 🎵 Play MP3              | 📶 Full storage       |
| ✉ Mail notification     | 📅 Calendar event     |
| 💿 Insert SD card        | 📄 SD card is removed |
| 🔌 USB debugging         | 🔄 Data updating      |

## Customize shortcut

Long tap any shortcut to move it, you also can delete shortcut by long tapping and dragging it to "X". Open the function menu, you can long tap and drag the shortcut to home page.





## Customize widget

Long tap any widget to move it, you also can delete widget by long tapping and dragging it to "X". Open the widgets menu, you can long tap and drag the widget to home page.

## Customize wallpaper

Long tap empty area of home page to open a menu to choose wallpaper from Besta Album, Live Wallpapers, Super-HD Player, Wallpapers.

## Customize the number of home pages

Long tap  to view the content of screen preview, tap  to add home page, tap  to delete home page. The screen is set as the default desktop by tapping .

## Touch-control

**It is good for the device to use the provided stylus.**

**Selection-tapping** Choose the function on the screen and tap it gently with the stylus. Make sure the stylus leave the screen after tapping.

**Long-tapping** Open a new menu option or activate a selected option.

**Dragging** Long tap and drag to move the option.

## Delete shortcut ↓



**Sliding** Fast slide the screen and then browse the option.

**Zoom in/out** Tap screen twice to zoom in/out the Web page and picture.

**Input** When you want to input words, the language toolbar will be activated automatically in order to input words.



↑ Slide to page up/down



↑ Input words

**Insert the word** You can change the cursor position to change the input position

 


↑ Insert the word

**Select words** Long tap the words, a blue indicator will appear on the screen to help you select words, slide blue indicator to set the selected range.

When you select words, you can perform copy, cut and other operations in the toolbar.

**Copy the selected words** ↓

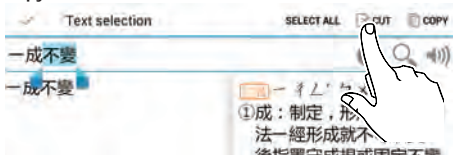

You can tap "DICTIONARIES" in toolbar to search the selected words in other dictionaries.




↑ Search the selected words

## Wi-Fi & Networks

 
The device provides the Wi-Fi function.

Start Wi-Fi Start Wi-Fi in "Settings--Wireless & Networks".

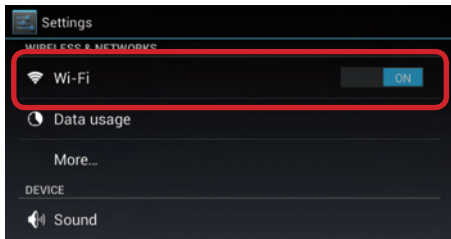

### Connect

 - ① Click Wi-Fi, the device begins to search available networks automatically.

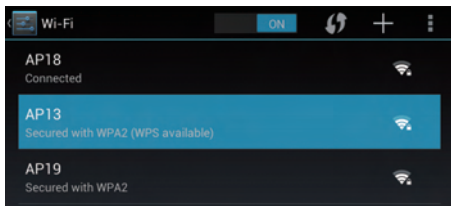

- ② Choose the Wi-Fi network you want to connect.
- ③ If need password, you should input the password to connect.
- ④ Choose and connect ◦



## USB Computer Connection

Please use specified USB cable to connect your device to PC.

- ① Use specified USB cable to connect the device to PC.
- ② Tap status bar to select "Connected as a media device", choose the Media device (MTP).



 
- ③ Open the folder, to check and copy files to memory card.
- ④ After data transfer completed, remove the USB connection.





**In order to avoid abnormal or missing data, please strictly operate the above instructions.**

#### MTP DRIVE

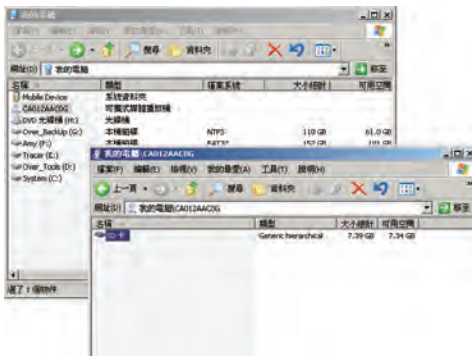- It will be able to automatically identify MTP device and install the driver, if the computer's operating system is Windows 7 and above.
- If the computer's operating system is Windows XP, it will be able to identify MTP device after the Windows Media Player to be upgraded to version 11 and above.
- After shut off the USB error budgeting model, it can be connected to the computer by way of MTP.



#### Common settings

<b>Date &amp; time</b>	Set date, time, time zone, time format, date format in "Settings → Date & time"
<b>Sound</b>	Set volumes, silent mode, system sounds in "Settings → Sound"
<b>Brightness</b>	Adjust brightness in "Settings--Display → Brightness"
<b>Sleep</b>	Adjust sleep time in "Settings--Display → Sleep"
<b>Screen lock</b>	Select screen lock type in "Settings → Security → Screen lock"
<b>Airplane mode</b>	Long press ON/OFF key to set "Airplane mode"
<b>Language</b>	Set system language in "Settings → Language & input → Language"
<b>Input methods</b>	Set input methods in "Settings → Language & input → Besta Input Method  → Input language"
<b>Penup time</b>	Set penup time in "Settings → Language & input → Besta Input Method  → Handwriting Setting → Penup Time"
<b>Touch panel calibration</b>	Reset the calibration parameter in "Settings → Touch Panel Calibration"
<b>Apps</b>	You can manage application and check storage space in "Settings → Apps"
<b>Battery</b>	Check battery status in "Settings → Battery"
<b>USB debugging</b>	Open USB debugging in "Settings → Developer options"



## Maintenance

1. Keep it dry. Precipitation, humidity and liquid that contains minerals will corrode electronic circuits.
2. Do not use or store it in dusty, dirty areas as its detachable parts may be damaged.
3. Do not store it in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and melt certain plastics.
4. Do not store it in cold areas. When the device warms up, moisture can form inside it, which may damage electronic circuit boards.
5. Do not attempt to take the device apart. Improper handling may damage the device.
6. Do not drop, knock or shake it. Improper handling may cause damage to the liquid crystal panel.
7. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
8. Do not paint it. Paint can clog the device's detachable parts and cause it to malfunction.

## Caution

To assure continued FCC compliance:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

## Items

1. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio

communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
2. Modification, adjustment, and replacement of parts : Besta is not responsible for unauthorized modification, adjustment, and replacement of parts on this product. Any such changes may void the warranty.
  3. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions :
    - (1) This device may not cause harmful interference, and
    - (2) This device must accept any interference received, including interference that may cause undesired operation.
  4. SAR Exposure Statement This EUT is compliance with SAR for general population/uncontrolled exposure limits in and had been tested in accordance with the measurement methods and procedures specified in OET 65. This equipment should be installed and operated with minimum distance 0cm between the radiator & your body. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter. The County Code Selection feature is disabled for products marketed in the US. For product available in the USA markets, only channel 1~11 can be operated. Selection of other channels is not possible.