
Wireless outlet instruction

一. instruction:

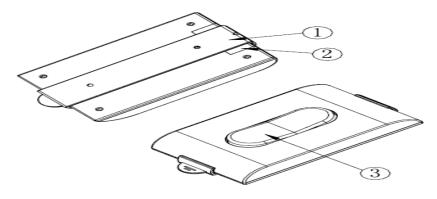

Remote sensor

- (1) remote sensor rack
- (2) battery door
- 3 ON/OFF switch

二. Operation instruction:

- 1. insert a 23AE 12V wrap battery in remote sensor rack
- 2. when remote sensor in ON mode, the EUT will send a signal .
- 3. when remote sensor in OFF mode, the EUT will turn off.

MARK: control distance 30M

- ≡. Notice:
 - 1. If the control distance become short, now u should be replace the 23AE 12V battery
 - 2. If keep storage for a long time, please take out the battery

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.