


# JW-1575 transmitter instruction

## Illustration of picture

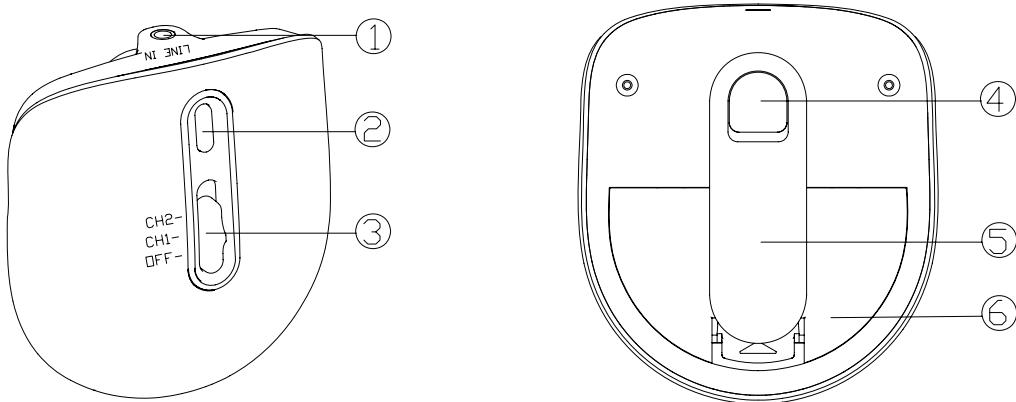

- ①φ3.5Mm earphone jack(LINE IN);
- ②the indicator light;
- ③OFF/CH1/CH2 selector button;
- ④press case;
- ⑤push case;
- ⑥battery case

## Illustration of function

- (1) Modulation type: FM
- (2) Transmission Frequency: this unit has two frequencies, channel 1 (CH1) is 88.5MHz, channel 2 (CH2) is 91.0MHz
- (3) Transmission RD: 10 meter
- (4) Battery for transmitter : 2×1.5V AAA batteries

## The install and replace of battery

- (1) Press the ④, and turn the ⑤ to open the battery pack.
- (2) Install the 2×AAA batteries according to the polarity after open the battery pack
- (3) Close the battery pack, and push the ⑤ to the original place, the ⑤ will lose automatically.

## The operation of transmitter

- (1) Plug the audio line into the ① at the back of transmitter, the other part connect to

the (TV, Computer/CD/VCD/DVD/MP3)

- (2) Open the power of transmitter, turn the OFF/CH1/CH2 button ③, choose one, the indicator of transmitter will work.

## Notice

- (1) In any case of the bad voice, put the transmitter away the light.
- (2) Please replace the battery when the voice become weak.
- (3) When use the same transmitter, and more receiver working, please confirm the same type of receiver.
- (4) Please notice the volume in case of over-high or over-small
- (5) Please remove the battery when not use in long time.

## FCC Statement

1. This device complies with Part 15 of the FCC Rules.  
Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference, and
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.