

## **PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE PLAYING AND RETAIN THIS INSTRUCTION FOR FUTURE REFERENCE.**

### **RADIO CONTROL FREQUENCY**

FOR INTERFERENCE-FREE RESULTS, DO NOT OPERATE THIS VEHICLE WITH OTHER RADIO-CONTROLLED TOYS NOT INCLUDED IN THIS SET WITHIN TRANSMISSION RANGE.

### **TRANSMITTER AND RECEIVER**

SINCE RADIO WAVES CONTROL THIS VEHICLE AND IN ORDER TO AVOID INTERRUPTION, DO NOT OPERATE THIS VEHICLE NEAR ELECTRICAL OR TELEPHONE LINES, CB INTERFERENCE, CD PLAYERS, MOBILE PHONES, ELEVATORS, STEEL GIRDERS, OTHER ELECTRONIC DEVICES AND NEAR HIGHWAYS.

### **INSTALLING THE BATTERIES**

- REMEMBER TO SET THE "ON-OFF" SWITCH AT BOTTOM OF THE VEHICLE TO "OFF" POSITION BEFORE INSERTING THE BATTERIES.
- UNSCREW AND OPEN BATTERY COMPARTMENT COVER TO INSERT BATTERIES IN THE VEHICLE, MAKE SURE ALL BATTERIES ARE AT THE CORRECT POLARITY.
- CLOSE THE COVER AND TIGHTEN THE SCREW.
- TO INSERT BATTERY IN THE CONTROLLER: OPEN BATTERY COMPARTMENT COVER TO INSERT BATTERY.
- CLOSE THE COVER.
- DO NOT LEAVE BATTERIES IN THE VEHICLE AND TRANSMITTER WHEN THE TOY IS NOT IN USE.
- DO NOT MIX OLD AND NEW BATTERIES TOGETHER.
- DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC) OR RECHARGEABLE (NICKEL-CADMIUM) BATTERIES.
- NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.
- REMOVE USED BATTERIES FROM THE TOY.
- SUPPLY TERMINALS ARE NOT TO BE SHORT CIRCUITED.
- FOR BEST PERFORMANCE, ALKALINE BATTERIES ARE RECOMMENDED.
- DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.

### **OPERATING THE VEHICLE**

- FOR YOUR SAFETY, NEVER PLAY WITH THIS TOY ON THE STREET.
- TURN THE "ON-OFF" SWITCH AT THE BOTTOM OF THE VEHICLE TO "ON" POSITION, THEN THE VEHICLE WILL BE IDLE.
- PUSH TRIGGER UP ON THE CONTROLLER, THE VEHICLE WILL GO BACKWARD IN CIRCULAR PATH. PRESS THE TRIGGER DOWN ON THE CONTROLLER, THE VEHICLE WILL GO FORWARD.

### **FCC INSTRUCTIONS**

MODIFICATIONS NOT APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

NOTE: THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES:

- REORIENT OR RELOCATE THE RECEIVING ANTENNA.
- INCREASE THE SEPERATION BETWEEN THE EQUIPMENT AND THE RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
- CONSULT THE DEALER OR AN EXPERIENCED RADIO/TV TECHNICIAN FOR HELP."

### **OPERATION TIPS**

1. OPERATE ONLY ON SMOOTH (BUT NOT SLIPPERY), DRY AND CLEAN SURFACE.
2. DO NOT PLAY WITH THIS TOY ON GRASS, SAND OR CARPET.
3. DO NOT DRIVE THE TOY THROUGH WATER.
4. ALWAYS POINT THE CONTROLLER ANTENNA UPWARD FOR BETTER TRANSMISSION.
5. DO NOT MAKE ANY PHYSICAL CONTACT WITH THE CONTROLLER ANTENNA WHILE OPERATING.
6. KEEP THE TOY IN A DRY AND COOL PLACE AFTER PLAYING. DO NOT LEAVE IT DIRECTLY UNDER SUNLIGHT.

CONFORMS TO TOY SAFETY STANDARDS ASTM F963-03