

## RCT-08 RF REMOTE TRANSMITTER



### SPECIFICATIONS:

- Channel Code : 1 million code
- Remote Frequency : 433.92MHz
- Remote Range : > 20 m
- Battery Type : L1028\*1-12V DC Alkaline

### OPERATIONS:

- Open the battery cover and put one battery into
- Control of the polar as battery (+&-)
- + key button: Press once for switch ON the receiver  
- key button: Press once for switch OFF the receiver
- Any transmitter controls any Receiver-they each operate the same four channels (Radio Frequency Codes)
- Transmitter turns on when the toggle button is pressed, indicating that 4 an ON or OFF signal is being sent. If indicator light is not activated when pressing the toggle switch, replacing the battery (use ONLY 12V A23 Alkaline).
- IMPORTANT: Make sure to press firmly and for a minimum of 1 second for best results.

### REPLACING BATTERY

- Remove the battery cover away from back plate
- Remove old battery
- Install new 12V type A23 alkaline battery noting polarity
- Replace cover

### Operation Conditions:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### Caution:

Changes or modifications not expressly approved by the manufacturer could void the user's authority, which is granted by the Federal Communications commission, to operate this device.