

KC-1604 INSTRUCTION MANUAL

Thanks for your purchase the body pad. It is designed for the action game, you play the action game with the production. You will feel more comfortable more really. You will exercise as play the action game. The body pad use 2.4GHZ technology. You will feel free and easy. Quite try it out! Please save the instruction manual to safe place for usage in future.

FEATURE

1. Support 4 player at the same time
2. The receiver and the remote must be matched same channel.
3. Remote have right arm, left arm, left right, right leg, LT, RT, L1, L2, R1, R2, D-PAD.
4. The LT, RT, Right leg, Left leg, Right arm, Left arm can be matched any function key of \square , \circ , \times , \triangle .
5. Operation voltage 3.3V
6. Usage 3XAAA batteries.
7. Signal led
8. Operation frequency 2.44GHZ

USAGE METHOD

1. Ensure your PS2 console shut off
2. Insert the receiver into the PS2 game port
3. Turn on your console
4. Connect the remote all part to relative place.
5. Turn on your remote power, the receiver indicate LED will change flash to ON.
6. According to the game require adjust the right arm, left arm, left right, right leg, LT, RT, key to relative function.
7. Then you will play game and exercise at the same time. Cool and easy!

Key switch description

1. Receiver
 - Start key: start or stop game in the game
 - Select: refer to instruction manual of different game,
 - Channel switch: match the same channel to the remote
 - Function switch: according different game adjust the switch place.
2. Remote description
 - Left hand
 - D-PAD: 8-way direction key, move leading actor direction in the game
 - Power switch: ON/ OFF Power
 - LT: according different game matched relative function with receiver LK switch
 - Right hand
 - L1, L2, R1, R2 buttons, according to different game setting different function, please refer to game manual.

RK: according different game matched relative function with receiver LK switch

- Left arm

According different game matched relative function with receiver LK switch

- Right arm

According different game matched relative function with receiver LK switch

- Left leg

According different game matched relative function with receiver LK switch

- Right leg

According different game matched relative function with receiver LK switch

The battery installation

- Remove the battery cover with the screw
- Install 3xAAA batteries according the right polarity
- Reinstall the battery cover.

Notes

- the non-rechargeable batteries are not to be recharged, please refer the batteries instruction
- rechargeable batteries are to be removed from the body-pad before being recharge
- different types of batteries or new and used batteries are not to be mixed
- the supply terminals are not to be short-circuited
- exhausted battered are to be removed from the body-pad

Precaution of Usage & Storage

- Do not use or store this joystick in an area where is highly moist, dangerous hot, extra- cold or full of dust.
- Do not expose this joystick to direct sunlight for a long time.
- Do not lay this joystick on a surface that is slanted or unstable.
- Do not apply a strong force upon this joystick or drop it roughly from a high place.
- If you want to clean this joystick, you can use a soft cloth, soak it in clean water or diluted neutral detergent, wring out it thoroughly before wiping the dirt from the case. Never use chemicals such as benzene or paint thinner to clean this joystick

Note: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.

KC-7604 INSTRUCTION MANUAL

Thanks for your purchase the body pad. It is designed for the action game, you play the action game with the production. You will feel more comfortable more really. You will exercise as play the action game. The body pad use 2.4GHZ technology. You will feel free and easy. Quite try it out! Please save the instruction manual to safe place for usage in future.

FEATURE

1. Support 4 player at the same time
2. The receiver and the remote must be matched same channel.
3. Remote have right arm, left arm, left right, right leg, LT, RT,L, R, WHITE , BLACK, D-PAD.
4. The LT, RT, Right leg, Left leg, Right arm, Left arm can be matched any function key of A, B, X, Y.
5. Operation voltage 3.3V
6. Usage 3XAAA batteries.
7. Signal led
8. Operation frequency 2.44GHZ

USAGE METHOD

1. Ensure your XBOX console shut off
2. Insert the receiver into the XBOX game port
3. Turn on your console
4. Connect the remote all part to relative place.
5. Turn on your remote power, the receiver indicate LED will change flash to ON.
6. According to the game require adjust the right arm, left arm, left right, right leg, LT, RT, key to relative function.
7. Then you will play game and exercise at the same time. Cool and easy!

Key switch description

1. Receiver
 - Start key: start or stop game in the game
 - BACK: refer to instruction manual of different game,
 - Channel switch: match the same channel to the remote
 - Function switch: according different game adjust the switch place.
2. Remote description
 - Left hand
 - D-PAD: 8-way direction key, move leading actor direction in the game
 - Power switch: ON/ OFF Power
 - LT: according different game matched relative function with receiver LK switch
 - Right hand
 - L, R, WHITE, BLACK buttons, according to different game setting different function, please refer to game manual.

RK: according different game matched relative function with receiver LK switch

- Left arm

According different game matched relative function with receiver LK switch

- Right arm

According different game matched relative function with receiver LK switch

- Left leg

According different game matched relative function with receiver LK switch

- Right leg

According different game matched relative function with receiver LK switch

The battery installation

- Remove the battery cover with the screw
- Install 3xAAA batteries according the right polarity
- Reinstall the battery cover.

Notes

- the non-rechargeable batteries are not to be recharged, please refer the batteries instruction
- rechargeable batteries are to be removed from the body-pad before being recharge
- different types of batteries or new and used batteries are not to be mixed
- the supply terminals are not to be short-circuited
- exhausted battered are to be removed from the body-pad

Precaution of Usage & Storage

- Do not use or store this joystick in an area where is highly moist, dangerous hot, extra- cold or full of dust.
- Do not expose this joystick to direct sunlight for a long time.
- Do not lay this joystick on a surface that is slanted or unstable.
- Do not apply a strong force upon this joystick or drop it roughly from a high place.
- If you want to clean this joystick, you can use a soft cloth, soak it in clean water or diluted neutral detergent, wring out it thoroughly before wiping the dirt from the case. Never use chemicals such as benzene or paint thinner to clean this joystick

Note: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.