




V261LC Series Quick Start Guide

lorex.com

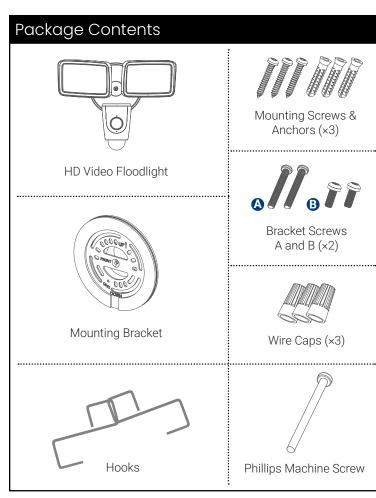



Safety Precautions

- Read this guide carefully and keep it for future reference.
- · Follow all instructions for safe use and handling of the product.
- Periodic cleaning may be required. Use a damp cloth only. Do not use any harsh, chemical-based cleaners.
- Use the product within given temperature, humidity and voltage levels noted in the product's specifications
- · Do not disassemble the floodlight.



CAUTION

Risk of fire.

Risk of electrical shock.

Disconnect the power at the fuse box before installation

Disclaimers


- · Always follow code standards when installing wired connections.
- This floodlight camera must be installed on a wall and a UL listed junction box. • This floodlight includes an Auto Mechanical IR Cut Filter. When the camera
- changes between Day/Night viewing modes, an audible clicking noise may be heard from the floodlight. This clicking is normal, and indicates that the camera
- Audio recording without consent is illegal in certain jurisdictions. Lorex Corporation assumes no liability for use of its products that does not conform with local laws.

CC Notice


THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:


1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND

2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

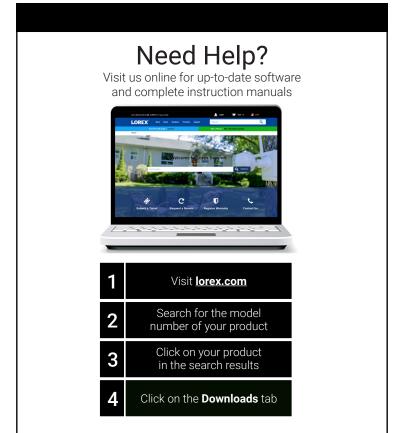

Copyright © 2020 Lorex Corporation As our products are subject to continuous improvement, Lorex reserves the right to modify product design, specifications and prices, without notice and without incurring any obligation. E&OE. All rights reserved.

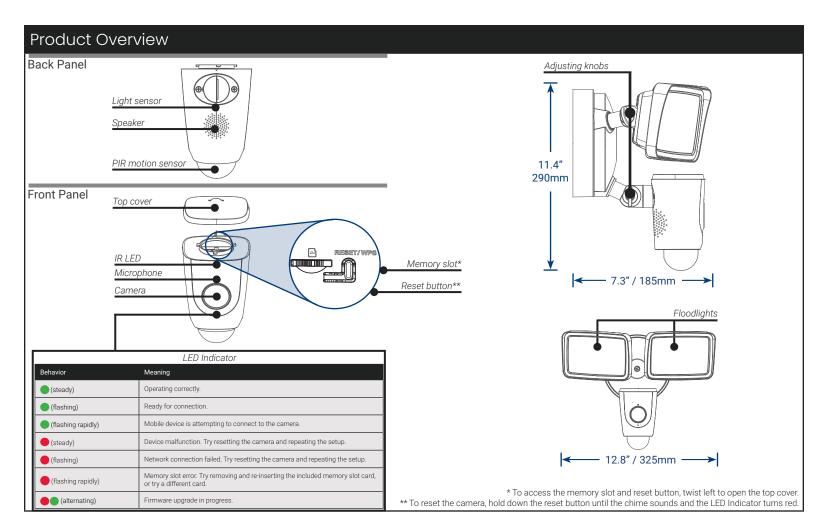


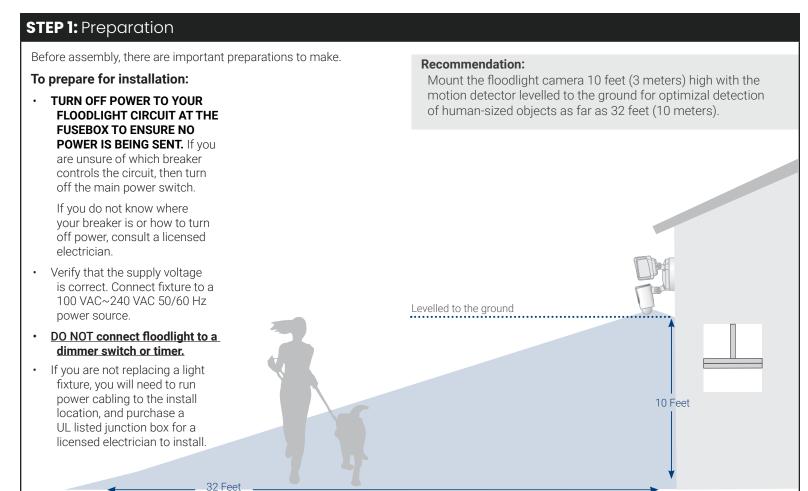

V261LC_QSG_EN_R1



STEP 2: Secure the Mounting Bracket Next, install the floodlight's mounting bracket. 1. With the power shut off, remove the existing light fixture and bracket from the wall. 2. Disconnect the wires. To install directly to a junction box: 3. Run the wires through the middle of the supplied mounting bracket. Secure the mounting bracket to your junction box using one of the bracket screws, A or B depending on which size fits. NOTE: Be sure to follow the "Front" / "Up" directions on the mounting bracket. To install directly on a wall: Use the mounting bracket as a template to mark 3 holes in a triangular pattern. 4. Use a 1/4" drill bit to drill in the marked holes. Gently tap the supplied mounting anchors into the drilled holes with a hammer Align the bracket and use a Phillips head screwdriver to secure the supplied

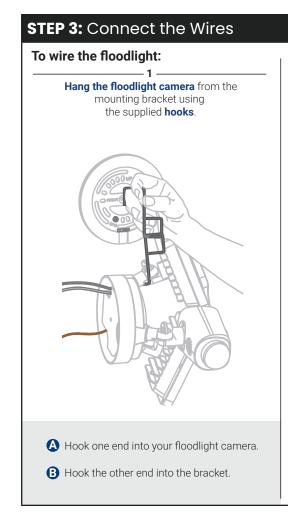


The copper wire from the camera is ground wire.

Connect the ground wire to the existing ground wire inside of your junction box.


Use the supplied wire cap.

In the case that you are not wiring from a junction box, twist your ground wire around the green screw on the bracket.

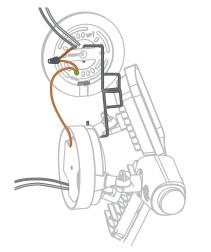

IMPORTANT: Properly ground fixture.

The white wire from the camera is neutral wire. Use a wire cap to **connect the neutral** wires from the camera and junction box. The black wire from your camera is a hot wire. Use a wire cap to **connect the hot** wires from the camera and junction box.*

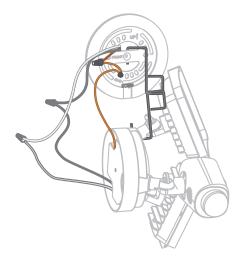


* Power wire colors in your home may be different. In such a case consult a licensed electrician.

STEP 4: Secure the Floodlight

Next, install the floodlight camera.

 Carefully push all the wires through the middle opening of the bracket into the junction box, and secure the floodlight camera through the middle hole using the Phillips machine screw.

In the case that you are installing the floodlight camera directly to the bracket, fit the wires into the back openings of the camera.

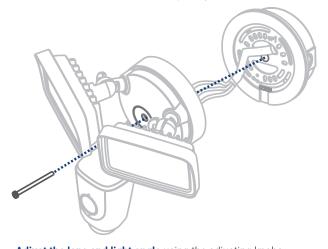

- 2. Adjust the lens and light angle using the adjusting knobs
- To enforce a water resistant seal, apply silicone compound around the entire perimeter where the junction box is attached to the bracket.
- 4. You may now restore power at the fusebox.

NOTE: If the status LED on the floodlight camera does not turn on, check to make sure wiring is done correctly.

€

STEP 5: In-app Setup

mounting screws into the

mounted anchors.

Next, connect the floodlight camera to the Lorex Home app.

To scan the QR code:


- Download and install the free **Lorex Home** app from the App Store or Google Play Store.
- Tap the Lorex Home icon to launch the app. Tap **Sign up**, then follow the on screen prompts to create an account. Record your account details below and store in a secure location:



Email: ______

- 3. Wait for the floodlight to start up. This may take up to 5 minutes after reconnecting power at the breaker.
- Once the status LED on the floodlight is flashing green, tap + in the Lorex Home app.
- Scan the QR code on the side of the floodlight camera using your mobile device's camera.

NOTE: If your mobile device cannot scan the QR code, tap **Manually enter Device ID**.

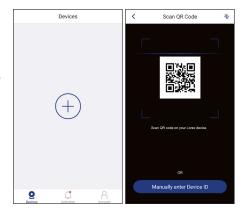


To link the floodlight:

- Once the status LED on the floodlight is flashing green, tap **Next** in the Lorex Home app. The app will connect your mobile device to the floodlight's hotspot
- 2. Create a secure password for the floodlight. Record your floodlight password below and store in a secure location:

Floodlight Password:

3. Select your Wi-Fi network from the list, then enter the Wi-Fi password to connect your floodlight to the Internet


NOTE: If the Wi-Fi connection is weak, try moving your router closer or adding a Wi-Fi extender.

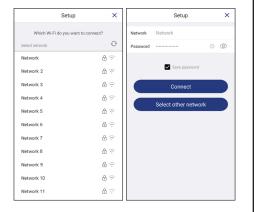

- Once the status LED on the floodlight is solid green, tap Next to add the floodlight to your Lorex Home account.
- 5. Set a name for the floodlight and configure date & time preferences, then tap **Complete**.

Overview of Lorex Home app

Live viewing screen:

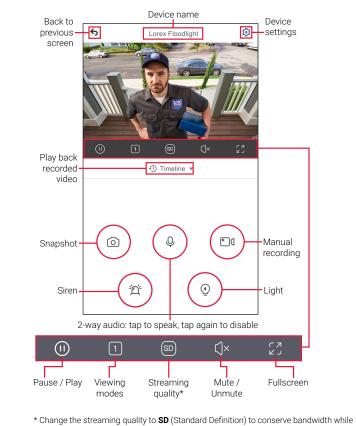

watching live video. This will not impact the quality of recorded video.

To configure the floodlight motion detection:

- 1. Tap Device Settings.
- Tap Floodlight Settings.
- Mode is set to Motion Activation by default. Tap to change the floodlights from being activated by motion detection to Manual. Manually turn the floodlights on and off in the live screen view.
- 4. Tap **PIR Area**:
- A. Slide the bar on the left to adjust the distance at which motion will activate your floodlights.
- B. Tap the **Zone**(s) on or off to activate motion detection from three different areas.
- C. Tap Save.
- 5. **Light Duration** is set to **1 minute** by default. Tap to change the floodlight's length of time when activated from motion detection.



Overview of the most common screens and controls in the Lorex Home app. For complete instructions on using the app, see the Lorex Home app manual on the floodlight's product page at **lorex.com**.

V261LC_QSG_EN_R1