

# YJ98-080 OPERATING INSTRUCTIONS

## 1. Electric Characteristic:

1. Power	AAA battery ( 1.5V ) *2
2. Current	15mA ± 5mA
3. Output	-10dB ± 5dB
4. Frequency	88.1MHZ 88.3MHZ 88.5MHZ 88.7MHZ
5. Input Frequency	20Hz-20000Hz
6. Work Time	30H / AAA battery ( 1.5V ) *2

## 2. Operating Method

1. Place the battery: open the cover, then place the batteries as the instruction
2. Turn on the power: press the POWER switch, then the Blue LED is on.
3. Choose the frequency: push the frequency switch to the frequency that you need.
4. Connect with the Audio: use the plug to connect with the Audio machines (MP3, MP4, IPOD)
5. Research the frequency: turn on the FM receiver or the others, save the corresponding frequency that the FM receiver lock-in by auto researching. Or you can select the frequency and save it by hand.

## 3. Notice

1. Do not place the wrong directions of the anode & cathode of batteries.
2. Replace the batteries when the power is used up, for example when the tone from the FM receiver is variety, or it can be heard or not some time.
3. Avoid the wastage of power by turn off the POWER when it is not used.
4. Do not place the unit into the water or under the high temperature.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following Conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.