


1.6 User Manual



CONTENTS

Getting to Know Your iota BT 738.....	2
Charging iota.....	4
Pairing iota to Your Bluetooth Cell Phone.....	6
Powering iota.....	9
Ear Cap Attachable.....	10
Making Calls.....	11
Redialling Last Number.....	12
Receiving and Ending Calls.....	13
Rejecting Calls.....	14
Transferring Calls.....	15
Adjusting the Volume.....	16
Muting iota Microphone.....	17
Low Battery.....	18
Limited Warranty Service.....	19
Troubleshooting.....	24

touch[®]
A better experience on the move

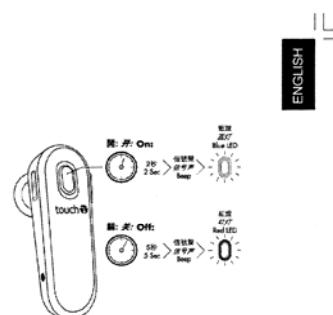

GETTING TO KNOW YOUR iota BT 738

ENGLISH

CHARGING iota


Before using handsfree, you must charge it for about 2.5 hours. When fully charged, the battery provides up to 6 hours of talk time and up to 120 hours of standby time.

To charge the handsfree

1. Plug rear of handsfree on the charger jack.
2. Plug the AC adapter into a wall outlet. When the handsfree is charging, the Red LED will be on, and a tone will be heard from the earpiece.
3. When it is fully charged, the Blue LED will be on, and a tone will be heard from the earpiece.
4. Disconnect the charger from AC wall outlet and the handsfree.

4

Note: Charging indication will be delayed for a few minutes if the handsfree has not been used for a long time or the battery is drained.

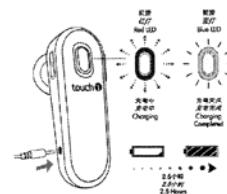

ENGLISH

5

ENGLISH

PAIRING iota TO YOUR BLUETOOTH CELL PHONE

Pairing is the process of linking the handsfree with your Bluetooth cell phone. Before you use handsfree with your cell phone, you must pair the devices. After this process is completed, you can use the handsfree only with its paired cell phone. If you wish to use the handsfree with a different cell phone, you must repeat the pairing process with the new cell phone. In this case, the handsfree will no longer work with the original cell phone.

To pair the devices

1. With the handsfree turned off, press and hold [MFB] key for 8 seconds. The Blue and Red LEDs will flash alternately, and a tone will be heard from the earpiece.

6

2. Release [MFB] key. The handsfree is now in pairing mode.

3. Turn on the cell phone and place it within 1 meter of the handsfree, scroll to the submenu where a list of Bluetooth devices within about 1 meter are displayed and select "BT-H738". (Initiate the device discovering feature on the cell phone. Refer to the user guide for instruction to initiate this feature.)
4. When prompted by the cell phone, enter the handsfree PIN code: "0000". When pairing is completed, the Blue LED on the handsfree will flash once every 3 seconds, and a tone will be heard from the earpiece. And then the handsfree will be placed in standby mode, after pairing and connecting as required, to be ready to make or receive calls.
5. If you do not enter the PIN code within certain period, the handsfree will be back to standby mode and a

ENGLISH

7



ENGLISH

tone will be heard from the earpiece.

To cancel pairing mode

While in the pairing mode, you can cancel the pairing process. Press and hold [MFB] key for 5 seconds to cancel pairing. A tone will be heard from the earpiece for indication. After that, the handsfree will be placed in standby mode.



ENGLISH

POWERING iota

To turn on the handsfree

Press and hold the [MFB] key for 2 seconds, you will hear an ON tone. The handsfree turns on, and is placed in the standby mode, ready to connect to cell phone.

To turn off the handsfree

When the handsfree is on, press and hold [MFB] key for 3 seconds, you will hear the OFF tone and the Red LED will flash three times. The handsfree will turn off.

Note: When there is an incoming call, press and hold [MFB] key for 3 seconds cannot turn off the handsfree.

8




9



ENGLISH

EAR CAP ATTACHABLE

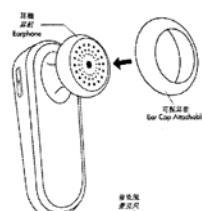

MAKING CALLS

You can make calls from your cell phone, or directly from handsfree using voice dialling tags. (If the feature is supported by your cell phone.)

To make calls from your cell phone

Dial the call from your cell phone, the call is automatically connected to your handsfree.

To make calls using voice tag (if supported by your cell phone)

1. Press [MFB] key shortly on your handsfree.
2. Speak the name of the person you wish to call, the call is automatically connected to your handsfree and you will hear a tone.

10



11



ENGLISH

REDIALLING LAST NUMBER

If there is no active and no incoming call, double press [MFB] key, the handsfree will redial the last number automatically and you will hear a tone. (This function only works with the supported cell phone.)

ENGLISH

RECEIVING AND ENDING CALLS

When your cell phone rings, press [MFB] key shortly on your handsfree, the call is automatically connected to your handsfree and you will hear a tone. When call connected and one more call incoming, press [MFB] key shortly to accept the incoming call and put the current call on-hold. Press [MFB] shortly to end the current active call and put the on-hold call active. When you have finished your call, press [MFB] key shortly on your handsfree, the call will be disconnected and you will hear a tone.

12

13

ENGLISH

REJECTING CALLS

It is supported by pressing [MFB] key for 1 second after receiving the ring, it is valid for handsfree profile and you will hear a tone.

ENGLISH

TRANSFERRING CALLS

You can transfer connected call from your handsfree to your cell phone by pressing [Vol+] key for 2 seconds. Call can be transferred back from the cell phone to handsfree by pressing [MFB] shortly. And you will hear a tone.

14

15

ENGLISH

ADJUSTING THE VOLUME

To increase the volume

Press [Vol+] key to increase volume by one step, repeat this procedure until you have reached the desired level.

When the maximum volume is reached, a tone will be heard from the earpiece.

To decrease the volume

Press [Vol-] key to decrease volume by one step, repeat this procedure until you have reached the desired level.

When the minimum volume is reached, a tone will be heard from the earpiece.

16

ENGLISH

MUTING iota MICROPHONE

You can mute or not mute the microphone temporarily by pressing [Vol+] and [Vol-] keys at the same moment for 1 second, and then you will hear a tone.

ENGLISH

17

ENGLISH

LOW BATTERY

When the handsfree is ON and the battery becomes low, the LED will flash red. Please charge the handsfree for 2.5 hours until the LED flashes blue.

18

ENGLISH

LIMITED WARRANTY SERVICE

Should your product need warranty service, please return it to the dealer from whom it was purchased, or contact any of your local dealers.

ENGLISH

Our Repair & Maintenance Warranty

Subject to conditions of this Limited Warranty, touch warrants this Product to be free from defects in design, material and manufacturing within the valid warranty period from the date of its original purchase by a consumer.

After-Sale Services

If, during the warranty period, this Product fails to operate under normal use due to defects in design, material or manufacturing, touch authorized distributors or

19

service partners in the country/ region where you have purchased the Product will, at their discretion, either repair or replace the Product in accordance with the terms and conditions stipulated herein.

touch and its licensed service centres reserve the right to charge a handling fee if a returned Product is found not to be under warranty according to the terms & conditions below.

Please note that your personal settings/ downloads might be lost when the Product is repaired or replaced.

Terms & Conditions

1. The warranty is valid only if the original invoice for purchase of this Product issued to the original purchaser by a touch authorized dealer, specifying the date of purchase, model and serial number, is pre-

20

sented with the Product for warranty service. touch reserves the right to refuse warranty service if the information on the warranty certificate has been removed or altered after the original purchase of the Product from the dealer.

2. If touch repairs or replaces the Product, warranty for the repaired or replaced Product shall be valid for the remaining time of the original warranty period. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced defective parts or components will not be returned and touch has absolute right for their disposal.
3. This warranty does not cover any failure of the Product due to normal wear and tear, due to misuse (including but not limited to use other than the proper use in accordance with touch instructions for use and maintenance of the Product). Nor

21

does this warranty cover any failure of the Product due to accident, any software installations/ modification/service by unauthorized person, or damage resulting from inadequate ventilation, moisture or liquid damage.

4. The warranty does not cover Product failures which have been caused by use with the Product of any accessories or other peripheral devices which are not touch branded original products.

5. Tampering with any of the seals on the Product will void the warranty.

6. There are no other express warranties, whether written or oral, other than this printed limited warranty. All implied warranties, including without limitation the implied warranties of merchantability or fitness for a particular purpose, are limited to the duration of this limited warranty. In no event shall

22

touch or its licensee be liable for incidental or consequential damages of any nature whatsoever, including but not limited to loss of profits or other business loss. To the full extent those damages can be disclaimed by law.

The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, or the consumer's rights against the dealer arising from their sales/ purchase contract.

23

ENGLISH

TROUBLESHOOTING

In general, if you cannot solve the problem with this manual, you should either switch off your handsfree and your cell phone, and then switch on again or press [Reset] key once.

ALL Rights Reserved
touch-Operated by Beverley Pacific International Limited.
CE

ENGLISH

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes of modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

24

25

繁體中文

目錄

耳機顯示.....	2
電池充電.....	27
耳機的配對.....	29
耳機的開關.....	31
可配耳機.....	32
撥打電話.....	33
重撥最後撥出電話.....	34
接聽電話及結束來電.....	35
拒接來電.....	36
通話轉接.....	37
調整音量.....	38
靜音.....	39
電量不足.....	40
有限保養服務.....	41
疑難排解.....	44

touch
 A BEVERLEY PRODUCT OF THE WORLD

26

27

繁體中文

電池充電


新電池的電量未完全飽和。使用前, 請花 2.5 個小時把電池充滿。電池充滿最多可通話 6 個小時或開機備用 120 個小時。

充電步驟

1. 將變壓器插入 AC 插座中。
2. 連接變壓器與耳機, 直至卡入正確位置。開始充電後, 藍牙耳機上的紅色指示燈會亮起及可聽到鈴聲。
3. 當充滿電後, 藍色指示燈會亮起。此時您會聽到鈴聲。
4. 當充電充滿時, 將耳機從變壓器中拔出。

註: 如果耳機很久未用或電池已耗盡, 充電指示燈將會數分鐘後才亮。

繁體中文

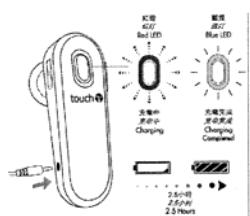

28

耳機的配對

在使用耳機之前，您須將耳機與手機配對。配對完成後，

就可使用了。如果想與另一部手機配對使用，您須重新

與之進行配對，這時與前一部手機就不能配對使用了。

1. 在配對之前須先關閉耳機的電源，按多功能按鈕 8 秒，

直至藍色和紅色指示燈交替閃爍，此時您會聽到鈴聲。

2. 放開多功能按鈕，耳機即處於待配對模式。

3. 在您的藍牙耳機上開始顯示 1 米範圍內的藍牙裝置名

單，選擇 “BT H73B”，進行配對程序（如何在手機上

尋找藍牙裝置，請參考手機用戶使用手冊。）。

4. 按手機指示輸入密碼 “0000”，然後確認。（“0000”

是預設密碼。）配對成功後，只有藍色指示燈會亮，

此時您會聽到鈴聲。當完成配對及連接後便可撥出及

接聽電話。

5. 如果您未在規定的時間內輸入密碼，耳機將返回待配

對模式，此時您會聽到鈴聲。

繁體中文

29

繁體中文

繁體中文

繁體中文

繁體中文

繁體中文

取消配對模式

當耳機處於配對模式時，按多功能按鈕 5 秒，便可取消配對模式，此時您會聽到鈴聲，耳機隨後將返回待配對模式。

耳機的開關

開啟耳機

按多功能按鈕 2 秒，然後您會聽到鈴聲，藍色指示燈開始閃爍，表示耳機已開啟，並可連接手機。

關閉耳機

按多功能按鈕 3 秒，您會聽到鈴聲及紅色指示燈閃爍 3 下，此時表示耳機已關閉。

註：當有來電時，按多功能按鈕 3 秒不可關閉耳機。

繁體中文

繁體中文

繁體中文


繁體中文

30

31

繁體中文

可配耳套

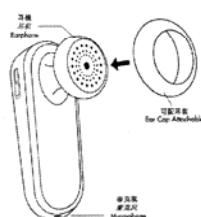

撥打電話

耳機和手機配對成功後，就可以用耳機來撥號和接聽電話了。如果你的手機支援聲控功能，耳機便可使用此功能。詳細操作請參考手機用戶使用手冊。

手機撥號

使用電話按鍵撥打電話，像平常一樣在手機上撥號，電話接通後，聲音會自動轉到耳機中。

使用聲控撥號（確認您的手機支援此功能及已錄下聲音短語。）短按多功能按鍵，說出要通話的人的名字，耳機便會自動撥號並將聲音轉到耳機中，此時您會聽到鈴聲。

32

33

繁體中文

重撥最後撥出電話

當處於非通話中時，連續按多功能按鍵兩次，即可自動重撥最後撥出號碼，此時您會聽到鈴聲。（需配合手機型號使用。）

接聽電話及結束來電

耳機開設後，如有來電，您會聽到來電鈴聲，藍色指示燈會快速閃爍，短按多功能按鍵可接聽電話。再短按多功能按鍵可結束來電，此時您會聽到鈴聲。

如果在接聽一個電話時，有另外一個來電，短按多功能按鍵可接聽另外一個來電，而讓第一個來電等待。

再短按多功能按鍵可結束當前來電，而接聽另一個在等待中的來電。

34

35



繁體中文

拒接來電

當有來電時，如不想接，按多功能按鈕 1 秒便可拒接此來電，此時您會聽到鈴聲。



通話轉接

通話時，您可以按音量遞增按鈕 2 秒來把聲音從耳機轉接到手機中，短按多功能按鈕可把聲音從手機轉回到耳機，此時您會聽到鈴聲。



繁體中文



36



37



繁體中文

調整音量

音量調大

按音量遞增按鈕可調大音量。反復按，到您想要的理想音量為止。當音量達到最大時，您會聽到鈴聲。

音量調小

按音量遞減按鈕可調小音量。反復按，到您想要的理想音量為止。當音量達到最小時，您會聽到鈴聲。



繁體中文

靜音

同時按音量遞增和遞減按鈕 1 秒，便可開啟或關閉靜音功能，此時您會聽到鈴聲。



38



39

繁體中文

電量不足

當耳機已開啟，紅色指示燈閃爍時，表示電量不足，請將耳機充電約 2.5 小時，直到藍色指示燈亮為止。

40

繁體中文

條款

- 只有出示特許經銷商給原廠者發，有詳細購買日期和該產品系列型號及編號的發票正本，並向需修理的產品，在受保養期內，方予保養。如果在購買本產品後，保養單已被撤換或修改，touch 保留拒絕保養的權利。
- 如果 touch 對產品進行修理或更換，對於修理或更換過的產品仍實行有限期保養，限期為產品的剩餘保養期。修理或更換可由功能相等的修復件來完成。更換下的壞件將不退回，touch 有絕對權力將其作任何處理。
- 任何產品的正常磨损、誤用（包括但不局限於不遵循 touch 產品使用和護理指引下的非正常使用）、未經授權的軟件安裝 / 改裝 / 服務、意外事故、未經授權的改裝或調整、因過風不當和受潮致損，均不在保養範圍之內。
- 此保養並不包括由於與其它產品（非 touch 品牌原廠及設計配件或其它連接裝置）一起使用，而導致的產品失效。

42

繁體中文

有限保養服務

如果產品需要保養服務，應將其交回原經銷商或與當地的經銷商聯絡。

本公司的保養條款

依據有限保養的條款，touch 保證本產品自購買之日起的有效保養期內無設計、原料及製造上的缺陷。

售后服务

如果在保養期內，本產品在正常使用情況下，由於設計、原料或者製造上的缺陷而出現問題，在您購買該產品的國家或地區之 touch 授權經銷商或服務夥伴，將根據在此所定明的條款，由其決定進行修理或更換產品。若所交回的產品並非根據以下條款享有保養，touch 及其特許維修中心保留徵收一項手續費的權利。

請注意，當產品修理或更換後，您的個人設定 / 下載或會失去。

41

繁體中文

5. 在產品上改動任何封記將導致保養失效。

6. 本公司只承認此編印的有限保養服務文件，其它任何擔保承諾，不管書面的還是口述的，一概無效。所有非明示的擔保，包括但不局限為某一特殊目的的非明示擔保、可靠性或適合性，均不在此保養擔保範圍內。touch 或其特許者對於法律不予以認的任何性質的偶發性或引發性損壞，包括但不局限於收益損失或其它商業虧損，不負任何法律責任。

本保養的條款並不影響在現行可適用的國家法例下的消費者權益及在實質合約上經銷商相對消費者的權益。

43

繁體中文

繁體中文

疑難排解
在使用本產品時，如遇到問題，請參考用戶使用手冊。
如仍無法解決，請關閉耳機和手機重啟一次或按
Reset 鍵重啟一次。

版權所有，違者必究。
touch - 由捷通電訊有限公司營運。

CE

44

目錄

耳機顯示	2
電池充電	46
耳機的匹配	48
耳機的開關	50
可配耳套	51
撥打電話	52
重撥最後撥出電話	53
接聽電話及結束通話	54
拒接來電	55
通話轉接	56
調整音量	57
靜音	58
電量不足	59
有限保養服務	60
疑難排解	63

touch

45

簡體中文

繁體中文


電池充電
新電池的電量未完全飽和。使用前，請花 2.5 個小時把電池充滿。電池充滿後，最長可通話 6 個小時或開機備用 120 個小時。

充電步驟

1. 將充電器插入(AC)插座中。
2. 連接充電器與耳機，直至卡入正確位置為止(此時耳機上的紅色指示燈會亮起)。
3. 當充滿電後，藍色指示燈會亮起，此時您會聽到鈴聲。
4. 當充電充滿後，將耳機從充電器中拔出。

註：如果耳機很久未用或電池已耗盡，充電指示燈將會數分鐘後才亮。

46

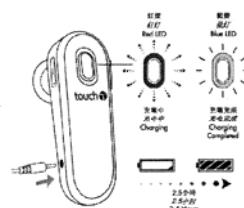

47

簡體中文

簡體中文

耳機的匹配

在使用耳機前，您須將耳機與手機進行匹配。配對完成後，就可使用了。如果想與另一部手機配對使用，您須重新與之進行配對，這時與前一部手機就不能配對使用了。

- 在開始匹配之前，須關閉耳機的電源。按多功能按鍵 8 秒，直至耳機上紅色和藍色指示燈交替閃爍為止，此時您會聽到鈴聲。
- 放開多功能按鍵，耳機就處於待匹配狀態。
- 此時手機上開始顯示：未範圍內的藍牙裝置名單，選“BT1H738”進行匹配。（如何于藍牙手機上搜尋其藍牙裝置，請參考手機用戶使用手冊）。
- 手機要求輸入密碼時，輸入“0000”，然後確認。（“0000”為預存在耳機中的密碼。）匹配成功後，只有藍色指示燈閃爍，此時您會聽到鈴聲。當完成匹配及連接後便可撥出及接聽電話。
- 如果您未在規定的時間內輸入密碼，耳機將返回待匹配模式。此時您會聽到鈴聲。

48

取消匹配模式

當耳機處於匹配模式時，按多功能按鍵 5 秒，便可取消匹配模式，此時您會聽到鈴聲。耳機隨後進入待匹配狀態。

簡體中文

簡體中文

簡體中文

簡體中文

簡體中文

耳機的開關**開啟耳機**

按多功能按鍵 2 秒，此時您會聽到鈴聲，藍色指示燈開始閃爍，表示耳機已開啟，並可連接手機。

關閉耳機

按多功能按鍵 3 秒，然後會聽到鈴聲及紅色指示燈會閃爍 3 下，此時表示耳機已關閉。

註：當有米電時，按多功能按鍵 3 秒不可關閉耳機。

簡體中文

簡體中文

簡體中文

簡體中文

可配耳套

簡體中文

撥打電話

耳機和手機四配成功後，就可以用耳機來撥號和接聽電話。如果您的手機支援聲控功能，便可使用該功能，有關它的詳細操作請參考手機用戶使用手冊。

手機撥號

使用手機按鍵撥號，像平常一樣在手機上撥號即可。電話接通後，聲音會自動轉到耳機中。

使用聲控撥號

(請確認您的手機支援此功能並已錄下聲音短語。)

短按多功能按鍵，隨後您會聽到鈴聲，然後說出您要通電話的人的名字，手機便會自動撥號並將聲音轉到耳機中。

重撥最後撥出電話

當並非通話中或來電情況下，按多功能按鍵兩次，便可自動重撥最後撥出的號碼，此時您會聽到鈴聲。

簡體中文

52

簡體中文

53

簡體中文

簡體中文

接聽電話及結束通話

- 如有來電，會聽到鈴聲及藍色指示燈快速閃爍，短按多功能按鍵 1 秒可接聽來電，短按多功能按鍵便可接聽電話，再短按多功能按鍵可結束通話。
- 再與一人通話時，如有另外一個來電，短按多功能按鍵可讓前一個來電等待，接聽後一個來電。再短按多功能按鍵可結束當前的來電，接聽等待中的來電。

拒接來電

當有來電時，如不想接，按多功能按鍵 1 秒便可拒接此來電，此時您會聽到鈴聲。

54

簡體中文

55

簡體中文



簡體
中文

通話轉接

按音量遞增按鍵 2 秒，您可將聲音從耳機轉接到手機中。短按多功能按鍵可把聲音從手機轉回到耳機中，此時您會聽到鈴聲。



調整音量

音量調大

按音量遞增按鍵可調大音量。反復按，到您想要的理想音量為止。當音量達到最大音量時，您會聽到鈴聲。



簡體
中文

音量調小

按音量遞減按鍵可調小音量。反復按，到您想要的理想音量為止。當音量達到最小音量時，您會聽到鈴聲。

56



57



簡體
中文

靜音

同時按音量遞增按鍵和遞減按鍵 1 秒可靜音，此時您會聽到鈴聲。



電量不足

當紅色指示燈閃爍時，表示電量已不足，請及時充電 2.5 小時，直到紅色指示燈熄滅，藍色指示燈閃爍為止。

58



59



簡體中文

有限保養服務

如果產品需要保養服務，應將其交回原經銷商或與當地的經銷商聯絡。

本公司的保養條款

依據有限保養的條款，touch 保證本產品自原購置日期起的有效保養期內無設計、原料及製造上的缺陷。

售後服務

如果在保養期內，本產品在正常使用下，由於設計、原料及製造上的缺陷而出現問題，在您購買該產品的國家/地區之touch 授權批發商或服務伙伴，將根據在此所定明的條款，由其決定進行修理或更換產品。

若所退回的產品並非根據以下條款享有保養，touch 及其特許維修中心保留征收一項手續費的權利。

請注意，當產品修理或更換後，您的個人設定 / 下載或會失去。

60

條款

- 只有出示特許經銷商給原購者簽發，有詳細購買日期和該產品系列型號及編號的發票正本，纔同意修理的產品，在受保養期內，方予保養。如果在購買本產品後，保養單已被撤換或修改，touch 保留拒絕保養的權利。
- 如果 touch 對產品進行修理或更換，對於修理或更換過的產品仍實行有限期保養，限期為產品的剩余保養期。修理或更換可由功能相等的替換件來完成，更換下的壞件將不會退回。touch 有絕對權力將其作任何處理。
- 任何產品的正常磨損、誤用(包括但不限限於不按照 touch 產品使用和護理指引下的非正常使用)、未經授權的軟件安裝 / 改裝 / 服務、意外事故、未經授權的改裝或調整，因過度不當和受潮致損，均不在保養範圍之內。
- 此保養並不包括由於與其它產品(非 touch 品牌原廠及設計配件或其它週邊裝置)一起使用，而導致的產品失效。

簡體中文

61

簡體中文

5. 在產品上改動任何封記將導致保養失效。

6. 本公司只承認此編印的有限保養服務文件，其它任何擔保承諾，不管書面的還是口述的，一概無效。所有非明示的擔保，包括但不限限於為某一特殊目的的非明示擔保、可售性或適合性，均不在此擔保範圍內。touch 或其消費者對於法律不予以承認的任何性質的偶發性或引發性損壞，包括但不限限於收益損失或其它商業虧損，不負任何責任。

本保養的條款並不影響在現行可應用的國家法例下的消費者應有權益及在買賣合約上經銷商相對消費者的權益。

疑難排解

在使用本產品時，如遇到問題，請參考用戶使用手冊。如仍無法解決，請關閉耳機和手機重啟一次或按 [Reset] 鍵重啟一次。

版權所有，違者必究。

touch - 由捷達電訊有限公司營運。

CE

62

63

64

