

Bluetooth car kit features

- 1.Microphone
- 2.Red LED/Blue LED
- 3.3.5DC Connector
- 4.Volume Down button
- 5.Talk button (Function key)
- 6.Volume up button
- 7.Cigarette plug
- 8.Speaker



■ Prologue.....	1
1. About Bluetooth.....	1
2. How does Bluetooth CAR KIT help you?.....	1
3. Preparation & Start to Use.....	1
4. First Time Use.....	1
■ Preparing to use your Bluetooth car kit.....	2
1 Pairing procedure	2
2. Turning your car kit ON and OFF.....	2
3. Answering a call.....	2
4. Making a call with the car kit by voice dialing.....	3
5. Making a call from the mobile phone keypad.....	3
6. Ending a call from the car kit	3
7. Rejecting an incoming call.....	4
8. Call transfer.....	4
9. Last number redial.....	4
10. Receiver volume control.....	4
■ Instruction-ERI Phones	5
1. Enter into Pairing Mode	5
2. Pairing Between Phones and Car Kit	5
3. To Use Bluetooth Car Kit	5
4. LED Indication.....	7
5. Function Key	7
■ Instruction-NKI Phones(NKI 8910).....	8
1. Enter into Pairing Mode	8
2. Pairing Between Phones and Car Kit	8
3. To Use Bluetooth Car Kit	8
4. Operation.....	9
5. LED Indication.....	10
6. Function Key	11

■ Instruction-NKI Phones(NKI 3650)	12
1.Enter into Pairing Mode.....	12
2.Pairing Between Phones and Car Kit.....	12
3.To Use Bluetooth Car Kit.....	13
4.LED Indication.....	14
5.Function Key.....	14
■ Instruction-SIE Phones.....	15
1.Enter into Pairing Mode.....	15
2.Pairing Between Phones and Car Kit	15
3.To Use Bluetooth Car Kit	16
4.LED Indication.....	18
5.Function Key	18
■ How to resume Bluetooth communication.....	19
■ How to Switch from Bluetooth to Normal.....	20
■ Phone Communication.....	20
■ Suggestion to Volume Setting.....	20
■ Package contents.....	20
■ Compatible charger model list.....	21
■ Charging parameter.....	21

■ Prologue

1. About Bluetooth Technology

Bluetooth makes wireless transmission between all mobile and non-mobile facilities possible. The technique utilizes global sound & digital data 2.4G ISM transmission and makes global communication easily.

2. How does Bluetooth Car Kit help you?

This Bluetooth Unit supports all Bluetooth mobile phones and facilities built-in with Bluetooth audio transmission.

- (a) It wirelessly activates phones located in anywhere within 10 meters(max.) to this unit.
- (b) Voice Activation: To Voice activate phones through microphone of the unit or of phones, subject to phones/devices built-in with voice activation function.
- (c) Press to Answer/End: To answer an incoming call or end a conversation without pressing to phones. Simply press the function key of this unit
- (d) Volume Adjustment: Simply tune the built-in volume switch to adjust volume.
- (e) It makes real Hands-Free & Safe Driving possible.

3. Preparation & Start to Use

Make sure the phone is with Bluetooth function or connected to Bluetooth Adaptor.

4. First Time Use:

- (a) Pairing this unit with phones-Configuration set up
- (b) Keep this unit within 10 meters from the Phones/devices.
- (c) Please refer to Bluetooth function access of individual phone/device.
(Bluetooth access could be varied between different Phones/devices.)

■ Preparing to use your Bluetooth car kit

1 Pairing procedure:

Before using your car kit for the first time. You must pair it with a Bluetooth mobile phone or audio gateway.

- (a) With your car kit turned off. Keep this unit within 10 meters from the phones /devices. Press and hold the Talk button for 8 seconds until the blue and red LEDs alternate rapidly, indicating the Bluetooth car kit is in pairing mode.
- (b) Use your phone's menu to search for Bluetooth audio devices. The phone should indicate it has found the "BC001" car kit. Select this.
- (c) When asked for a Passkey, enter : "0000". Your phone will confirm that pairing has been successful.
- (d) If pairing does not occur as expected. Turn off both the phone and the car kit and wait 10 seconds before repeating steps A-C.

2 Turning your car kit ON and OFF

- (a) To switch your car kit ON, Press the Talk button and hold for about 6 seconds until the blue LED turns on. Press talk button once more to link your car kit to your mobile phone.
- (b) To switch your car kit OFF, press the Talk button and hold for 5 seconds until the red LED flashes, and then the car kit will turn off.

3 Answering a call

Press Talk button on Bluetooth car kit to answer the call. If your mobile phone supports auto-answering and the feature is properly set up, the Bluetooth car kit will take the incoming call automatically and you don't need to press any button.

4 Making a call with the car kit by voice dialing

If your Bluetooth phone supports voice dial, you can use this feature with the Bluetooth car kit. Please refer to your phone's user guide for more information on voice dial.

- (a) Voice dial function on your phone must be turned on and voice tags must be stored.
- (b) On the car kit, press Talk button once.
- (c) A short tone will prompt you and you can speak the "voice tag" that was stored in the phone's voice dial phone book.
- (d) The phone automatically dials the contact you've selected, and you can see the details of the call on the phone display.
- (e) When connected, you can communicate normally using the car kit.

Note: To cancel voice dial, press the Volume Down button and hold for 5 seconds.

5 Making a call from the mobile phone keypad

- (a) Dial the phone number using the keypad on the mobile phone.
- (b) To send the call, press the phone's SEND/CALL key.
- (c) The call will then be transferred automatically to the Bluetooth car kit when connection is made.

6 Ending a call from the car kit

To end a call, press Talk button once. Or you can end the call from the keypad on the phone.

When the other part hangs up the phone, the call ends automatically.

7 Rejecting an incoming call

To reject an incoming call, press and hold the Talk button for 3seconds on the Bluetooth car kit .

Note:This function only works on Bluetooth phones that support Hands-free profile.

8 Call transfer

When in conversation, you may transfer voice from Bluetooth car kit to phone.

Press the Talk button for 3 seconds to make the transfer.

Note:This function only works on Bluetooth phones that support Hands-free profile.

9 Last number redial

When the Bluetooth car kit is in standby condition(not in conversation), press the Volume Up button for 5 second, and your phone will redial the last number that you called.

Note:This function only works on Bluetooth phones that support Hands-free profile.

10 Receiver volume control

The Bluetooth car kit has 7 pre-set volume levels. To increase the volume, Press the Volume Up button; to decrease the volume, press the Volume Down button. You may also use phone's volume up/down buttons to adjust the car kit volume.

■ **Instruction ERI Phones:**

1 Enter into Pairing Mode:

- (a) This unit is set to stand-by mode as default Blue LED blinks every 3 seconds
- (b) To enter into pairing mode.
 - (1) First set this unit to OFF mode. (To enter into OFF mode, please press the Talk button Key for 5 seconds until LED is off. Mean while, A short beep will come up.)
 - (2) Press the Talk button for 8 seconds(approx) until the Blue and red LED blink alternately. Mean while, a short beep will come up.

2 Pairing Between Phones and Car Kit:

- (a) Initiate Bluetooth function of your phones and search for Bluetooth devices. For example: ERIT68i, procedure is "Menu/Connect/Bluetooth/Paired Device/Add Device/Phone initiates/ All types"
- (b) The phones will start searching for Bluetooth devices. If it's successful, the phone screen will display the name of obtained device "BC001" (this can be customized upon customer's request). Press "Yes" to Pair this unit to the phone.
- (c) Input ID code Of this unit -"0000" (this can be customized upon customer's request). Press "Yes" to complete Pairing. (Bluetooth access could be varied between different Phones/ devices. Users are recommended to refer to the User's Manual.) Mean while, This unit is under stand-by mode. The blue LED blinks every 3 seconds.
- (d) To cancel pairing, press talk button and hold for 6 seconds until the Red LED is off. Mean while, a short beep will comp up.

3 To Use Car Kit:

Once pairing is successful. This unit is under stand-by mode and ready for Bluetooth communication. Mean while. blue LED blinks every 3 seconds. Please locate this unit within 10 meters(max.) to phones.

(a)To Answer a Call:

When a call is in, a ringing tone will come out of this unit. Press Talk button to answer a call. (User may press phone key to answer, too.) Once it's under talking status, blue LED blinks every 1 second.

(b)Not to Answer a Call:

When a call is in, a ringing tone will come out of this unit. If user doesn't intend to answer this call. Press talk button key and hold for 3 seconds until ringing tone is off.

(c)Dialing out:

After pairing is done, user may dial out numbers through phones and talk through this unit. During conversation, blue LED blinks every 1 second.

(d)Voice Activation:

To voice dialing, under stand-by mode, press Talk button to enter into Bluetooth connection mode. Blue LED blinks every 1 second with a short beep coming out of this unit. User may talk to mic. Of this unit for voice dialing. If it's successful, blue LED stays blinking every 1 second. If it's not successful, this until will resume to stand-by Mode. Blue LED blinks every 3 seconds. Users are recommended to refer to voice dialing procedure of individual phone.

(e)Redialing:

If your mobile phone supports redialing, user may press volume up button and hold 5 seconds to access the last numbers.

(f)Volume Adjustment:

To increase the volume, Press the Volume Up button, to decrease the volume, press the Volume Down button. You may also use phone's volume up/down buttons to adjust the car kit volume.

4 LED Indication

Status	LED Indication
Poweroff	LED off
Stand-by	Blue LED blinks every 3 seconds
Incoming calls	Blue LED blinks every 1 second
Outgoing calls	Blue LED blinks every 1 second
Under pairing	Blue and red LED blink alternately
Complete pairing	Blue LED blinks every 3 seconds

5 Function Key:

(a) Short Press:

To change from stand-by mode into automatic Bluetooth connection mode.

Under talking mode, it may terminate conversation and resume stand-by mode

(b) Constant 6-second Press:

To change from off mode into stand-by mode; vice versa.

To change from stand-by mode into off mode; vice versa.

(c) Constant 8-second Press:

To Change from off mode into pairing mode.

■ Instruction-NKI Phones(NKI8910)

1 Enter into Pairing Mode:

- (a) This unit is set to stand-by mode as default Blue LED blinks every 3 seconds
- (b) To enter into pairing mode,
 - (1) First set this unit to OFF mode. (To enter into OFF mode, please press the Talk button key for 5 seconds until LED is off. Mean while. A short beep will come up.)
 - (2) Press the Talk button for 8 seconds(approx) until the Blue and red LED blink alternately. Mean while, a short beep will come up.

2 Pairing Between Phones and Car Kit:

- (a) Initiate Bluetooth function of your phones and search for Bluetooth devices. For example: NKI 8910, procedure is "Menu/Bluetooth/search for audio accessories"
- (b) The phones will start searching for Bluetooth devices. If it's successful, the phone screen will display the name of obtained device "BC001" (this can be customized upon customer's request). Press "Yes" to Pair this unit to the phone.
- (c) Input ID code Of this unit- "0000" (this can be customized upon customer's request). Press "Yes" to complete Pairing. (Bluetooth access could be varied between different Phones/devices. Users are recommended to refer to the User's Manual.) Mean while, This unit is under stand-by mode. The blue LED blinks every 3 seconds.
- (d) To cancel pairing, press Talk button key and hold for 6 seconds until the Red LED is off. Mean while, a short beep will come up.

3 To Use Car Kit:

Once pairing is successful. This unit is under stand-by mode and ready for Bluetooth communication. Mean while. blue LED blinks every 3 seconds. Please locate this unit within 10 meters(max.) to phones.

- (a) Car Kit initiates connection to phones:

Under stand-by mode. Short press talk button will cause car kit initiating connection to phones. In the mean time, the phone screen will display "Connect with BC001?". Please press "Accept" to accept connection. Please press "Reject" to refuse connection.

Note: Please be reminded if car kit is off power, connection to phone will be off. If car kit is powered on again, car kit will connect to the phone automatically. Meanwhile the phone screen will show "Connect with BC001?". Please press "Accept" to accept connection.

(b) Phones initiates connection to Car Kit:

Please refer to individual phone operation manual. For example: NKI 8910 procedures is "Menu/Bluetooth/View paired Devices/Car Kit/Establish Bluetooth connection". After completion of connection, phone mode is under Bluetooth communication mode.

4 OPERATION:

(a) To Answer a Call:

When a call is in, a ringing tone will come out of this unit. Press talk button to answer a call. (User may press phone key to answer, too.) If phone is set under auto answering mode, user do not need to press any button to access calls. It'll be divert to car kit automatically. Once it's under talking status, the blue LED blinks every 1 second.

(b) Not to Answer a Call:

When a call is in, a ringing tone will come out of this unit. If user doesn't intend to answer this call, press and hold talk button for 3 seconds until ringing tone is off.

(c) Dialing out:

After pairing is done, user may dial out numbers through phones and talk through this unit. During conversation, blue LED blinks every 1 second.

(d) Voice Activation:

To voice dialing, under stand-by mode, press talk button to enter into Bluetooth connection mode-blue LED blinks every 1 second with a short beep coming out of this unit. User may talk to mic. Of this unit for voice dialing. If it's successful, blue LED stays blinking every 1 second. If it's not successful, this until will resume to stand-by mode-blue LED blinks every 3 seconds. Users are recommended to refer to voice dialing procedure of individual phone.

(e) Redialing:

If your mobile phone supports redialing, user may press volume up button and hold 5 seconds to access the last numbers.

(f) Volume Adjustment:

To increase the volume, Press the Volume Up button, to decrease the volume, press the Volume Down button. You may also use phone's volume up/down buttons to adjust the car kit volume.

(g) To Discontent Bluetooth connection between phones and Car Kit:

After completion of pairing, this unit is under Bluetooth connection mode- blue LED blinks every 3 seconds. To remove connection, please operate disconnection through the pre-connected phone. Procedure is "Menu/ Bluetooth/View active device/Select/Car Kit/Disconnection") Mean while, this unit will resume stand-by mode and ready for connection again.

5 LED Indication

Status	LED Indication
Poweoff	LED off
Stand-by	Blue LED blinks every 3 seconds
Incoming calls	Blue LED blinks every 1 second
Outgoing calls	Blue LED blinks every 1 second
Under pairing	Blue and red LED blink alternately
Complete pairing	Blue LED blinks every 3 seconds

6 Function Key:

(a) Short Press:

To change from stand-by mode into automatic Bluetooth connection mode. Under talking mode, it may terminate conversation and resume stand-by mode.

(b) Constant 6 second Press:

To change from off mode into stand-by mode; vice versa.

To change from stand-by mode into off mode; vice versa.

(c) Constant 8 second Press:

To Change from off mode into pairing mode.

NOTE:

(a) Under connection mode, the talk button of this unit can be only used to answer or end a call. This is because under connection mode, operation needs to go through the connected phone. If user intend to connect this unit to other phones, please first remove the pre-connection through the pre-connected phones. (Pairing to the pre-connected phone can stay on. No need to remove pairing.)

■ Instruction-NKIPhones(NKI3650)

1 Enter into Pairing Mode:

- (a) This unit is set to stand-by mode as default Blue LED blinks every 3 seconds
- (b) To enter into pairing mode,
 - (1) First set this unit under OFF mode. (To enter into OFF mode, please press the talk button for 5 seconds until LED is off. Mean while, a short beep will come up.)
 - (2) Press the Talk button for 8 seconds(approx) until the Blue and red LED blink alternately. Mean while, a short beep will come up.

2 Pairig Between Phones and CAR KIT:

- (a) Initiate Bluetooth function of your phones and search for Bluetooth devices.
For example: NKI 3650 procedure is "Menu/Bluetooth/Paired devices/New paired device / select device found".
- (b) The phones will start searching for Bluetooth devices. If it's successful, the phone screen will display the name of obtained device "BC001" (this can be customized upon customer's request). Press "Yes" to Pair this unit to the phone.
- (c) Input ID code of this unit - "0000" (this can be customized upon customer's request). Press "Yes" to complete pairing. (Bluetooth access could be varied between different phones/ devices. Users are recommended to refer to the User's Manual.) Mean while, this unit is under stand-by mode- blue LED blinks every 3 seconds. To enter into connection mode. User needs to operate connection through the pre-paired phone/device. Procedure is "Menu/Bluetooth/Paired devices/select device /Options /select Connect".
- (d) To cancel pairing, press talk button key and hold for 6 seconds until Red LED is Off. Mean while, a short beep will come up.

3 To Use CAR KIT:

Under Bluetooth connection mode-blue LED blinks every 3 seconds. Please locate this unit within 10 meters (max.) to phones. Please be reminded if connection is removed, re-connection to car kit is needed.

(a) To Answer a Call:

When a call is in, a ringing tone will come out of this unit. Press talk button to answer a call. (User may press phone key to answer, too.) If phone is set under auto answering mode, user do not need to press any button to access calls. It'll be divert to car kit automatically. Once it's under talking status, blue LED blinks every 1 second.

(b) Not to Answer a Call:

When a call is in, a ringing tone will come out of this unit. If user doesn't intend to answer this call, press talk button for 3 seconds until ringing tone is off.

(c) Dialing out:

After pairing and under connection mode. User may dial out numbers through phones and talk through this unit. During conversation, blue LED blinks every 1 second.

(d) Redialing:

If your mobile phone supports redialing, user may press volume up button and hold 5 seconds to access the last numbers.

(e) Volume Adjustment:

To increase the volume, Press the Volume Up button, to decrease the volume, press the Volume Down button. You may also use phone's volume up/down buttons to adjust the car kit volume.

(f) To Disconnect Bluetooth connection between phones and Car Kit:

After completion of pairing, this unit is under Bluetooth connection mode-blue LED blinks Every 3 seconds. To remove connection, please operate disconnection through the pre-Connected phone. Procedure is "Menu/ Bluetooth / View active device / Select / car kit / Disconnection". Mean while, this unit will resume stand-by mode and ready for connection again.

4 LED Indication

Status	LED Indication
Poweroff	LED off
Stand-by	Blue LED blinks every 3 seconds
Incoming calls	Blue LED blinks every 1 second
Outgoing calls	Blue LED blinks every 1 second
Under pairing	Blue and red LED blink alternately
Complete pairing	Blue LED blinks every 3 seconds

5 Function Key:

(a) Short Press:

To change from stand-by mode into automatic Bluetooth connection mode. Under talking mode, it may terminate conversation and resume stand-by mode.

(b) Constant 6-second Press:

To change from off mode into stand-by mode; vice versa.

To change from stand-by mode into off mode; vice versa.

(c) Constant 8-second Press:

To Change from off mode into pairing mode; vice versa.

NOTE:

(a) Under connection mode, the talk button of this unit can be only used to answer or end a call. This is because under connection mode, operation needs to go through the connected phone. If user intend to connect this unit to other phones, please first remove the pre-connection through the pre-connected phones. (Pairing to the pre-connected phone can stays on. No need to remove pairing.)

■ **Instruction-SIE Phones:**

1 Enter into Pairing Mode:

(a) This unit is set to stand-by mode as default Blue LED blinks every 3 seconds

(b) To enter into pairing mode

(1) First set this unit to OFF mode. (To enter into OFF mode, please press the Talk button Key for 5 seconds until LED is off. Mean while. A short beep will come up.)

(2) Press the Talk button for 8 seconds(approx) until the Blue and red LED blink alternately. Mean while, a short beep will come up.

2 Pairing Between Phones and Car Kit:

(a) Initiate Bluetooth function of your phones and search for Bluetooth devices.

For example: SIEM S55, procedure is "Menu/setup/Connectivity/Bluetooth/options / Search for Access/Accessories."

(b) The phones will start searching for Bluetooth devices. If it's successful, the phone screen will display the name of obtained device "BC001" (this can be customized upon customer's request). Press "Yes" to Pair this unit to the phone.

(c) Input ID code Of this unit- "0000" (this can be customized upon customer's request). Press "Yes" to complete Pairing. (Bluetooth access could be varied between different Phones/devices. Users are recommended to refer to the User's Manual.) Mean while, This unit is under stand-by mode. The blue LED blinks every 3 seconds.

(d) To cancel pairing, press talk button key and hold for 6 seconds until Red LED is Off. Mean while, a short beep will come up.

3 To Use Car Kit:

Once pairing is successful, this unit is under stand- by mode and ready for Bluetooth communication. Mean while, blue LED blinks every 3 seconds.

Please locate this unit within 10 meters(max..)to phones.

(a) To Answer a Call:

When a call is in, a ringing tone will come out of this unit. Press talk button to answer a call. (User may press phone key to answer, too.) Once it's under talking status, blue LED blinks every 1 second.

(b) Not to Answer a Call:

When a call is in, a ringing tone will come out of this unit. If user doesn't intend to answer this call, press talk button and hold for 3 seconds until ringing tone is off.

(c)Dialing out:

After pairing is done, user may dial out numbers through phones and press Talk button of this unit, then user may talk through this unit. During conversation, blue LED blinks every 1 second.

(d)Voice Activation:

To voice dialing, under stand-by mode, press talk button to enter into Bluetooth connection mode. The blue LED blinks every 1 second with a short beep coming out of this unit. User may talk to mic. of this unit for voice dialing. If it's successful, blue LED stays blinking every 1 second. If it's not successful, this until will resume to stand-by mode. The blue LED blinks every 3 seconds. Users are recommended to refer to voice dialing procedure of individual phone.

(e)Redialing:

If your mobile phone supports redialing, user may press volume up button and hold 5 seconds to access the last numbers.

(f)Volume Adjustment:

To increase the volume, Press the Volume Up button, to decrease the volume, press the Volume Down button. You may also use phone's volume up/down buttons to adjust the car kit volume.

4 LED Indication

Status	LED Indication
Poweroff	LED off
Stand-by	Blue LED blinks every 3 seconds
Incoming calls	Blue LED blinks every 1 second
Outgoing calls	Blue LED blinks every 1 second
Under pairing	Blue and red LED blink alternately
Complete pairing	Blue LED blinks every 3 seconds

5 Function Key:

(a) Short Press:

To change from stand-by mode into automatic Bluetooth connection mode
Under talking mode, it may terminate conversation and resume stand-by mode.

(b) Constant 6 second Press:

To change from off mode into stand-by mode; vice versa.
To change from stand-by mode into off mode; vice versa.

(c) Constant 8 second Press:

To change from off mode into pairing mode; vice versa.

■How to resume Bluetooth communication

Connection Status	Phones	Process to Resume Bluetooth Communication
1.Bluetooth Communication Disconnected after Completion of Pairing	NKI8910 NKI6310	Press function Key shortly. This car Kit Will re-connect to phones. Mean While. LCD will display "Connected With Car Kit/Earpiece" for users to select.
	ERIT39 ERIT68i	Auto connection and always under Stand-By mode. No further step is needed.
2. Phone Power Off, then Resume Power On after Completion of Pairing	NKI8910 NKI6310	Press function Key shortly. This car Kit Will re-connect to phones. Mean while, LCD will display "Connected With Car Kit / Earpiece" for Users to select
	ERIT39 ERIT68i	Auto connection and always under Stand-By mode. No further step is needed.
3. Car Kit Power Off(Off Car DC socket or Press Function Key over 6 seconds), then Resume Power on after Completion of Pairing	NKI8910 NKI6310	Auto connection. Mean While, LCD will display "Connected with Car Kit / Earpiecee" for users to select.
	ERIT39 ERIT68i	Auto connection and always under Stand-By mode. No further step is needed.
4. Both Phone & Car Kit Power Off(off car DC socket or Press Function Key over 6 seconds), then Resume Power On after Completion of Pairing	NKI8910 NKI6310	Press function Key shortly for re-connection. Mean while, LCD will display "Connected with Car Kit / Earpiece" for users to select.
	ERIT39 ERIT68i	Auto connection and always under Stand-By mode. No further step is needed.

■ How to Switch from Bluetooth to Normal Phone Communication

NKI8910 Nkl6310	Select Option/Headset
ERIT39 ERIT68	Remove car Kit off DC plug. It cannot be accessed through phones.

■ Suggestion to Volume Setting

- 1.Owing to this car kit is universal version and fits most of Bluetooth phones. volume output will be varied because of different performance of phones. Suggested volume level of phone is middle level&of car speaker is the highest level. Users might need to adjust it according to performance of different phones.
- 2.When phones are in use, for SONY/ERCT39,T68I,NKI 6310 & 8910, volume level is automatically set at middle Volume

FCC NOTE:

The antenna provided is a unique antenna. By installation of unauthorized antenna to this equipment. Such unauthorized installation could void the user's authority to operate the equipment.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could also void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.