 


PTAB780
20130826



Quick Start Guide
Model : PTAB780

In the box

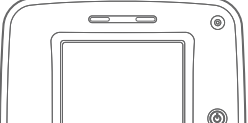

7" Kids Tablet



Quick Start Guide




USB Cable



AC Adapter

Buttons, ports & hardware

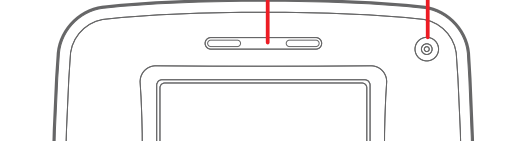

- Power
- Home
- Back
- Volume Up
- Volume Down



- Speaker
- Front Camera




- Rear Camera
- SD Card Slot
- Display Lock
- USB Port
- Headphone Jack

Basic operation



Power ON
Press and hold the Power button until the startup screen appears.

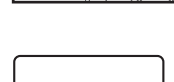

Power OFF
Press & hold the Power button until the "Power off" option appears.



Lock the tablet (standby)
Briefly press the Power button. (Lock the device to conserve the battery).




Unlock the tablet
Slide the "Lock icon" to the right.




Display lock

Charging the battery:
The adaptor is not a toy and should be connected to the wall outlet by an adult.
Connect the tablet to a wall outlet using the included AC adaptor.

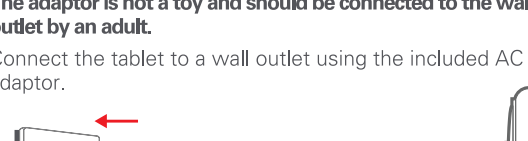

WARNING:
Adaptor cord could be a strangulation hazard.
Please carefully read "Care & safety precautions" on the other side of the Quick Start Guide before charging / using this tablet.

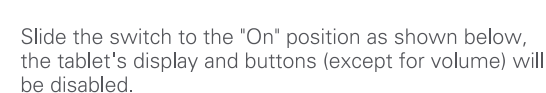

Bottom View
Display lock



OFF **ON**

Battery Tips:
Slide the "Lock icon" to the right to shorten charging time.
• Turn off Wi-Fi when it's not in use.
• To optimize battery time and performance, adjust the "Brightness" and "Screen timeout" options in Settings.

Wi-Fi setup

To access the AppShop and download apps, watch videos, and more, you must first connect the tablet to the internet. To set up Wi-Fi:

- Select  on the Home screen (Settings).
- Select "Wi-Fi Setup".
- Turn Wi-Fi on and select a network.
- If required, enter the correct password and select "Connect".

Wi-Fi connected.

Parental controls

To control the apps that your children have access to, use the tablet's built-in **Parental Controls**.

- Select  on the top right of the display.
- Select "Parental Controls".
- Create a password and select "ok".
- Select "Restricted Apps".

Other options for parents:

- Online Help.
- Settings (offers full settings options)
- Download App Stores (although the tablet includes a kid-safe app store, for your convenience we have provided links to several other app stores that can easily be accessed here).

Safe browser

Completely control your child's web environment using the Safe Browser.

- Select  on the Main home screen.
- Select the "+" icon on the bottom right of the screen and create a password (we recommend using the same password used in Parental Controls).
- Select "Add more links to safe sites".
- Enter the desired URL and title.
- Select OK.

Home screens
Access the kid-safe AppShop and FreePlay (an easy place for children to find and download free apps).

Main home screen
When is selected the Main home screen appears.

Game home screen
Includes 34 super-fun, easy to play games for boys and girls.

All Apps screen
To see all the apps on the tablet select the "All Apps" tab.

New Apps screen
When is selected, the New Apps screen appears. Only new apps that are downloaded from the AppShop, or other places are displayed here making them easier for children to find.

Use the button to go back to the home screen

Inserting a SD card
The tablet supports SD cards up to 32GB (not included). To install a SD card into the tablet, insert the card as shown below into the card slot until it clicks and locks into place.

Front View
Insert face down

[illegible]