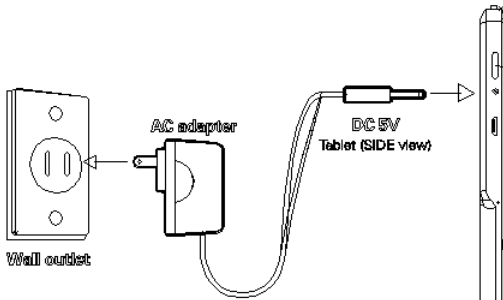 

 
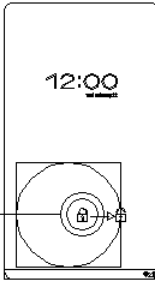 

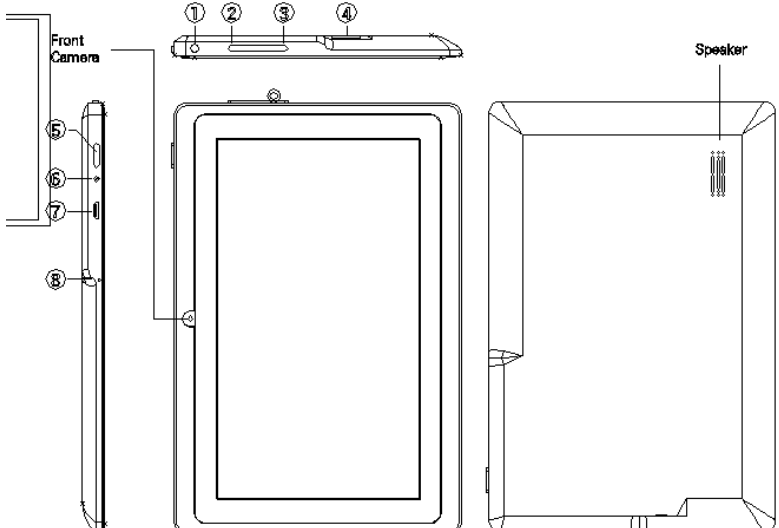 



# Q8 operating instructions

Basic operation	
<p><b>Charging the battery:</b> Connect the tablet to a wall outlet using the included AC adapter.</p>  <p>Wall outlet      AC adapter      DC 5V Tablet (SIDE view)</p>	<p><b>Turning on the tablet</b></p> <p>Press and hold the  button until the startup screen appears.</p>  <p>Startup screen</p> <p>Unlock (enter) the tablet</p> <p>Slide the "Lock icon" to the right.</p>  <p>Lock icon      Lock screen</p> <p><b>Lock (standby) the tablet</b> To lock or unlock the tablet, briefly press the  button (Lock the device to conserve the battery).</p>
<div style="border: 1px solid black; padding: 5px;"> <p><b>Battery Tips:</b></p> <ul style="list-style-type: none"> <li>◦ Turn off Wi-Fi when it's not in use.</li> <li>◦ Lock the tablet (the display is off) to shorten charging time.</li> <li>◦ To optimize battery time and performance, adjust the "Brightness" and "Screen timeout" options in the Settings app.</li> </ul> </div>	

Location of controls	
 <p>Front Camera</p> <p>Speaker</p>	<ul style="list-style-type: none"> <li>① Headphone Jack</li> <li>② Volume +</li> <li>③ Volume -</li> <li>④ MicroSD Card Slot</li> <li>⑤ Power/Lock/Unlock</li> <li>⑥ DC Input</li> <li>⑦ Micro USB Port</li> <li>⑧ Microphone</li> </ul>


## Connecting the tablet to a PC or Mac:

 1. Connect the included USB cable to the 'USB port' of the tablet and USB port of the computer.

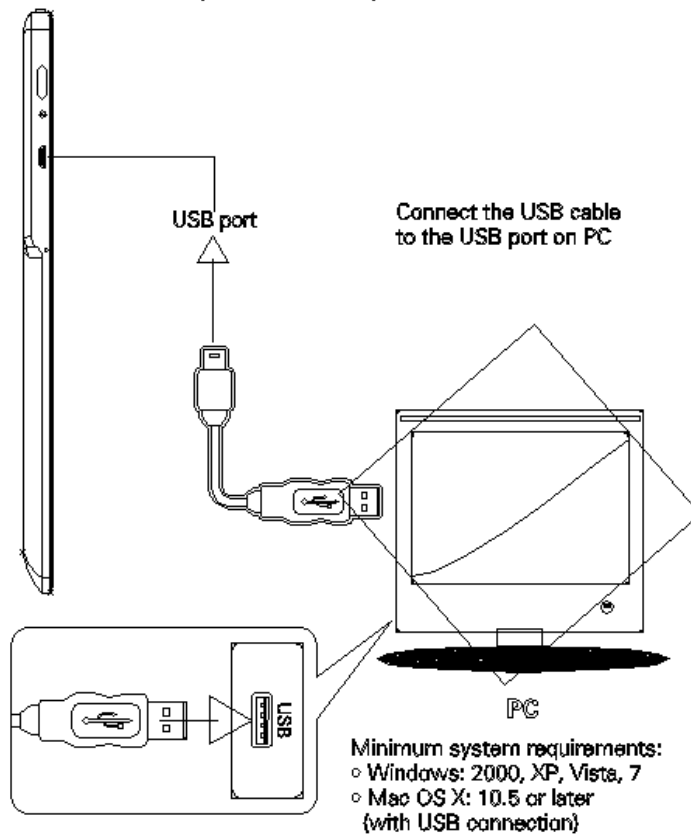

2. The "USB connected" screen appears, select "Turn on USB storage", then select "OK".

 3.

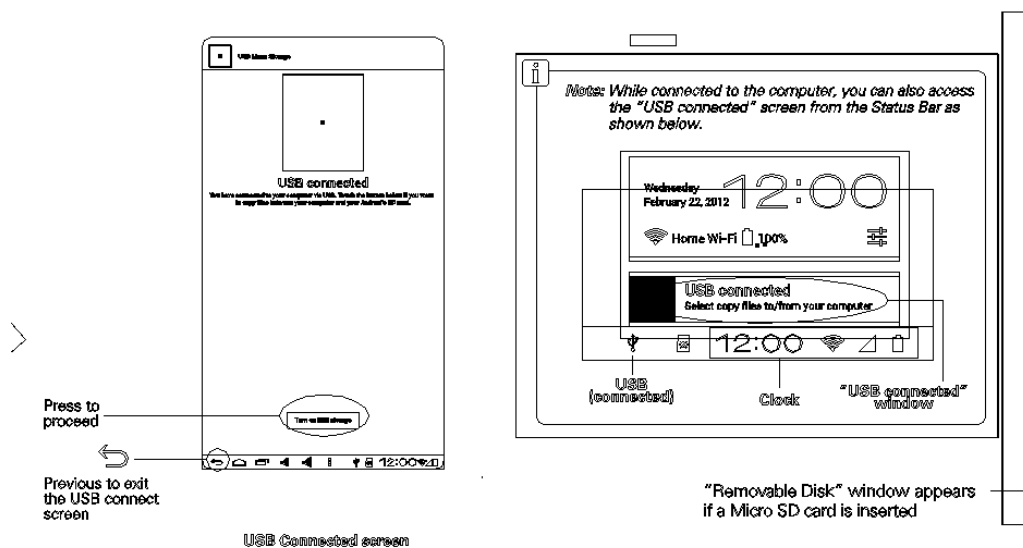


## Transferring and managing files


It is possible to manage and transfer media files to the tablet by connecting it to your computer.

### Conserve Internal Memory!

 It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.



Micro SD card

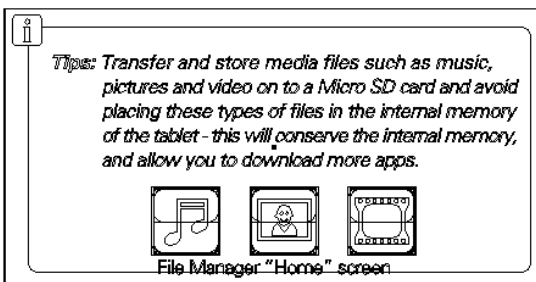 

File Manager "Home" screen

### Inserting Micro SD card

The tablet supports Micro SD cards up to 32GB (not included).


To install a Micro SD card into the tablet:

1. Insert the card as shown below, into the card slot until it clicks and locks into place.



## Restore

 
If the problem persists it may be necessary to restore the tablet to the factory default settings:

- 1) Select  "Settings" from the Apps screen.
- 2) Select "Backup & reset".
- 3) Select "Factory data reset" (this will erase data stored on the device so make sure to back up your data prior to using this option).



Backup & reset

× 路径

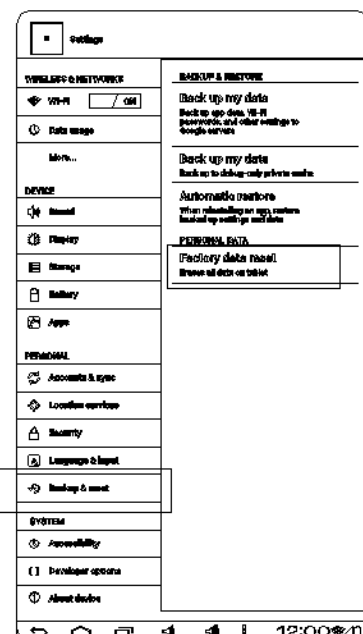


# Software updates

Your tablet is capable of receiving OTA (over the air) updates. The tablet is set to automatically check for updates, and will notify you when there is an update available.


## Manually check for updates

To manually check for updates, follow the instructions below: (You must connect to Wifi before checking for updates)

 1. On the app screen, select "Settings"
2. Under the "System" tab, select "Software update"
3. Select "Update" to manually check for OTA updates

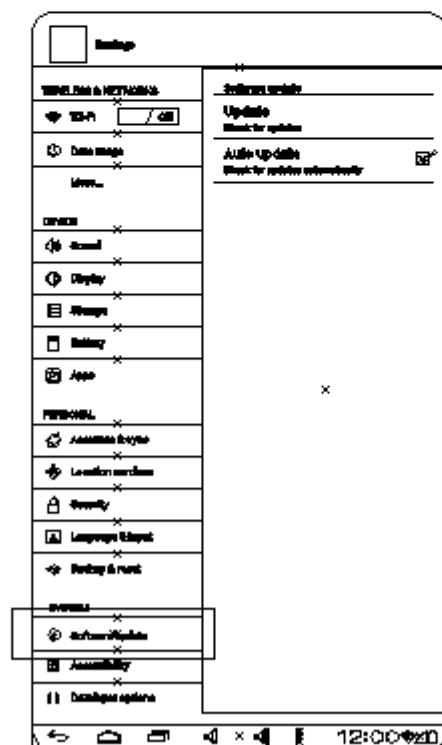

OTA Update screen

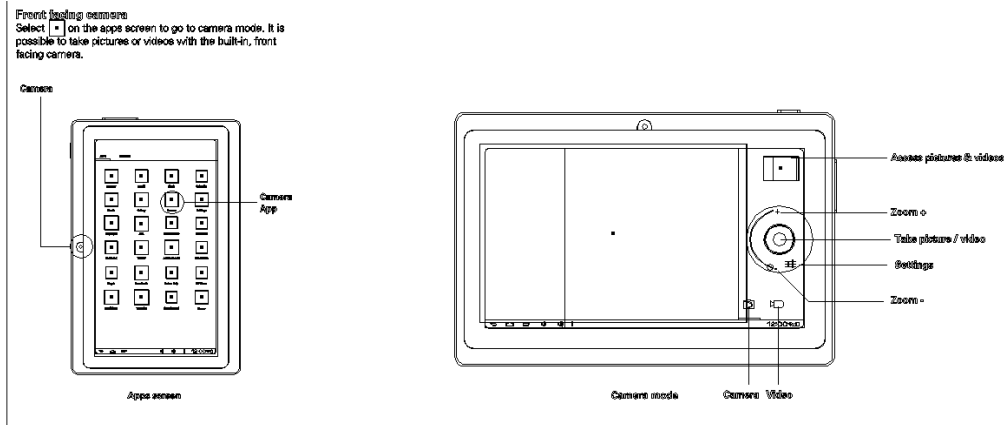 

### FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.