

130 mm

Item No.:WD0604i

Ghost

A taut, sleek and fast car controlled by iPod touch, iPhone or iPad.

Welcome to Woddontoy

Congratulations on your purchase and welcome to the woddontoy. The Ghost's unique and attracting appearance, fast speed and spring suspension and dual core motives will give you a very impressed experience.

Warning with regard to placing the product

- Do not use this product in an environment that is with extreme heat or cold, dust or damp.
- Avoid placing the product in an area that is not properly ventilated; do not cover and place the product on carpeting or similar surfaces.
- Do remember to put away the USB cable when product is fully charged. Otherwise, the product might fall on to the floor when the USB cable is moved.
- Do not expose the product to direct sunlight, fire, or other sources of heat that have an extreme effect on the temperature.

Caution

- When charging this product using the USB charging cable, always hold the charging plug to plug in and out. If you pull the cable instead of the charging plug, the charging cable might get damaged and there is a risk of short-circuiting or electric shocks.

1. Specification

Driving time: 10-15 minutes
Charging time: 60-70minutes
Control distance: 10-15m
Battery for Ghost: Li-Po 3.7V 550 mAh
Size: 16.4 x 11.1 x 7.8 cm
Ghost weight: 374 g
Note: The different environmental condition and using way may lead to above specification different.

2. Getting to know Ghost

3. Unpacking and storing Ghost

4. Once the GREEN charging indicator turns off, it means that Ghost is fully recharged (pic.4)
Note: Be sure that the battery in Ghost has been cooled down for 10-15 minutes after driving before recharging.

5. Battery care information

The Ghost is powered by rechargeable Li-Po battery. Li-Po battery is not replaceable.

- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are only to be charged by adults or by children at least 8 years old.
- Regularly examine the USB charging cable or smart phone plug adapter (not provided) for any damage to the cord plug, enclosure and other parts, in case of damage do not use until it has been repaired.
- The car should not be connected to any other power supply than the ones recommended.

6. Driving instruction

1) Download software
iPod touch (4th generation)
iPhone 4S, iPhone 4 and iPhone 3GS
iPad (3rd generation), iPad 2 and iPad

2) Connecting iPod touch, iPhone or iPad
Power Button
Indicator

3) Turn on the car. The blue light inside the car flickering three times per second, please turn recharge the car.

4) Go to App store
Settings
General
iCloud
Mail, Contacts, Calendars
Twitter
iTunes Wi-Fi Sync
Open Bluetooth of iPod touch, iPhone or iPad

5) Search, download and install 'iConCar'
1
2
3

6) ⑥

7) ⑦

8) ⑧

9) ⑨

10) ⑩

11) ⑪

12) ⑫

13) ⑬

14) ⑭

15) ⑮

16) ⑯

BACK

FCC Warning:

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

FCC RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

For more information and tips please visit our website or email us.
www.woddontoy.com
service@woddontoy.com

3) Start driving Ghost

- 1 iConCar Start
- 2 iConCar Play
- 3 iConCar Select the mode

4) a) if you choose 'Touch' to control the car, the default setting is for two-hand operation. You might easily learn to master the car by learning the buttons.

5) b) if you choose 'Motion' to control the car, the default setting is for two-hand operation. You might easily learn to master the car by learning the buttons.

6) ⑮

7. Play tips

- You can enjoy a driving time of 10-15 minutes if Ghost is fully charged.
- When driving, do not move the left lever too quickly as this will cause Ghost to drive too fast. To start driving, move the left lever smoothly and continuously up or down.
- The control distance of Ghost is 10-15 meters. You need to keep Ghost within the control area range.

8. Troubleshooting

Problem	Possible cause	Solution
Cannot control the car.	Other strong radio wave or controller disturb your smartphone control. The car drives out of the control area range. The battery of car is exhausted.	Drive the car in an environment without interference. Drive the car in the control area range. Recharge the car.
Open Bluetooth of iPod touch, iPhone or iPad, but cannot search 'iConCar'.	The power switch of the car turns off. The car is connected by another device.	Power switch of the car turns on. Find another device and close the connection. Restart the car and reconnect in another place.
The battery of the car is exhausted.	The battery of the car is exhausted.	Recharge the car.
Fail to connect between Bluetooth and the car.	The car is connected by another device and close the connection. Restart the car and reconnect in another place. The Bluetooth connects to the previously used device.	Find another device and close the connection. Restart the car and reconnect in another place. Reopen Bluetooth and restart the car, set up the connection again.
Cannot open the operating interface of the software.	The Bluetooth is not connected.	Open Bluetooth and connect.
Cannot drive the car.	Something wrong with iPod touch, iPhone or iPad. The car is not activated. The car is driving slowly.	Restart the device or change another device. Move the left lever of the software to activate the car. Recharge the car.
The car spins.	The battery of car is exhausted. The car drives out of the control area range. If the car spins left, turn the trimmer to right. If the car spins right, turn the trimmer to left.	Recharge the car. Drive the car in the control area range. If the car spins left, turn the trimmer to right. If the car spins right, turn the trimmer to left.

9. Environment

For user who is willing to protect the environment. The consumer has a significant role to play in reducing the impact of waste electrical and electronic equipment in the environment, through re-using or recycling such equipment. Some of the components used in electrical and electronic equipment may contain hazardous substances that can damage the environment and present a risk to human health if not properly disposed of.

Battery contains substances that may pollute the environment. Do not throw away battery with the normal waste, but dispose of them at an official collection point for battery. Always remove the battery before you discard and hand in the appliance at an official collection point.

10. Waste Batteries removal

Follow the steps below for safe removal of the battery.

- Turn off Ghost.
- Unscrew the bottom of Ghost.
- Take off the bonnet of Ghost.
- Cut off the red and black wire one by one, as not be cut off at once.

1) ⑯

2) ⑰

3) ⑱

4) ⑲

810 mm