


90 mm

FRONT

130 mm

# iConTank

A battle tank controlled by iPod touch, iPhone or iPad, fire and shoot!



Welcome to Woddontoys

Congratulations on your purchase and welcome to Woddontoys! The iConTank is controlled by iPod touch, iPhone or iPad. They have fully maneuverable gripping tracks and 180° swivel turret for engaging battle with another enemy tank. With iConTank, you control the battle!

Warning with regard to placing the product

- Do not use this product in an environment that is with extreme heat or cold, dust or damp.
- Avoid placing the product in an area that is not properly ventilated; do not cover and place the product on carpeting or similar surfaces.
- Do not expose the product to direct sunlight, fire, or other sources of heat that have an extreme effect on the temperature.

Caution

- Recommended for children over 8 years old.
- Recommended for outdoor and indoor.
- Do not disassemble the tank privately. It will damage the tank.
- Do not crash the tank into the wall. Any damage caused by the crash is not covered by the product quality guarantee policy.


FCC Warning:

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference, and
  - (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.

1. Specification

Driving time: 120-180 minutes  
Control distance: 6-10 m  
Battery type: AA alkaline battery  
Size: 247 mm\*88 mm\*77 mm  
Weight: 210 g

2. Getting to know iConTank

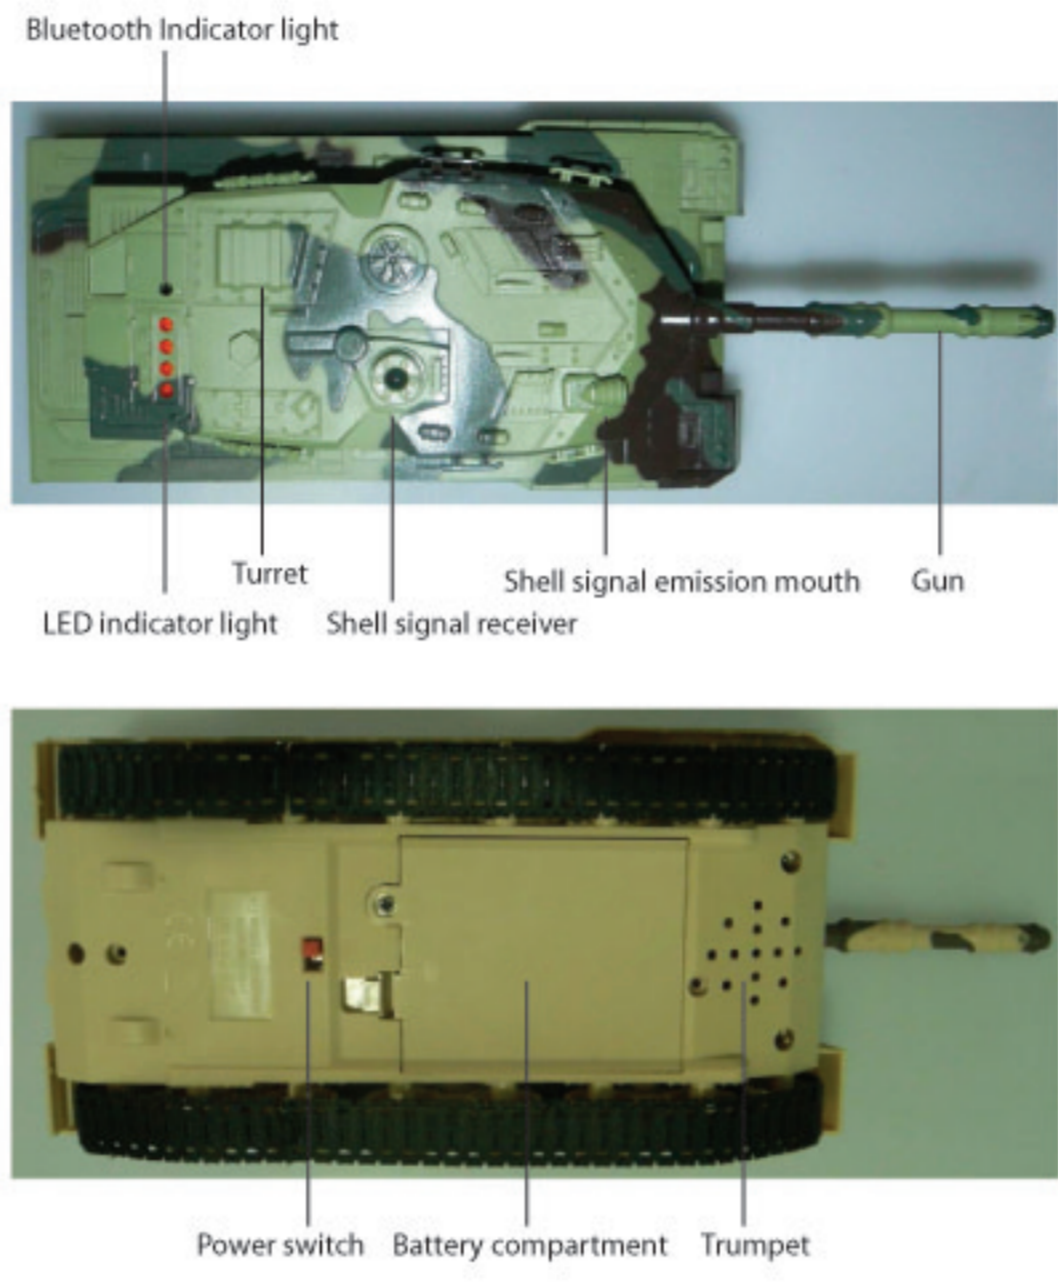

4. Install battery

iConTank is powered by the 3 AA alkaline batteries. When driving iConTank, installing the 3 AA alkaline batteries is first.

- Slide out the battery compartment cover.
- Use only batteries recommended in this manual. Ensure the batteries are installed with the correct polarity.

PLEASE RETAIN THIS INFORMATION FOR FURTHER REFERENCE. Always:


- Make sure battery compartment is secure.
- Use batteries of the correct size and type.
- Install batteries correctly by observing the positive and negative marks on the battery and compartment.
- Replace a whole set of batteries at one time.
- Remove dead batteries from iConTank.
- Remove batteries from iConTank that will not be used again for a long time.
- Batteries should be installed under adult supervision.

Never:

- Mix different types of batteries.
- Mix old and new batteries.
- Dispose of batteries in a fire.
- Attempt to recharge ordinary batteries.

5. Driving instruction


1) Download software



Go to App store


Search, download and install 'iConTank'

2) Connecting iPod touch, iPhone or iPad with the tank

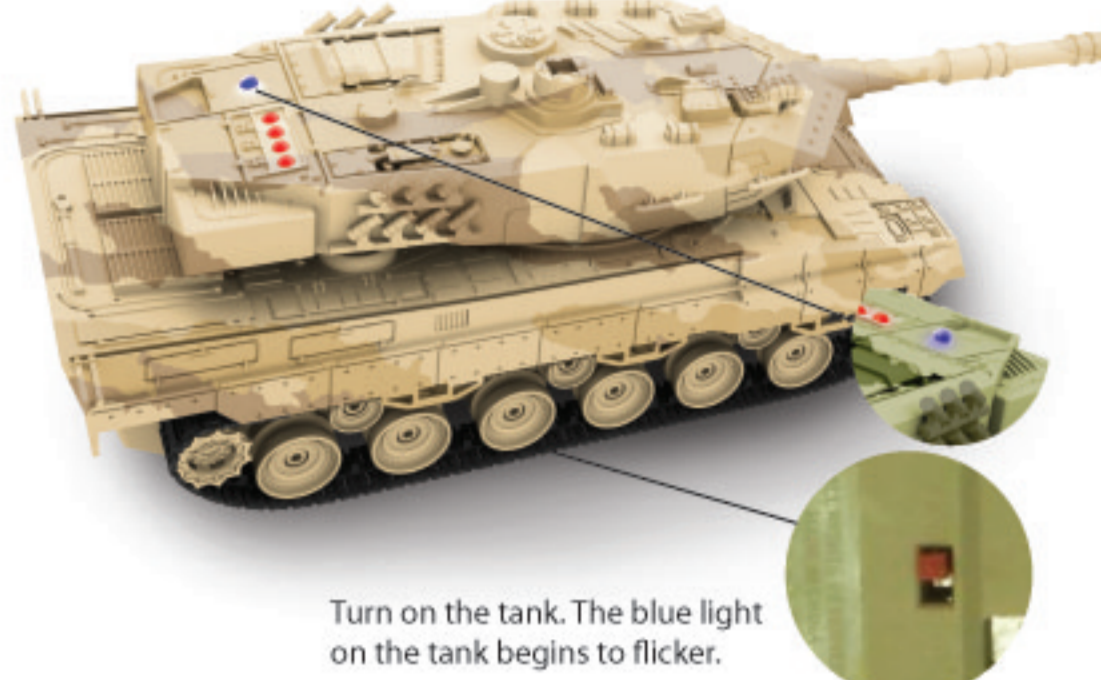

Turn on the tank. The blue light on the tank begins to flicker.

Turn on the tank. The BLUE Indicator light on the tank begins to flicker. Note: If the power switch of tank is on and the 4 red LED indicator lights on the tank are flickering, please switch off the tank and change the batteries.



Open Bluetooth of iPod touch, iPhone or iPad.

For more information and tips please visit our website or email us.


www.woddontoys.com  
service@woddontoys.com

Bluetooth

Note: When the tank is turned on, it will automatically search the last connected device and then connect it. If the device you own is not the last one, it will take 15 seconds to search iConTank. If still fail in connection, please make sure the last device is off and out of Bluetooth control area.

Note: The blue light on the tank should be on in blue continuously. This means the connection succeeds.

Note: When you control the tank with iPod touch, iPhone or iPad, please keep the Bluetooth module iPod touch, iPhone or iPad exposed. If not, the signal may be disturbed. The following gesture pictures are for your reference.




Bluetooth module area (Opposite the power switch of iPod touch, iPhone or iPad)

The proper gesture

The improper gesture


1. Start

2. Play

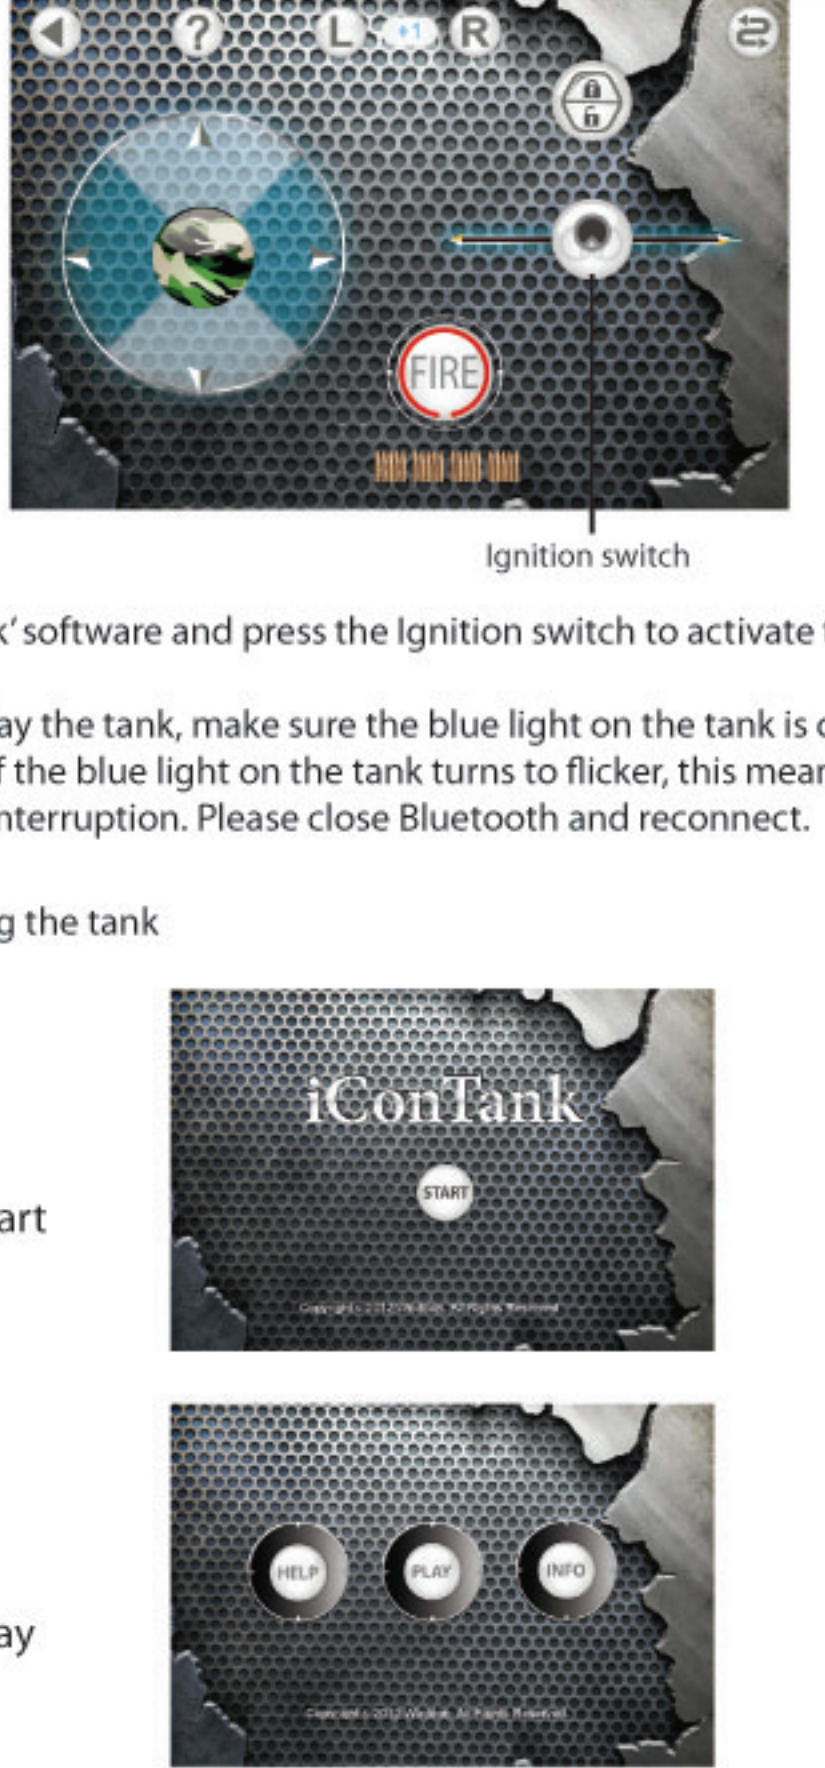


3. Select the mode

Choose any mode to control iConTank, the default setting is for two-hand operation. You might easily learn to master iConTank by learning the buttons below.

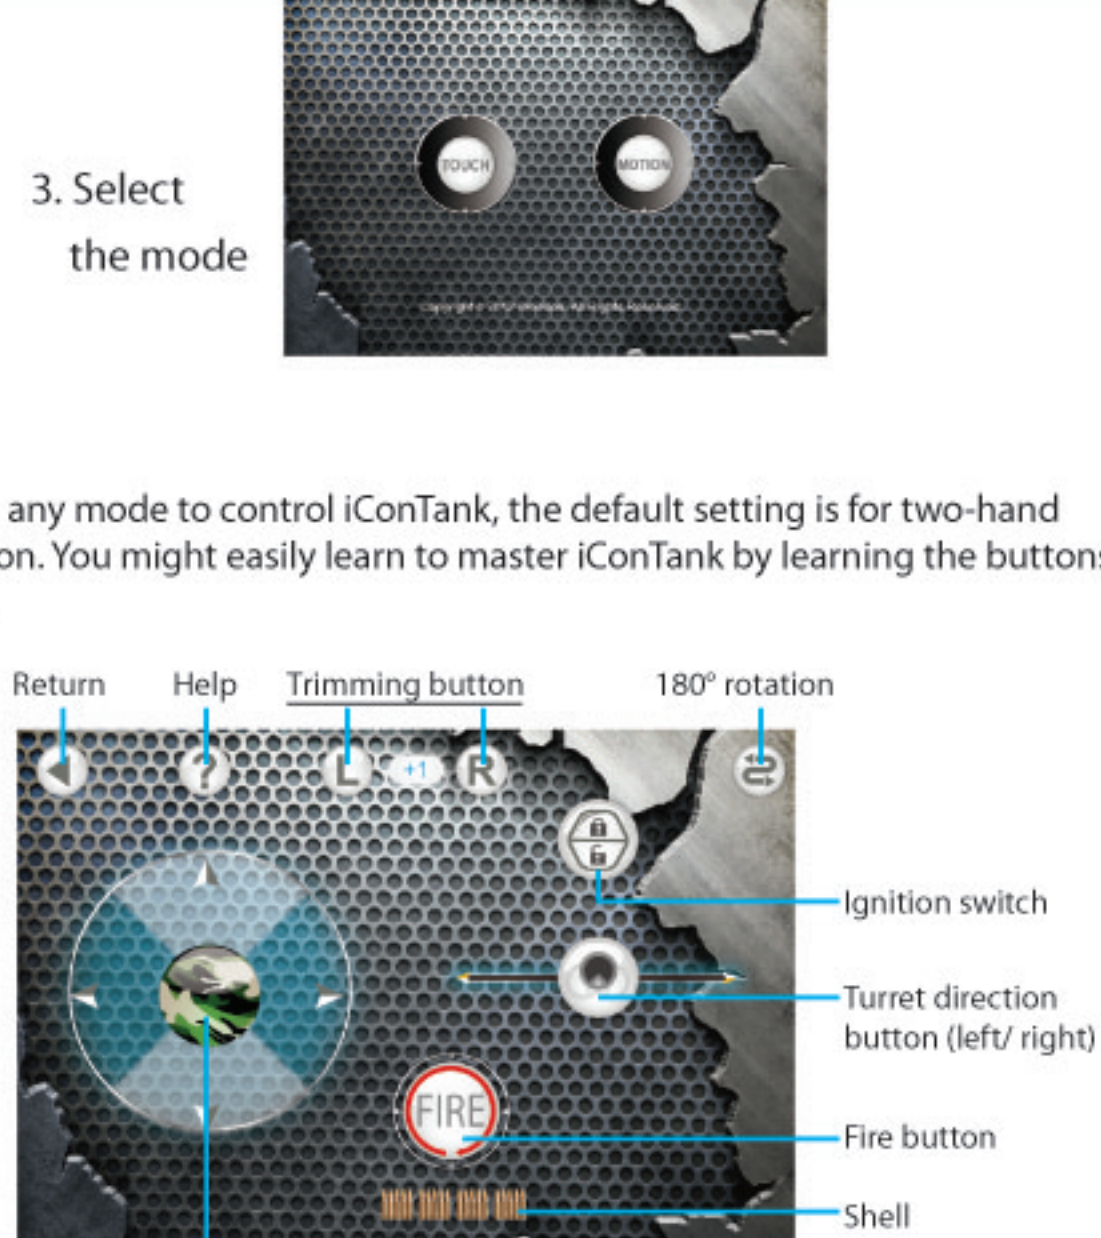

Note:


1. Trimming button: Press 'L' if iConTank spins right. Press 'R' if iConTank spins left.

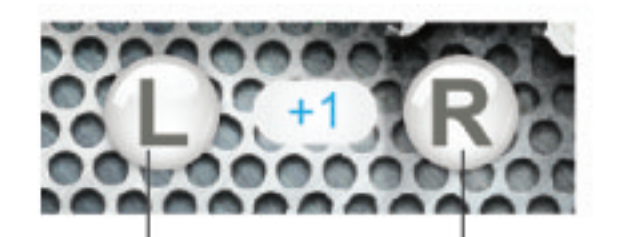

2. Fire button: Press 'FIRE'; iConTank can fire shells.


3. Shell: You have 20 shells from the very beginning. You can either fire one by one or fire continuously. If the shells run out, it takes you 20 seconds to restore fire.

4. Turret direction button (left/ right)

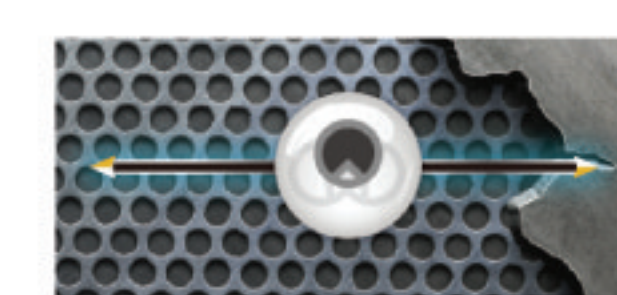

6. Combat function instruction

- Switch on the tank.
- Connect the tank to iPod touch, iPhone or iPad.
  - Connect the tank A to device A (iPod touch, iPhone or iPad).
  - Connect the tank B to device B (iPod touch, iPhone or iPad).Do not connect different tanks and devices at the same time, in case of misconnection.
- Press 'FIRE': When the tank "fires", accompanied with sound effects, the numbers of shells reduce one accordingly.
- When the tank fires shells, its body shakes forward and backward because of the recoil force.
- When the tank is shot, its body shakes left and right. During that period, the tank is out of control by iPod touch, iPhone or iPad. When the hit number is up to 4, the tank turns a circle quickly and stops, and the 4 LED indicator lights on the top of the tank quickly flicker. It means that the tank is defeated and cannot be controlled by iPod touch, iPhone or iPad anymore. Only by restarting the tank can recover the battling function.
- You have 20 shells from the very beginning. You can either fire one by one or fire continuously. There's an interval of 3 seconds between each shell. If the shells run out, it takes you 20 seconds to restore fire.
- In order to have enough time to run away, the tank is set to be not able to receive the shell signal in 2 seconds after it is fired.

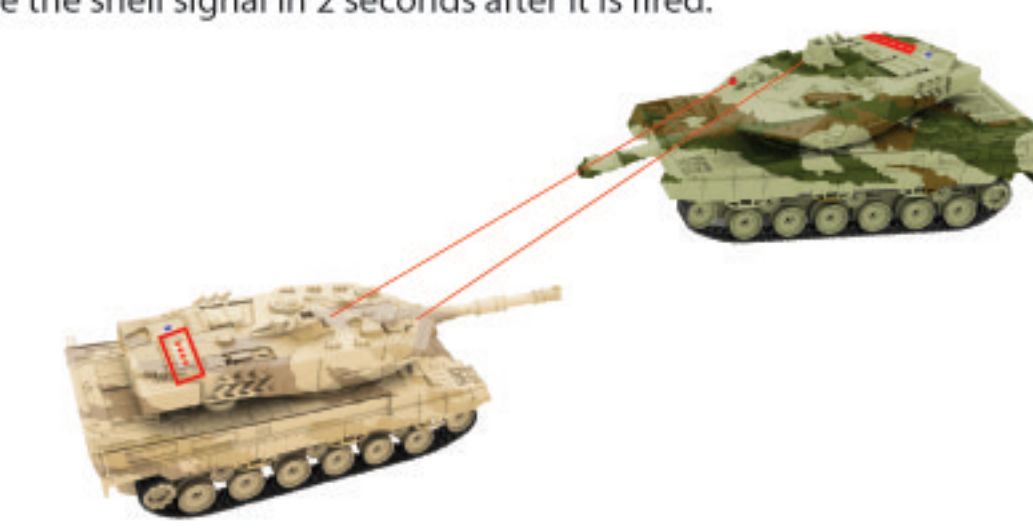

7. Playing tips

- You can enjoy a driving time of 2-3 hours with fresh batteries.
- The control distance of the tank is 6-10 meters. You need to keep the tank within the control area.

8. Environment

For user who is willing to protect the environment.

The consumer has a significant role to play in reducing the impact of waste electrical and electronic equipment in the environment, through re-using or recycling such equipment.

Some of the components used in electrical and electronic equipment may contain hazardous substances that can damage the environment and present a risk to human health if not properly disposed of.

Battery contains substances that may pollute the environment. Do not throw away empty battery with the normal waste, but dispose of them at an official collection point for the battery. Always remove the battery before you discard and hand in the appliance at an official collection point.

Troubleshooting

Problem	Possible cause	Solution
Open Bluetooth of smartphone, but can not search "iConTank".	Power switch of the tank is off. The tank is connected by other device. The battery of the tank is exhausted.	Turn on the tank. Find other device and close the connection. Restart the tank and reconnect in another place. Install new batteries to the tank.
Fails to connection between Bluetooth and tank.	The tank is connected by other device. The Bluetooth connects to the previously used device.	Find other device and close the connection. Restart the tank and reconnect in another place. Reopen Bluetooth and restart the tank, set up the connection again.

Can not open the operating interface of the software.	The Bluetooth is not connected. Something wrong with smartphone.	Open Bluetooth and connect. Restart smartphone or change another smartphone.
Can not play the tank.	The battery of tank is exhausted.	Install new batteries to the tank.
The tank is driving slowly.	The tank is not connected by the smartphone. The battery of tank is exhausted.	Set up the connection. Install new batteries to the tank.
The tank spins.	Trimming adjustment	If the tank spins left, Turn the trimmer to right. If the tank spins right, turn the trimmer to left.
Can not control the tank.	Other strong radio wave or controller disturbs your smartphone control. The tank drives out of the control area. The battery of tank is exhausted.	Drive the tank in an environment without interference. Drive the tank within the control area. Install new batteries to the tank.

Note: During your driving, the connection between tank and your device fail which cannot be resolved by the troubleshooting, please turn off the tank and your device, and then reopened and reconnect then after 15 seconds by following the manual instruction.

BACK

630 mm