

RF Remote control user manual

FCC NOTE:

**THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV
INTERFERENCE CAUSED
BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH
MODIFICATIONS
COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**

1. Pull out the Antenna of Remote Control
2. Press “” key on remote control to execute a “up ” command
meanwhile the LED indicator will light up.
3. Press “” key on remote control to execute a “ down” command
meanwhile the LED indicator will light up.
4. press “” key on remote control to execute a “ stop” command
meanwhile the LED indicator will light up.

Replace battery :

1. Open the back cover of remote control with screwdriver , take out the used battery.
2. Install the new battery ,make sure of “+” ,”-” position in battery chamber.
3. Close the the cover of remote control , tighten it with screws .

FCC Warning Statements for the FCC ID Label Requirement

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
1. This device may not cause harmful interference, and
2. This device must accept any interference received,
including interference that may cause undesired operation.